


Printer Cutter

CJV300-130/160

OPERATION MANUAL

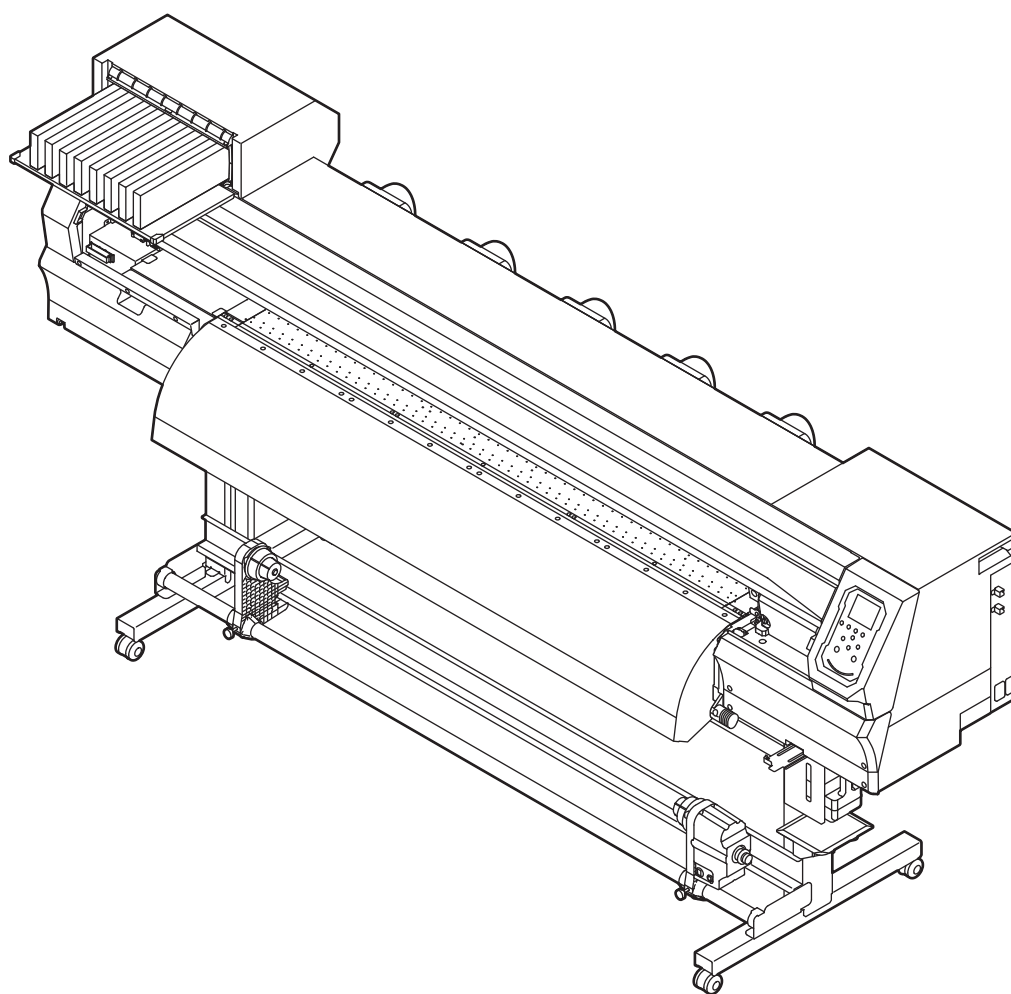

You can also download the latest manual from our website.

MIMAKI ENGINEERING CO., LTD.

URL: <http://eng.mimaki.co.jp/>

D202746-10

Original instructions

OPERATION MANUAL

Table of Contents

CAUTION	vii
DISCLAIMER OF WARRANTY	vii
Requests	vii
FCC Statement (USA)	vii
Interference to televisions and radios	vii
Foreword	vii
About usable ink	vii
On This Operation manual	vii
Safety Precautions	viii
Symbols	viii
Safety interlock	xi
Warning labels	xii
EC DECLARATION OF CONFORMITY	xiv

Chapter 1 Before Use

Moving This Machine	1-2
Where to Install This Machine	1-2
Working Environmental Temperature	1-2
Moving This Machine	1-2
Names of Parts and Functions	1-3
Front Side of the Machine	1-3
Rear Side and Right Side of the Machine	1-4
Operation Panel	1-5
Media sensor	1-7
Carriage	1-7
Cutter blade and slot for cutting	1-7
Capping station	1-7
Pinch Rollers and Grit Rollers	1-7
Connecting Cables	1-8
Connecting USB2.0 Interface Cable	1-8
Connecting the power cable	1-8
Inserting ink cartridges	1-9
Caution in handling of ink cartridges	1-10
Media	1-10
Usable sizes of media	1-10
Caution in handling of medias	1-10
Menu mode	1-11

Chapter 2 Basic Operations

Workflow of printing	2-2
Turning the Power ON/OFF	2-3
Turning the Power ON	2-3
Turning the Power OFF	2-3
Setting a Media	2-4
Adjusting the Head Height	2-4
Adjusting the Position of the Pinch Roller According to the State of a Media	2-5

Maximum Print Area/Cut Area.....	2-8
Notes When Using media Holder	2-8
Setting a roll media.....	2-9
Take-up device.....	2-12
Setting leaf media.....	2-12
Changing the printing origin	2-14
Preparing for the Heaters	2-14
Changing the Temperature Settings for the Heaters.....	2-14
Test Printing	2-15
Test Printing	2-15
Head Cleaning	2-16
About head cleaning.....	2-16
Perform head cleaning depending on the test printing result	2-16
Setting of Media Correction	2-16
Setting of Media Correction	2-16
If the Positions of Dots Shift... ..	2-17
Printing Data	2-17
Starting a Printing Operation	2-17
Stopping a Printing Operation	2-18
Deleting Received Data (Data Clear)	2-18
Cutting a media	2-18
Workflow of cutting	2-19
Installing Tools	2-20
When a Cutter Is Used	2-20
How to Install a Ballpoint Pen.....	2-21
Setting the tool conditions	2-23
Kinds of the Tool Conditions	2-23
Select the tool condition	2-24
Set the Tool Conditions	2-24
Test Cutting	2-25
Cutting Data	2-25
Setting the origin	2-25
Start cutting	2-26
Stopping a Cutting Operation (Data Clear)	2-26
Cutting a media	2-26

Chapter 3 Setup

About SETUP MENU	3-2
SETUP MENU table	3-3
Setting of Media Correction.....	3-4
If the Positions of Dots Shift... ..	3-4
Setting the HEATER.....	3-5
Setting of Logical Seek.....	3-5
Setting of Drying Time	3-6
Setting of Left and Right Margins	3-6
Setting of VacuumFan	3-6
Setting of Feed Speed.....	3-7
Setting Auto Cleaning.....	3-7
Setting Interval wiping	3-7

About MACHINE SETUP MENU	3-8
MACHINE SETUP MENU table	3-9
Setting a AUTO Power-off	3-10
Setting Take-up unit	3-10
Setting the Display of Media Residual.....	3-10
Setting a LANGUAGE	3-11
Setting Time	3-11
Setting Unit (Temperature/ Length).....	3-11
Setting a KEY BUZZER.....	3-11
Setting the CONFIRM. FEED.....	3-11
Set the network	3-12
Setting event mail function	3-12
Initializing the Settings.....	3-16
About NOZZLE CHECK MENU	3-17
INFORMATION MENU table.....	3-17
Printing Check Flow	3-18
Printing Operations at “Nozzle Missing” Judgment and Error Occurrence.....	3-18
Setting the Printing Check.....	3-19
Setting the NOZZLE RECOVERY	3-19
Setting the Judgement Condition	3-19
About INFORMATION MENU	3-20
INFORMATION MENU table.....	3-21
Displaying the Information.....	3-21

Chapter 4 Cutting Function

Cut Out Data with Registration Mark	4-2
The Flow of Cutting out the Registered Data	4-2
Enter the registration mark detection mode	4-2
Precautions in inputting data with registration marks	4-2
Setting of Detecting the Registration Marks	4-5
Method of detecting registration marks	4-6
About CUTTING MENU	4-7
Cutting MENU table.....	4-8
Setting the CUT MODE	4-9
Set the distance compensation	4-9
Find compensation value	4-9
Setting procedures	4-9
perform multiple Cuttings (Copy function)	4-11
SETUP SUB MENU	4-11
Setting the DIVISION CUT	4-11
Make the media without uncut area (OVER CUT function).....	4-13
Other SETUP SUB MENU	4-13
SETUP RESET	4-14
Maintenance Function	4-14
Maintenance of Mark Sensor	4-14
Perform SAMPLE CUT to Find out the Cause of Cutting Error.....	4-17
Cutting a Medium into Multiple Pieces with a Certain Length	4-17
Cutting out Data without Register Marks (ORIGIN OFFSET)	4-18

Chapter 5 Maintenance

Maintenance	5-2
Precautions for Maintenance.....	5-2
About Cleaning Solution	5-2
Cleaning the Exterior Surfaces.....	5-2
Cleaning the Platen	5-2
Cleaning the Media Sensor	5-3
Cleaning the Media Press	5-3
About MAINTENANCE MENU	5-4
MAINTENANCE MENUs at-a-glance	5-5
Maintaining the Capping Station	5-6
Cleaning the Wiper and Cap	5-6
Washing the Head Nozzle	5-7
Washing the Ink Discharge Passage	5-8
When the Machine Is Not Used for a Long Time	5-8
Cleaning the Ink Head and the Area around It	5-10
Nozzle Recovery Function	5-11
Reset the set value.....	5-12
Automatic Maintenance Function	5-13
Setting the Refreshing Intervals	5-13
Setting the Tube Wash Intervals	5-13
Setting the Cleaning Intervals and Type	5-13
Fill up Ink	5-14
White Ink Maintenance	5-14
Replacing consumables	5-15
Replacing the wiper.....	5-15
If a Waste Ink Tank Confirmation Message Appears	5-15
Replacing the waste ink tank before the waste ink tank confirmation message is displayed	5-17
Replacing the Cutter Blade	5-17
Replacing and Adjusting the Cutter Blade	5-18
Replacing the cutter	5-18
Adjusting the Cutter Blade.....	5-18
Replacing the cutter other than supplied one	5-18
Adjusting blade edge of cutter other than supplied one	5-19

Chapter 6 Troubleshooting

Troubleshooting	6-2
Power does not turn on	6-2
The machine does not start printing	6-2
Media get jammed / media is soiled	6-2
The heater's temperature will not rise to the set level	6-3
Image quality is poor	6-3
Nozzle is clogged	6-3
Ink cartridge warning appears	6-3
Warning / Error Messages	6-5
Warning messages.....	6-5
Error messages	6-8

Chapter 7 Appendix

Specifications	7-2
Printer Section Specifications.....	7-2
Cutter Section Specifications	7-2
Common Specifications.....	7-3
Ink specifications	7-4
Setting orders depending on ink type	7-5
Sheet for inquiry	7-6



CAUTION

DISCLAIMER OF WARRANTY

THIS LIMITED WARRANTY OF MIMAKI SHALL BE THE SOLE AND EXCLUSIVE WARRANTY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS, AND MIMAKI NEITHER ASSUMES NOR AUTHORIZES DEALER TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY OR MAKE ANY OTHER WARRANTY OR MAKE ANY OTHER WARRANTY IN CONNECTION WITH ANY PRODUCT WITHOUT MIMAKI'S PRIOR WRITTEN CONSENT.

IN NO EVENT SHALL MIMAKI BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR LOSS OF PROFITS OF DEALER OR CUSTOMERS OF ANY PRODUCT.

Requests

- This Operation manual has been carefully prepared for your easy understanding.
However, please do not hesitate to contact a distributor in your district or our office if you have any inquiry.
- Description contained in this Operation manual are subject to change without notice for improvement.

FCC Statement (USA)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Operation manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

In the case where MIMAKI-recommended cable is not used for connection of this device, limits provided by FCC rules can be exceeded.

To prevent this, use of MIMAKI-recommended cable is essential for the connection of this printer.

Interference to televisions and radios

The product described in this manual generates high frequency when operating.

The product can interfere with radios and televisions if set up or commissioned under improper conditions.

The product is not guaranteed against any damage to specific-purpose radio and televisions.

The product's interference with your radio or television will be checked by turning on/off the power switch of the product.

In the event that the product is the cause of interference, try to eliminate it by taking one of the following corrective measures or taking some of them in combination.

- Change the orientation of the antenna of the television set or radio to find a position without reception difficulty.
- Separate the television set or radio from this product.
- Plug the power cord of this product into an outlet which is isolated from power circuits connected to the television set or radio.

Foreword

Congratulations on your purchase of MIMAKI color ink jet printer "CJV300-130/160" .

"CJV300-130/160" is a color inkjet printer that can print on 1.9m-width media with solvent ink (4-color, 6-color and 8-color) and sublimation dye ink (4-color and 6-color) realizing high image quality.

About usable ink

You can use solvent ink (SS21) and sublimation dye ink (Sb53) for this machine.

On This Operation manual

- This Operation manual is describing the operations and maintenance of "Color inkjet printer CJV300-130/160" (called as this machine hereafter)
- Read this Operation manual carefully and understand them thoroughly to use.
- It is also necessary to keep this Operation manual on hand.
- This Operation manual has been carefully prepared for your easy understanding, however, please do not hesitate to contact a distributor in your district or our office if you have any inquiry.
- Descriptions contained in this Operation manual are subject to change without any notice for improvement.
- In the case when this Operation manual should be illegible due to destruction or lost by fire or breakage, purchase another copy of the Operation manual from our office.
- You can also download the latest manual from our website.

Reproduction of this manual is strictly prohibited.
All Rights Reserved.Copyright
© 2014 MIMAKI ENGINEERING Co., Ltd.









Safety Precautions

Symbols

Symbols are used in this Operation Manual for safe operation and for prevention of damage to the machine. The indicated sign is different depending on the content of caution.

Symbols and their meanings are given below. Please follow these instructions as you read this manual.

Examples of symbols

Meaning	
	Failure to observe the instructions given with this symbol can result in death or serious injuries to personnel. Be sure to read it carefully and use it properly.
	Failure to observe the instructions given with this symbol can result in injuries to personnel or damage to property.
	Important notes in use of this machine are given with this symbol. Understand the notes thoroughly to operate the machine properly.
	Useful information is given with this symbol. Refer to the information to operate the machine properly.
	Indicates the reference page for related contents.
	The symbol "⚠" indicates that the instructions must be observed as strictly as the CAUTION instructions (including DANGER and WARNING instructions). A sign representing a precaution (the sign shown at left warns of hazardous voltage) is shown in the triangle.
	The symbol "⊘" indicates that the action shown is prohibited. A sign representing a prohibited action (the sign shown at left prohibits disassembly) is shown in or around the circle.
	The symbol "⚡" indicates that the action shown must be taken without fail or the instructions must be observed without fail. A sign representing a particular instruction (the sign shown at left instructs to unplug the cable from the wall outlet) is shown in the circle.

Warning for Use



WARNING



- The set of power cables provided with this machine is for use with this machine only, and cannot be used with other electrical devices. Do not use any power cables other than the ones provided with the machine. Failure to observe those instructions may result in fire or electric shocks.
- Take care not to damage, break or work upon the power cable. If a heavy material is placed on the power cable, or if it is heated or pulled, the power cable can break, thus resulting in fire or electric shocks.
- Do not use this machine in an environment where humidity is high or the machine may get wet. Using the machine under such environment may result in fire or electric shock, or cause malfunction.
- Use of the machine under an abnormal condition where it produces smoke or strange smell can result in fire or electric shocks. If such an abnormality is found, be sure to turn off the power switch immediately and unplug the cable from the wall outlet. Check first that the machine no longer produces smoke, and then contact your distributor or a sales office of MIMAKI for repair.
- Never repair your machine by yourself since it is very dangerous for you to do so.
- Never disassemble or remodel the main unit of the machine or the ink cartridge. Disassembly or remodeling can result in an electric shock or breakdown of the machine.
- Take care that no dust or dirt sticks to Media Transfer Surface heaters. Dust and dirt sticking heaters can cause fire.
- Do not use extension cords. Doing so may result in fire or electric shocks.
- Keep the power plug prong clear of any foreign object such as a piece of metal. Failure to do so may result in a fire or electric shocks.
- Do not plug too many leads into a single socket. Doing so may result in fire or electric shocks.
- Do not use the machine if the power cord or plug is damaged. Using the machine with damaged power cord may result in fire or electric shocks. Contact your service representative for replacement cord.
- Do not handle the power plug with wet hands. Doing so may result in electric shocks.
- Grasp by holding the plug itself when removing the power plug from wall outlet, and never hold by the cord. Holding and pulling the cord may damage the cord, leading to fire or electric shocks.



WARNING



Hazardous Moving Parts

- Keep Fingers and Other Body Parts Away
- If a foreign object such as a small piece of metal or a liquid such as water gets inside the machine, turn off the machine and unplug the power cord immediately, then consult your service representative. Continuing to use the machine without proper maintenance or repair may result in fire or electric shocks.



- Do not use a flammable spray or solvent inside or around the machine. Doing so may result in fire or electric shocks.
- Do not place a vase, flower pot, water glass, container with liquid such as water or chemicals inside, or small metallic object near or on top of this machine. Liquid or foreign object may get inside the machine, leading to fire or electric shocks.

Precautions in Use



CAUTION

Handling of the power cable



- Connect to a socket-outlet with determinate polarity.
- For Inlet 1 and 2, be sure to supply power from the outlet of the same voltage.
- for PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Unplug the cord from the wall outlet and remove dust from the power plug periodically, at least once a year. Failure to do so may result in fire or electric shocks.
- Do not use the machine unless it is connected to a power supply that satisfies the displayed voltage condition.
- Check the voltage of the wall outlet and the capacity of the circuit breaker before you plug the power cords. Plug each power cord to different outlet that has independent circuit breaker. If you plug more than one power cord to wall outlets that share the same circuit breaker, the power may be cut off by the breaker.

Power supply



- Leave the breaker turned ON.
- Do not turn off the main power switch on the right side of this machine.

Heater



- Do not spill liquid on the Media Transfer Surface as this may cause failure of the heater or firing.
- Do not touch Media Transfer Surface heaters with bare hand while it is hot; otherwise, you can get burned.

Note on maintenance



- When cleaning the ink-station or the heads, make sure to wear the attached goggles and gloves.



- The gloves supplied with the machine are disposable. When all the gloves are expended, purchase an equivalent product on the market.



- Keep ink away from an open flame. Also keep the room well ventilated when you use or handle ink.

Be careful with the movable parts



- Do not touch the rolling grit roller; otherwise, you may hurt your fingers or tear off your finger nails.



- Keep your head and hands away from any moving parts during cutting (plotting) operation; otherwise, you may get your hair caught in the machine or get injuries.
- Wear proper clothes. (Do not wear loose-fit clothes or accessories). Bind a long hair.

**CAUTION****Caution with cutters**

- Do not touch the cutter blade, which is very sharp.
- Do not shake or swing the cutter holder; otherwise, the blade may come off.

Handling of ink

- Keep ink away from an open flame. Also keep the room well ventilated when you use or handle ink.
- If you get ink in your eyes, immediately wash your eyes with a lot of clean water for at least 15 minutes. In doing so, also wash eyes to rinse ink away completely. Then, consult a doctor as soon as possible.
- If anyone drinks ink by mistake, keep him or her quiet and see a doctor immediately. Do not allow him or her to swallow the vomit. Then contact the emergency number written in MSDS.
- If you inhale a lot of vapor and feel bad, immediately move to a location of fresh air and then keep yourself warm and quiet. Then, consult a doctor as soon as possible.
- Store ink cartridges in a place that is out of the reach of children.
- If the ink adheres to your skin, use a large amount of water and soap or special detergent for skin to remove the ink.

CAUTIONS and NOTES**Warning****Clump lever**

- Never raise the lever during printing. Raising the lever will abort printing.

Protection of media from dust

- Store media in a bag. Wiping off dust accumulated on media will adversely affect the media due to static electricity.
- When leaving the workshop after the working hours, do not leave any media on the roll hanger. If any media is left on the roll hanger, it can get dusty.

Periodic replacement parts

- Some parts of this machine must be replaced with a new one periodically by service personnel. Be sure to make a contract with your distributor or dealer for After sale service to ensure a long life of your machine.

Disposition of this machine

- Consult your sales or service representative for proper disposal of this machine. Otherwise, commission an industrial waste disposal company.

Protection of media from dust

- Store media in a bag. Wiping off dust accumulated on media will adversely affect the media due to static electricity.
- When leaving the workshop after the working hours, do not leave any media on the roll hanger. If any media is left on the roll hanger, it can get dusty.

Handling of ink cartridges

- The safety evaluation of this machine assumes that the ink recommended by this company is used. For safe usage of this machine, use the ink recommend by this company
- Never refill the ink pack and white ink cartridge with ink. Refilled ink cartridge can cause a trouble. Remember that MIMAKI assumes no responsibility for any damage caused by the use of the ink cartridge replenished with ink.
- If the ink cartridge is moved from a cold place to a warm place, leave it in the room temperature for three hours or more before using it.
- Open the ink cartridge just before installing it in the machine. If it is opened and left for an extended period of time, normal printing performance of the machine may not be ensured.
- Make sure to store ink cartridges in a cool and dark place.
- Store ink cartridges and waste ink bottle in a place that is out of the reach of children.
- Be sure to thoroughly consume the ink in the ink cartridge, once it is opened, within three months. If an extended period of time has passed away after opening the cartridge tank, printing quality would be poor.
- Neither pound the cartridge nor shake it violently, as doing so can cause leakage of ink.
- Do not touch or stain the contacts of the ink cartridge, as doing so may cause damage to the print circuit board.
- Consult your sales or service representative for proper disposal of ink cartridge, ink pack, and waste ink. When you dispose them by yourself, follow the regulations stipulated by the industrial waste disposer or the country or region you live in
- Make sure that you shake the white and silver ink cartridges before printing.



Warning

Protection of media from dust

- Store media in a bag. Wiping off dust accumulated on media will adversely affect the media due to static electricity.
- When leaving the workshop after the working hours, do not leave any media on the roll hanger. If any media is left on the roll hanger, it can get dusty.

Notes on maintenance

- It is strongly recommended to use the machine in a room that is not dusty.
- Keep the front cover closed even when the machine is not printing. If not, dust can accumulate on the nozzles in the heads.
- Dust in the heads can also cause drops of ink to fall suddenly down on the media during printing. In such a case, be sure to clean up the heads. (P.5-10)
- When cleaning the ink-station or the heads, make sure to wear the attached gloves. Further, when the solvent ink is used, it is necessary to wear the attached goggles.
- Perform wiping (removal of dust and paper powder) of the capping station and wiper frequently.

Handling of media


- Use media recommended by MIMAKI to ensure reliable, high-quality printing.
- Set the heater temperature to meet the characteristics of the media. (Model with a built-in heater)
Set the temperature of the Pre-heater, Print heater and Post-heater according to the type and characteristics of the media used. Automatic temperature setting can be made on the operation panel by setting the profile on the dedicated RIP. For setting on the RIP, refer to the instruction manual for your RIP.
- Pay attention to the expansion and contraction of the media. Do not use media immediately after unpacking. The media can be affected by the room temperature and humidity, and thus it may expand and contract. The media have to be left in the atmosphere in which they are to be used for 30 minutes or more after unpacked.
- Do not use curled media.
The use of curled media can not only cause a media jam but also affect print quality.
Straighten the sheet of media, if significantly curled, before using it for printing. If a regular-sized coated sheet of media is rolled and stored, the coated side has to face outside.
- Do not leave the media with the heater ON for a long time.

Cautions on Installation



CAUTION

A place exposed to direct sunlight

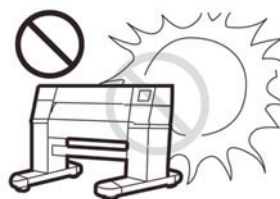

On an inclined surface



A place that vibrates



A place exposed to direct air flow from an air conditioner or the like.




A place where temperature or humidity varies significantly




- Use the machine under the following environmental conditions:
- Operating environment:
20 to 30 °C
(68 to 86 °F)
35 to 65 % (Rh)

Around a place where fire is used

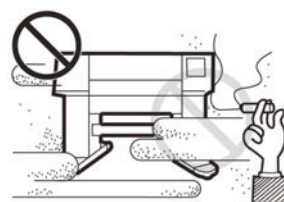



Safety interlock



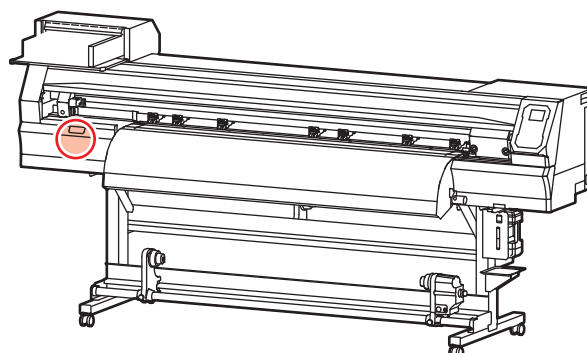





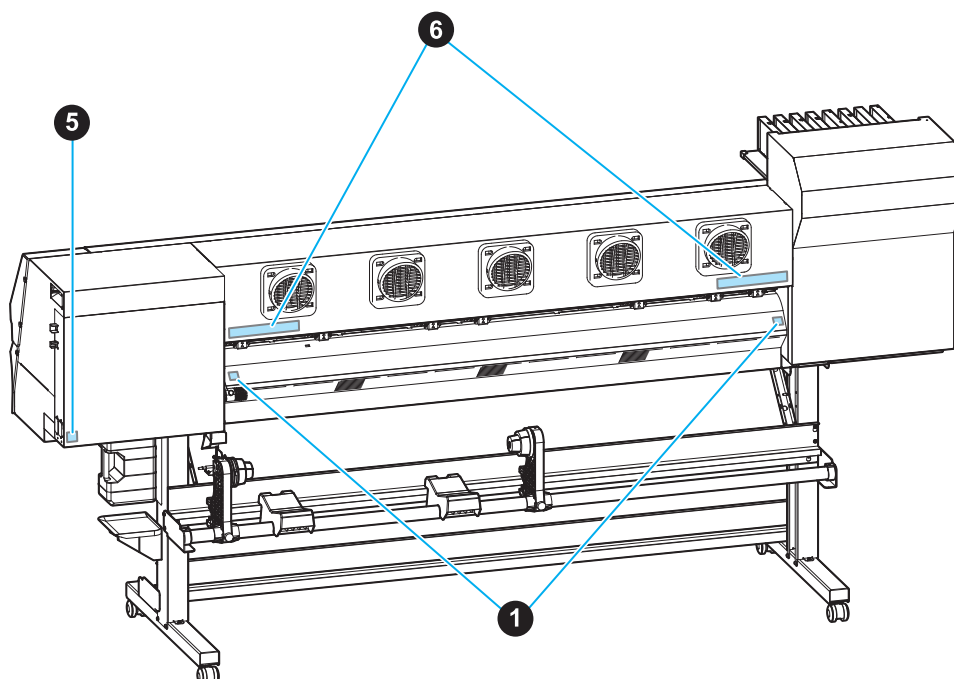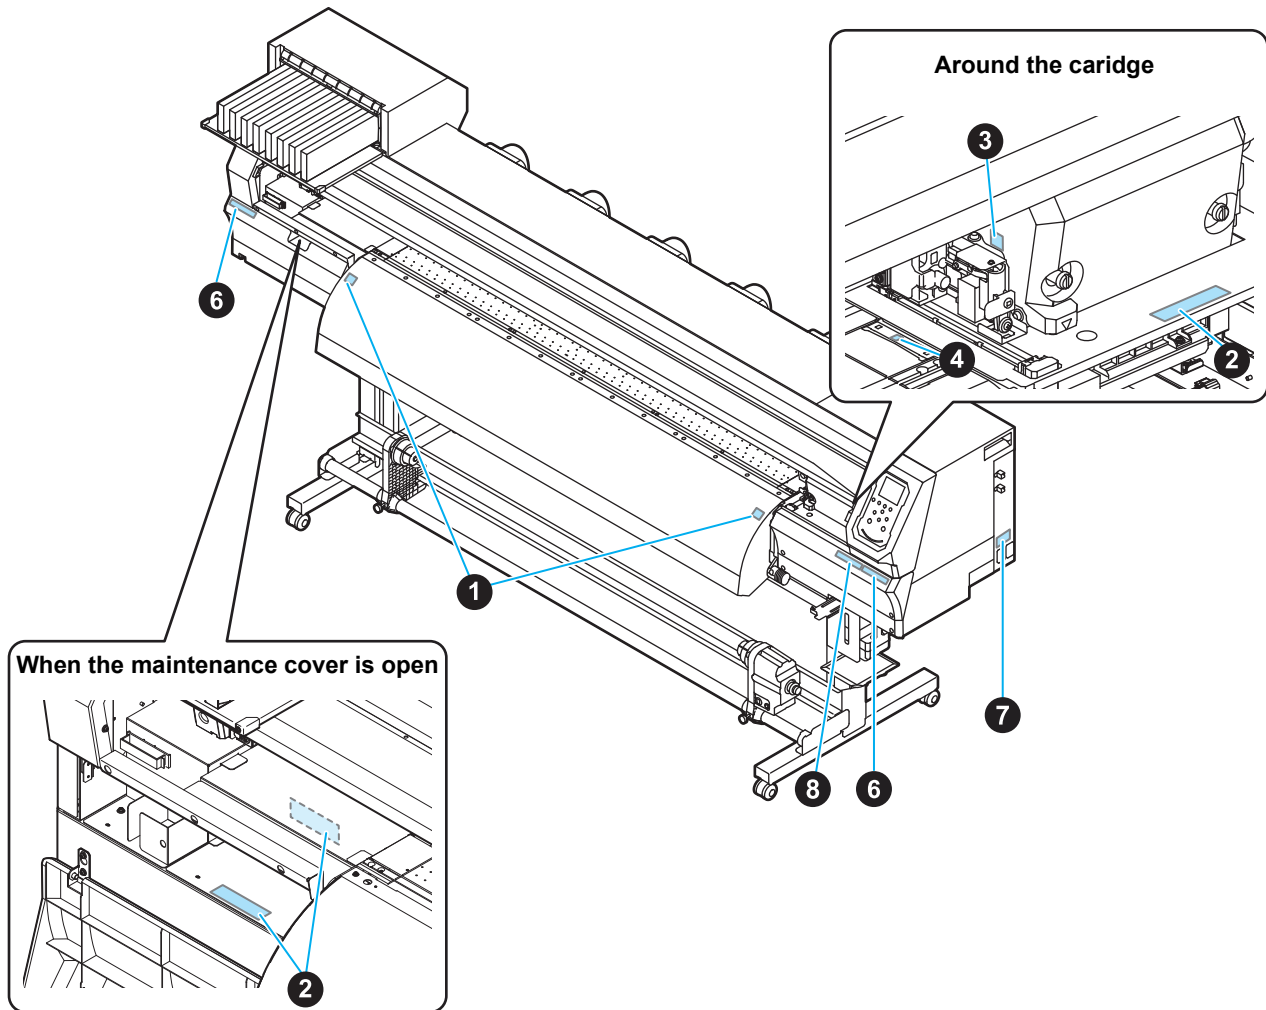


























This machine is equipped with interlocks to terminate the operation for your safety when the cover opens during printing etc. (red circle parts in the figure below).

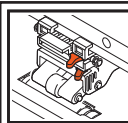

Warning labels

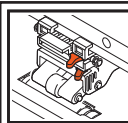Warning labels are stuck on the machine. Be sure to fully understand the warning given on the labels. If a warning label is illegible due to stains or has come off, purchase a new one from a distributor or our sales office.

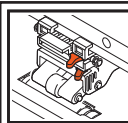

No.	Reorder	Label																		
1	M903239																			
2	M903330																			
3	M903405																			
4	M906144																			
5	M907935																			
6	M905811	<table border="1"><tr><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>警告</td><td>警告</td><td>WARNING</td><td>WAARSCHUWING</td><td>AVERTISSEMENT</td><td></td></tr><tr><td>手指和身体请勿靠近运转部位，以免造成危险</td><td>危険な稼働部 指や体を近づけないように</td><td>-HAZARDOUS MOVING PARTS- Keep fingers and other body parts away.</td><td>GEFÄHRLICHE BEWEGLICHE TEILE Finger und andere Körperteile fernhalten.</td><td>PIECES MOBILES DANGEREUSES Doigts et autres parties du corps sont hors de portée.</td><td></td></tr></table>							警告	警告	WARNING	WAARSCHUWING	AVERTISSEMENT		手指和身体请勿靠近运转部位，以免造成危险	危険な稼働部 指や体を近づけないように	-HAZARDOUS MOVING PARTS- Keep fingers and other body parts away.	GEFÄHRLICHE BEWEGLICHE TEILE Finger und andere Körperteile fernhalten.	PIECES MOBILES DANGEREUSES Doigts et autres parties du corps sont hors de portée.	
																				
警告	警告	WARNING	WAARSCHUWING	AVERTISSEMENT																
手指和身体请勿靠近运转部位，以免造成危险	危険な稼働部 指や体を近づけないように	-HAZARDOUS MOVING PARTS- Keep fingers and other body parts away.	GEFÄHRLICHE BEWEGLICHE TEILE Finger und andere Körperteile fernhalten.	PIECES MOBILES DANGEREUSES Doigts et autres parties du corps sont hors de portée.																
7	M906031	<table border="1"><tr><td rowspan="3"> WARNING AVERTISSEMENT 警告</td><td>This unit has two power cords. For removal of all power, disconnects both cords.</td></tr><tr><td>Cet appareil a deux cordons secteur. Pour le mettre hors tension, débranchez ces deux cordons secteur.</td></tr><tr><td>本機は、2本の電源ケーブルがある。電源をオフする場合、 2本とも抜くこと。</td></tr></table>	 WARNING AVERTISSEMENT 警告	This unit has two power cords. For removal of all power, disconnects both cords.	Cet appareil a deux cordons secteur. Pour le mettre hors tension, débranchez ces deux cordons secteur.	本機は、2本の電源ケーブルがある。電源をオフする場合、 2本とも抜くこと。														
 WARNING AVERTISSEMENT 警告	This unit has two power cords. For removal of all power, disconnects both cords.																			
	Cet appareil a deux cordons secteur. Pour le mettre hors tension, débranchez ces deux cordons secteur.																			
	本機は、2本の電源ケーブルがある。電源をオフする場合、 2本とも抜くこと。																			
8	M905935	<table border="1"><tr><td rowspan="3"></td><td> CAUTION</td><td> 注意</td></tr><tr><td>Do not move 2 levers of the pinch roller with hands. Or malfunctions may occur.</td><td>ピンチローラーの2つのレバーは、手動で動かさないこと。 誤作動の原因になる。</td></tr><tr><td></td><td></td></tr></table>		 CAUTION	 注意	Do not move 2 levers of the pinch roller with hands. Or malfunctions may occur.	ピンチローラーの2つのレバーは、手動で動かさないこと。 誤作動の原因になる。													
	 CAUTION	 注意																		
	Do not move 2 levers of the pinch roller with hands. Or malfunctions may occur.	ピンチローラーの2つのレバーは、手動で動かさないこと。 誤作動の原因になる。																		

EC DECLARATION OF CONFORMITY

We hereby declare that the following our product conforms with the essential health and safety requirements of EC Directives.

Product	Inkjet Printer
Model No.	CJV300-160 CJV300-130
Manufacturer	MIMAKI ENGINEERING CO.,LTD. 2182-3, Shigeno-otsu, Tomi, Nagano, 389-0512, JAPAN
Authorised Compiler in the Community	MIMAKI EUROPE B.V. Stammerdijk 7E 1112 AA Diemen, The Netherlands
Directives	Machinery Directive2006/42/EC Low Voltage Directive2014/35/EU EMC Directive2014/30/EU RoHS Directive2011/65/EU

The above product has been evaluated for conformity with above directives using the following European standards. The technical construction file (TCF) for this product is retained at the above Manufacturer's location.

Machinery Directive / Low Voltage Directive	ENISO12100:2010, EN60204-1: 2006+A1,EN60950-1: 2006+A11+A1+A12
EMC Directive	EN55022:2010, EN61000-3-2: 2006+A1+A2, EN61000-3-3:2008, EN55024:2010
RoHS Directive	EN50581:2012

Chapter 1

Before Use



This chapter

describes the items required to understand before use, such as the name of each part of the machine or the installation procedures.

Moving This Machine	1-2	Connecting Cables.....	1-8
Where to Install This Machine	1-2	Connecting USB2.0 Interface Cable	1-8
Working Environmental Temperature	1-2	Connecting the power cable	1-8
Moving This Machine	1-2	Inserting ink cartridges	1-9
Names of Parts and Functions.....	1-3	Caution in handling of ink cartridges	1-10
Front Side of the Machine	1-3	Media	1-10
Rear Side and Right Side of the Machine ...	1-4	Usable sizes of media	1-10
Operation Panel	1-5	Caution in handling of medias	1-10
Media sensor	1-7	Menu mode	1-11
Carriage	1-7		
Cutter blade and slot for cutting	1-7		
Capping station	1-7		
Pinch Rollers and Grit Rollers	1-7		


Moving This Machine

Where to Install This Machine

Secure a suitable installation space before assembling this machine.

The place of installation must have enough space for not only this machine itself, but also for the printing operation.

Model	Width	Depth	Height	Gross weight
CJV300-130	2525mm	700mm	1392mm	157kg
CJV300-160	2775mm	700mm	1392mm	168kg

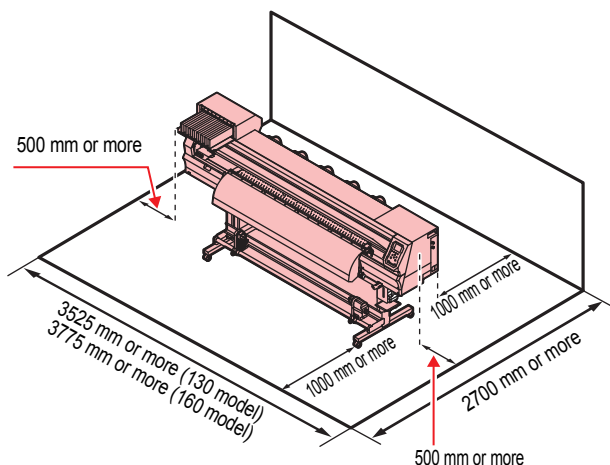

Working Environmental Temperature

Use this machine in an environment of 20 to 30°C to ensure reliable printing.

Moving This Machine

Move this machine according to the following steps when this machine needs to be moved on the same step-free floor.




- When the machine is moved to any place other than on the same step-free floor, contact your distributor or our service office. If you move it by yourself, failure or damage may occur. Be sure to request your distributor or our service office to move this machine.



- When moving this machine, take care that it does not receive a significant impact.
- Be sure to lock the casters after moving of this machine.

1


Remove the caster blocks.

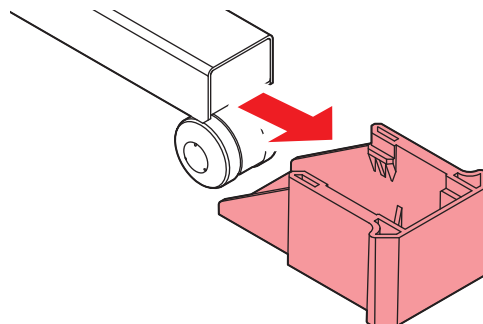

2


Move this machine as shown in the figure.

- For safety, be sure to operate it with 4 people or more.
- Do not push the cover to move this machine since the cover may be broken.

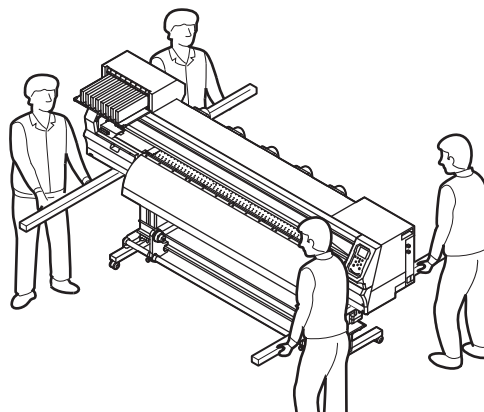

3

Reinstall the caster blocks.

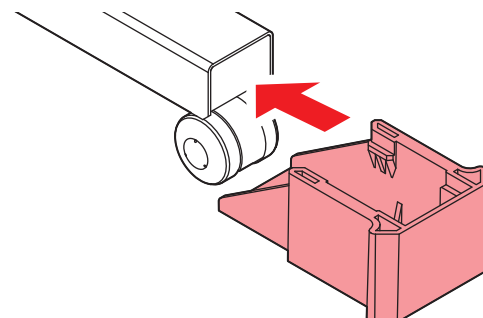

Names of Parts and Functions

Front Side of the Machine

Ink cartridges

Each cartridge contains an ink of a particular color.

Cartridge protection cover

This prevents an injury or breakage of the machine due to a protrusion of the ink cartridge. (It is located under the ink cartridge.)

Clamp lever (front)

Moves the pinch rollers up and down to hold or release the media.

Carriage

Move the print head unit from side to side.

Operation panel

This panel has the operation keys required for operating the machine and the LCDs for displaying setting items, etc.

CleaningSolutionCartridge slot

Insert the cleaning solution cartridge.

Waste ink tank

Waste ink gathers in this tank.

Stand

Supports the main body of the machine. It is provided with casters that are used to move this machine.

Take-up device


Automatically winds up the roll media printed.

Platen


The printed media is sent out, sliding on the platen.

Maintenance cover

Open the cover in maintenance. Even when the power switch is off, keep all covers closed.

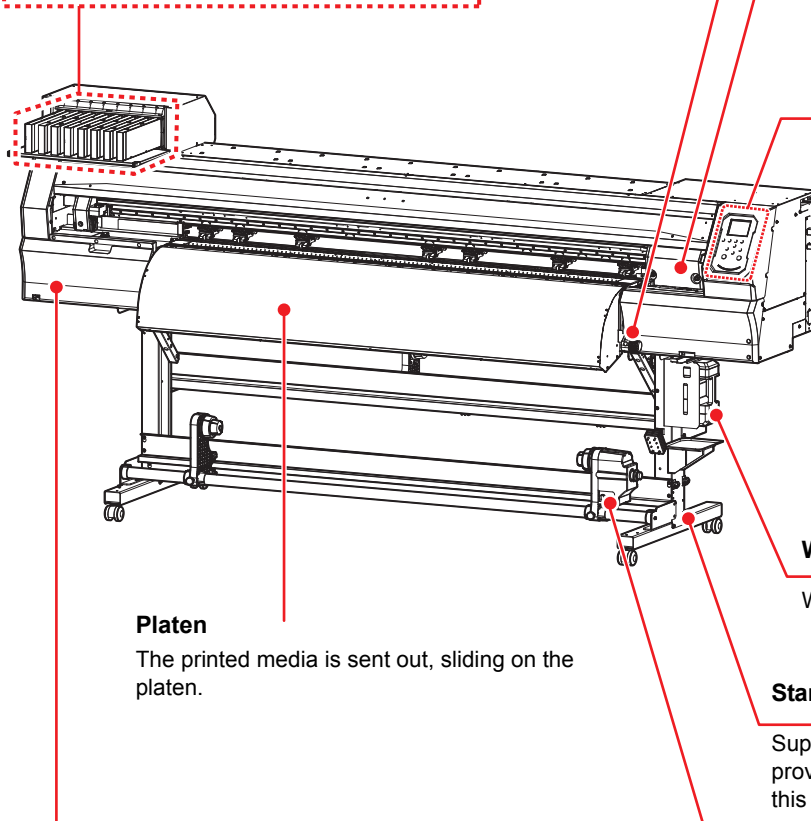

Rear Side and Right Side of the Machine

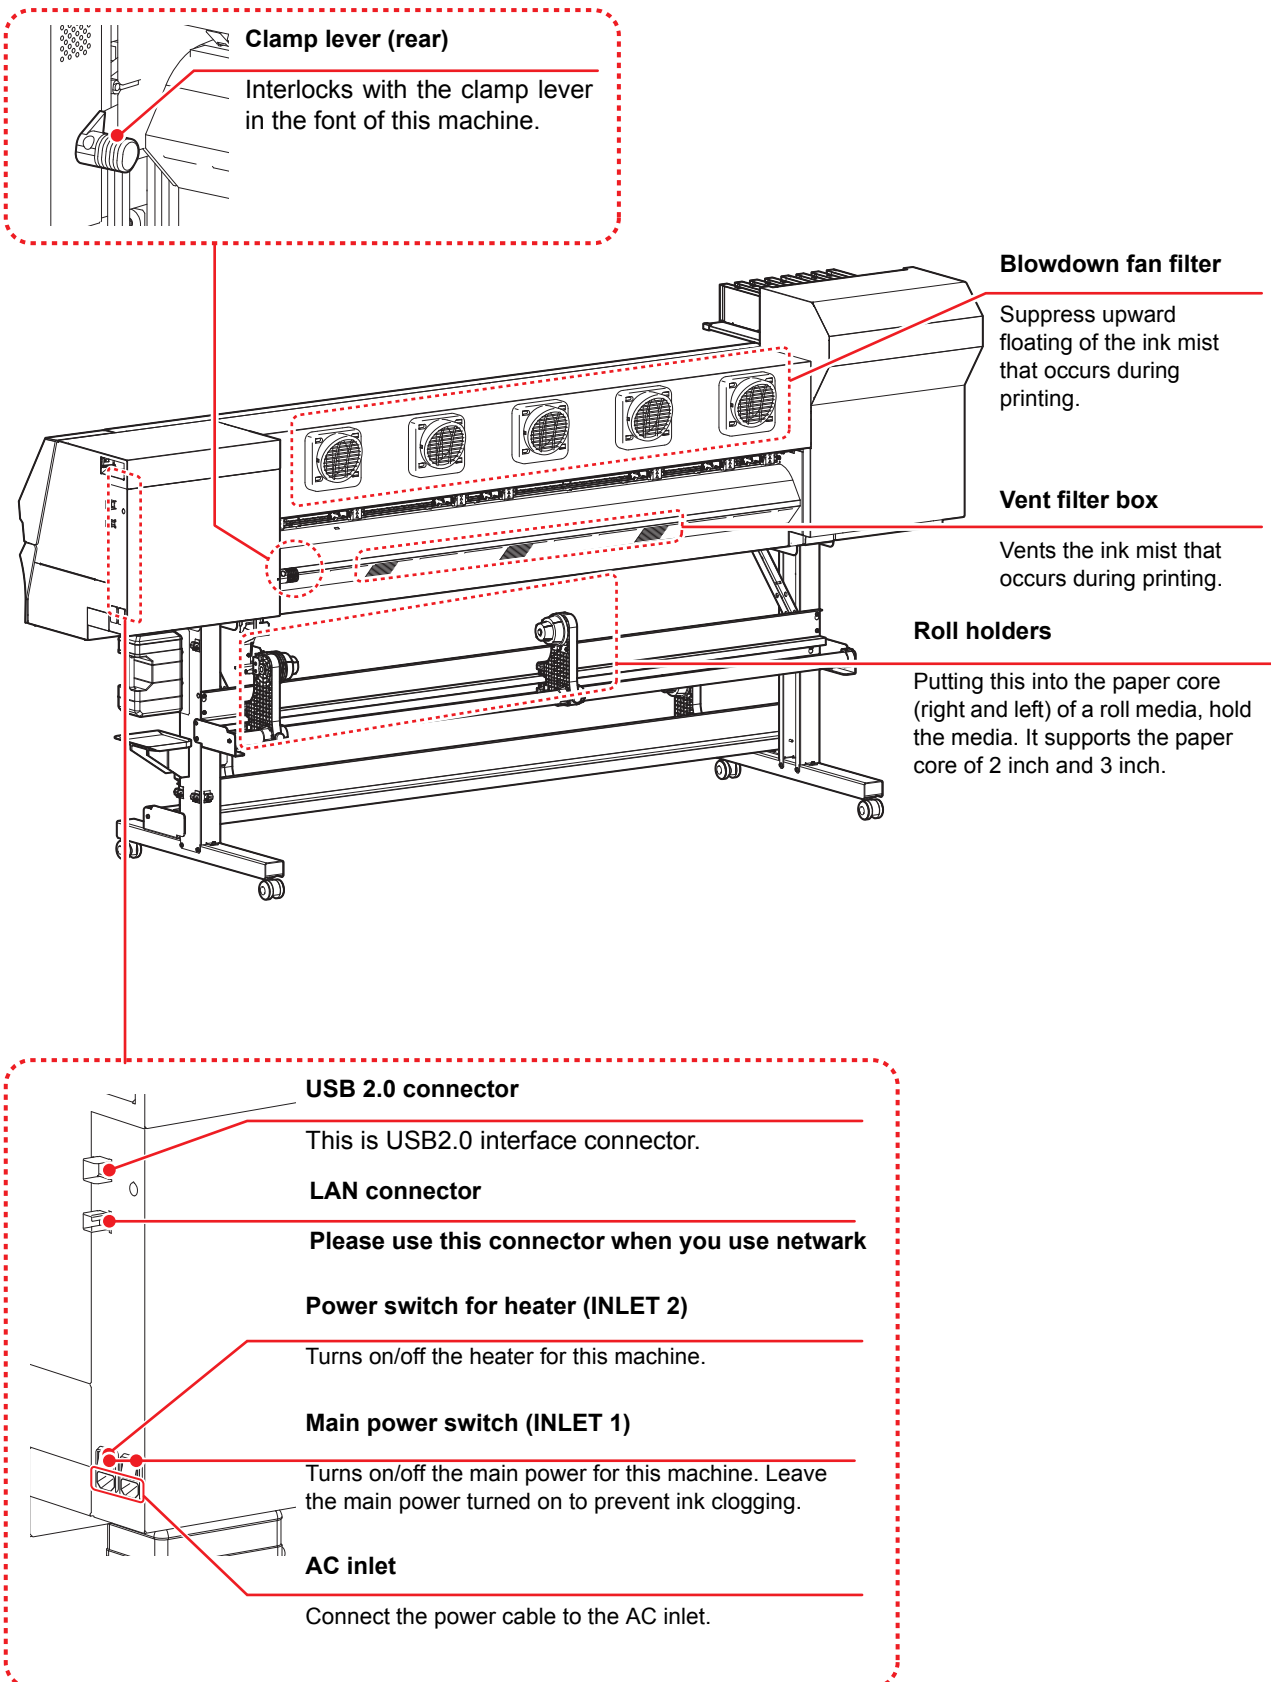

Operation Panel


Use the operation panel to make settings for printing or operate this machine.

SEL key

Changes over the functions of the function keys ([FUNC1]–[FUNC3]).

[FUNC1] / [FUNC2] / [FUNC3] key

Press this to set various functions or to do test printing. The function keys' functions are changed each time [SEL] key is pressed.

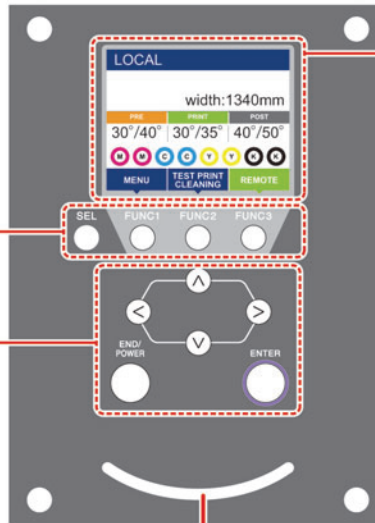

Display

Displays the following items:

- Printer status
- Set media width
- Heater temperature (current temperature/set temperature)
- Ink status ^{*1}
- Functions assigned to [FUNC1] to [FUNC3] ^{*2}

JOG key

Use these keys to shift the carriage or the media in [LOCAL]. Also use them to select an item of printing conditions.

[END/POWER] key

Cancels the last input value or returns the setting menu to the immediate higher level of the hierarchy. Also, press this to turn the power on or off. (Give it a long press to turn the power off.)

[ENTER] key

Registers the last input value as the setting value or goes to the immediate lower level of the hierarchy.

Status indicator lamp

Indicates the machine's status (printing, error occurred, etc.).
































Condition of Lamp	Condition of machine
OFF	Machine is in LOCAL mode, no print data has been received, and no errors have occurred.
Lit steady Light blue	Switched to REMOTE mode.
Flashing Light blue	Currently printing. In test printing: printing a pattern stored inside the machine.
Lit steady blue	Print data still remains in the machine.
Flashing red	Error has occurred.
Lit steady red	Error (SYSTEM HALT) has occurred.



- The power switch under the operation panel lights in blue when the power is turned on, and off when the power switch is turned off. The ink clogging prevention function is periodically operated even when the power switch is OFF if the main power switch keeps being ON. (Auto maintenance function) P.1-4















*1 : Ink Status

Status of the ink cartridge (remaining ink/error, etc.) is displayed using icons. Each icon is described below.

Icon	Contents																		
	<p>The remaining amount of ink is displayed in 9 stages. The remaining amount decreases moving to the right.</p> <table><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>ink full</td><td>Approximately 1/8 consumed</td><td>Approximately 1/4 consumed.</td><td>Approximately 3/8 consumed.</td><td>Approximately 1/2 consumed.</td><td>Approximately 5/8 consumed.</td><td>Approximately 3/4 consumed.</td><td>Approximately 7/8 consumed.</td><td>near end</td></tr></table>										ink full	Approximately 1/8 consumed	Approximately 1/4 consumed.	Approximately 3/8 consumed.	Approximately 1/2 consumed.	Approximately 5/8 consumed.	Approximately 3/4 consumed.	Approximately 7/8 consumed.	near end
																			
ink full	Approximately 1/8 consumed	Approximately 1/4 consumed.	Approximately 3/8 consumed.	Approximately 1/2 consumed.	Approximately 5/8 consumed.	Approximately 3/4 consumed.	Approximately 7/8 consumed.	near end											
	Displayed at ink end (only when the 4-color ink set is used) and ink near end.																		
	Indicates that the cartridge cannot be used due to ink end or ink error (remaining ink 0, cartridge not attached, etc.).																		
	Indicates that ink has expired or that one month has passed after the expiration date. Please use quickly. Ink can no longer be used if two months have passed after the expiration date.																		

*2 : Functions assigned to [FUNC1] to [FUNC3]

Contents of functions assigned to [FUNC1] to [FUNC3] are described below.

Icon	Contents
	Displays "MENU" for setting functions.
	Displays maintenance functions such as test print, cleaning, etc.
	Shifts to REMOTE from LOCAL and starts printing.
	Displays adjustment functions such as FEED COMP, DROP.POScorrect, etc.
	Sets the heater temperature.
	Executes data clear.
	Suspends printing in REMOTE and shifts to LOCAL.
	Executes media cut.
	When there are multiple items on the MENU screen or other screens, it moves to the next page.
	When there are multiple items on the MENU screen or other screens, it moves to the previous page.
	Used for completing confirmation when warning message has been displayed and so on.
	Used for turning functions OFF or cancelling them, for example, when turning heater settings OFF and so on.
	Some kind of setting or function is assigned. Operate according to the description of each function.
	Switches between enable/disable when selecting multiple items, for example, when selecting target head for cleaning and so on.




- The color of icons changes according to the state of the printer.
 - When the icon is green : The printer is in REMOTE mode.
 - When the icon is dark blue : The printer is in LOCAL mode.
 - When the icon is yellow : A warning has been issued.
 - When the icon is red : An error has been issued.

Media sensor

The media sensor detects the presence of the media and the media length.

This machine has one media sensor on the platen (in the rear).

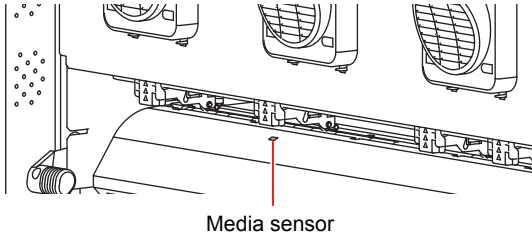


Important!


- When setting a media, be sure to cover the media sensors located on the rear of the platen. The media cannot be detected unless it is placed over the sensor.

Carriage

The carriage consists of the printer unit and the cutter unit.

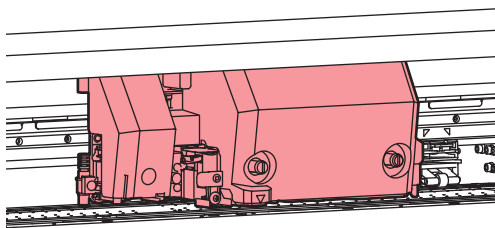


Printer Unit

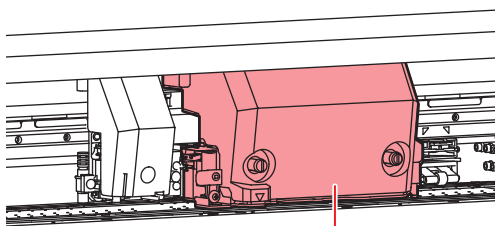

Printer unit

Cutter Unit

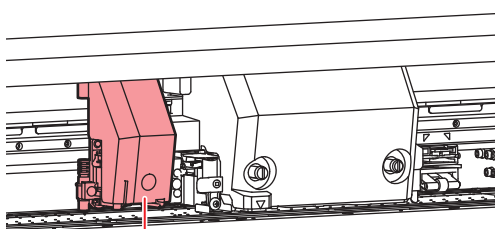


Cutter unit

Cutter blade and slot for cutting

The carriage is provided with a cutter unit for cutting off the media that has been printed on.

The cutter cuts off the sheet of media along the slot for cutting on the platen.

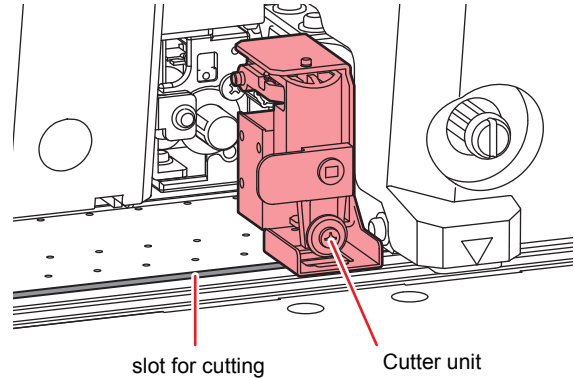

slot for cutting

Cutter unit

Capping station

The capping station consists of the ink caps, the wiper for cleaning the heads, etc.


The ink caps prevent the nozzles in the ink heads from drying up.

The wiper cleans the nozzles in the heads.

The wiper is consumable. If the wiper is deformed or the media is stained, replace the wiper with a new one.



- Be sure to wear the attached goggles in cleaning within the capping station to protect your eyes against ink. Otherwise, you may get ink in your eyes.

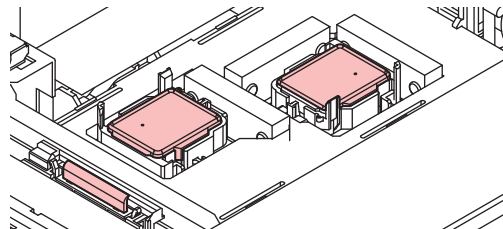


Pinch Rollers and Grit Rollers

This machine retains the media with the pinch rollers and the grit rollers.

Important!

- Keep the pinch rollers lifted up when this machine is not in use. If the pinch rollers are left lowered for an extended period of time, they can be deformed and fail to securely retain the media.

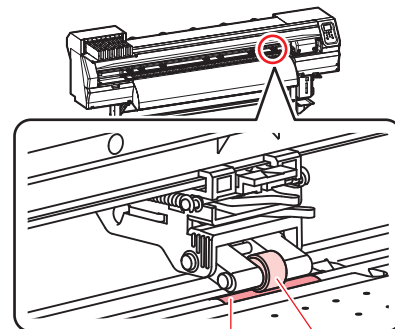


Pinch roller

Feed roller

Connecting Cables

Connecting USB2.0 Interface Cable

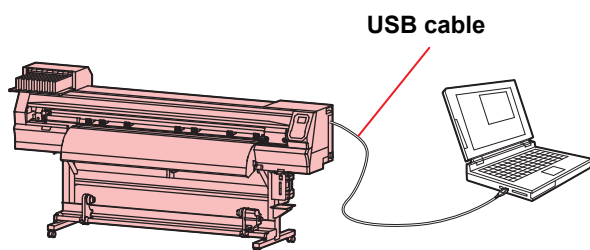

Connect the PC and this machine with the USB2.0 interface cable.



- Your RIP must be compatible with USB 2.0.
- Contact a RIP maker near your location or our office when the USB2.0 interface is not attached to the PC.

Notes on USB 2.0 Interface



- Your RIP must be compatible with USB 2.0.

● When two or more CJV300 machines are connected to one personal computer

When two or more CJV300 machines are connected to one personal computer, the personal computer may not recognize all the CJV300 machines normally. Reconnect the unrecognized CJV300 machine to another USB port, if available, and check to see if it is recognized. If the CJV300 machine is not recognized by the newly connected USB port, use USB 2.0 repeater cables available on the market.

● Notes on peripheral devices in USB high speed mode


When a peripheral device (USB memory or USB HDD) to be operated in USB high speed mode is connected to the same personal computer that a CJV300 machine is connected to, the USB device may not be recognized. When CJV300 is connected to the personal computer to which an external HDD is connected via USB, the speed of data output to CJV300 may drop. That can cause the head unit to stop temporarily at the right or left end during printing.

● Removing USB memory

If a USB memory module is inserted in the personal computer to which a CJV300 machine is connected, click "Stop" in the "Safely Remove Hardware" window by following the instructions given there first and then remove the module.


Leaving a USB memory module inserted can cause [ERROR 10 COMMAND ERROR].

Copy the data onto the hard disk before outputting it for printing.

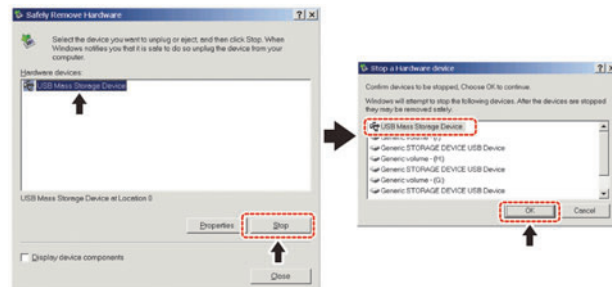

Connecting the power cable


1 Insert the power cable into an inlet of the machine.

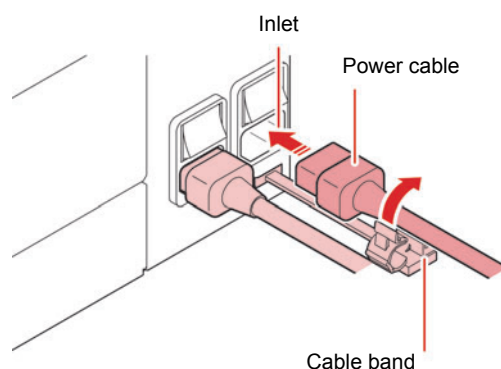

2 Secure a cable band.

- Secure the cable with the cable band attached to this machine.

3 Insert the power plug into a plug socket.

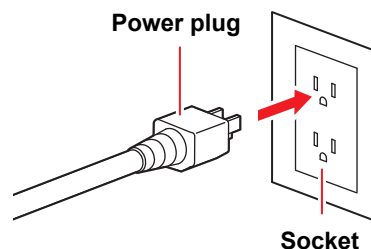

- Do not use any power cables other than the attached power cable.




- Be sure to connect the power cable to the outlet near this machine, and make sure that the power cable can be easily removed.
- Connect the power cable to the grounded outlet. Otherwise, it may result in fire or an electric shock.


Inserting ink cartridges

Insert an ink cartridges.

- 1 Shake the ink cartridge as shown on the right.

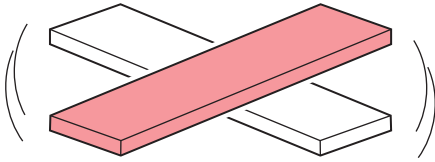

- 2 Insert the ink cartridge.

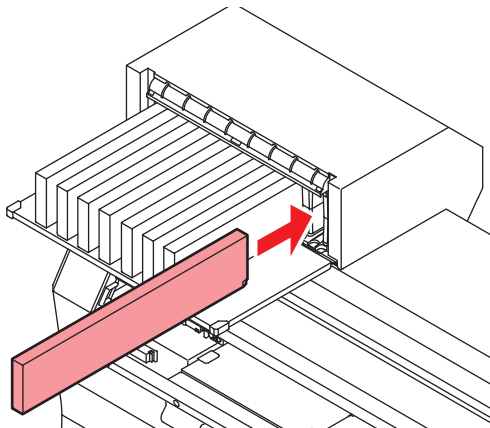

- Insert the ink cartridge lengthwise with the surface having IC chips pointing to the left side.
- Colors are displayed on the display as follows.
Black: K, Cyan: C, Magenta: M, Yellow: Y,
Blue: B, Light cyan: c, Light magenta: m, Light blue: b

Changing an ink cartridge

Perform as follows when [INK END] or [INK NEAR END] is displayed on the display.

● When [INK END] is displayed

- (1) Pull out an ink cartridge to be replaced.
- (2) Insert a new ink cartridge, paying attention to the direction of IC chip.

● When [INK NEAR END] is displayed


There is a little of ink left. It is recommended to replace the ink cartridge soon since ink may become empty in printing while printing is continuously enabled.



- During [INK NEAR END] is displayed, Auto cleaning does not operate. (P.3-7)

For Ink cartridge lamps

The condition of the ink cartridges set in the machine is confirmable with lamps located over the ink cartridges.

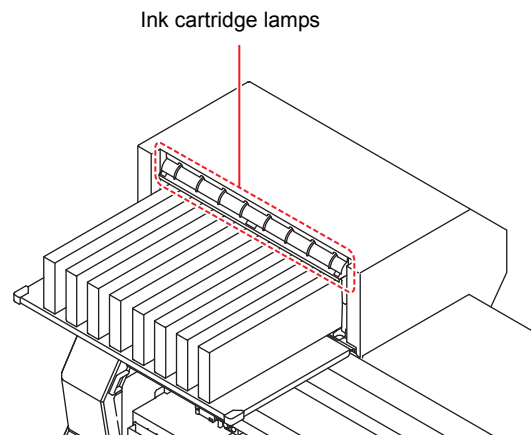

Condition of Lamp	Description
Lit to green	No error (ink is being supplied)
OFF	No error
Lit or blinks to yellow	One of the following errors occurs. <ul style="list-style-type: none"> • Ink near-end • Ink end • Expiration of a term of ink validity (one month)
Blinks to red	Expiration of a term of ink validity (two months)
Lit to red	One of the following errors occurs. <ul style="list-style-type: none"> • No ink left • No ink cartridge inserted • Other ink errors (P.6-7)

About ink expiration date

The ink cartridge has its expiration date.

When this expiration date is exceeded, a message is displayed in LOCAL and for the guidance message. (P.6-5, P.6-7)

You can use the cartridge in two months after the expiration date indicated on it, however, you cannot use it when three months have passed from the expiration date. As LED will blink quickly to inform you of it, replace the cartridge

Ex.) When the expiration date is April 2014

May : Usable

June : Usable (LED kits to red)

July : Unusable (LED blinks to red)

Caution in handling of ink cartridges



- Use genuine ink cartridges for this machine. This machine functions by recognizing the genuine ink cartridges. In case of troubles caused by modified ink cartridges or the like, it shall be out of the warranty even within the warranty period.
- If the ink cartridge is moved from a cold place to a warm place, leave it in the room temperature for three hours or more before using it.
- Be sure to thoroughly consume the ink in the ink cartridge, once it is opened, within three months. If an extended period of time has passed away after opening the cartridge tank, printing quality would be poor.
- Make sure to store ink cartridges in a cool and dark place.
- Store ink cartridges and waste ink tank in a place that is out of the reach of children.
- Request an industrial waste processor for processing of empty ink cartridges.
- Do not shake ink cartridges violently. This may result in ink leakage from the ink cartridges.
- Never refill the ink cartridges with ink. This may result in troubles.
MIMAKI will not bear any responsibility for any damage caused by the use of the ink cartridges refilled with ink.
- Do not touch or stain the contacts of the ink cartridge. This may cause damages on printed circuit boards.
- Do not disassemble the ink cartridges.



Media

Usable media sizes and notes for handling are described.

Usable sizes of media

Model		CJV300-130	CJV300-160
Type of Recommended media		Label stock (paper-based) / PVC sheet (including laminated; thickness no more than 0.25 mm) / Reflective sheet (excluding high-luminance reflective sheet) / Heat transfer rubber sheet	
Maximum width		1371mm	1620mm
Minimum width		210mm	210mm
Maximum printing width		1361mm	1610mm *1
Roll media	Thickness	1.0mm or less	
	Roll outside diameter	Paper media : Φ 250mm or less Other media : Φ 210mm or less	
	Roll weight	40kg or less	
	Roll inside diameter	3 or 2 inches	
	Side printed	Side facing outward	
	Roll end treatment	The roll end is gently fixed to the core with weak-adhesive tape or weak glue for easy removal.	

*1. When the MARGIN(RIGHT/LEFT) setting has been set to the minimum (-10 mm).

Caution in handling of medias

Pay attention to the followings for handling of medias.



- **Use media recommended by MIMAKI to ensure reliable, high-quality printing.**
Set the heater temperature to meet the characteristics of the media.
- **Pay attention to the expansion and contraction of the media.**
Do not use media immediately after unpacking. The media can be affected by the room temperature and humidity, and thus it may expand and contract.
The media have to be left in the atmosphere in which they are to be used for 30 minutes or more after unpacked.
- **Do not use curled media.**
This may result in paper jamming.
If a regular-sized coated sheet of media is rolled and stored, the coated side has to face outside.
- **Be careful to dusts on the edge face of the media.**
Some rolls have dusts contained in the package gathered on the edge surface of the roll. If you use as it is, the drawing quality may be degraded due to nozzle missing or ink drops. Be sure to set the roll after removing dusts adhering on the edge face of the roll.

Menu mode

This machine has 4 modes. Each menu mode is described below.

NOT-READY mode

This is the mode in which the media has not been detected yet.

LOCAL mode

Local mode is the mode for the drawing preparation state.

All the keys are effective.

The machine can receive data from the computer. However, it does not perform printing.


Screen display in Local mode

Displays the current heater temperature.

The color of the icon above the temperature display changes with the current heater status.

- Orange : Temperature rising
- Green : Set temperature reached
- Gray : Heater off

Displays the functions that have been set for the function keys [FUNC1] – [FUNC3].

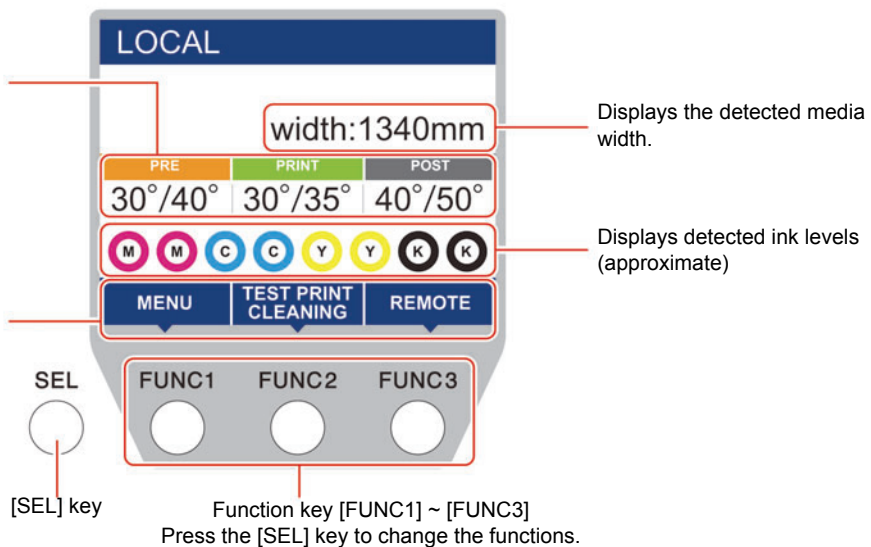

This mode permits the following operations:

- Pressing the JOG keys to set up a drawing origin and drawing area.
- Pressing the [ENTER] key to check the remaining amount of ink, the description of the cartridge error, the model name, the firmware version, and so on.

MENU mode

To set MENU mode, press the [FUNC1] key when this machine is in LOCAL mode.

In this mode, each function can be set.

REMOTE mode

This machine prints the data it receives.

Chapter 2

Basic Operations



This chapter

describes procedures and setting methods for ink and media preparation, and printing.

Workflow of printing	2-2	Setting of Media Correction	2-16
Turning the Power ON/OFF	2-3	Setting of Media Correction	2-16
Turning the Power ON	2-3	If the Positions of Dots Shift... ..	2-17
Turning the Power OFF	2-3	Printing Data	2-17
Setting a Media	2-4	Starting a Printing Operation	2-17
Adjusting the Head Height	2-4	Stopping a Printing Operation	2-18
Adjusting the Position of the Pinch Roller		Deleting Received Data (Data Clear)	2-18
According to the State of a Media	2-5	Cutting a media	2-18
Maximum Print Area/Cut Area	2-8	Workflow of cutting	2-19
Notes When Using media Holder	2-8	Installing Tools	2-20
Setting a roll media	2-9	When a Cutter Is Used	2-20
Take-up device	2-12	How to Install a Ballpoint Pen	2-21
Setting leaf media	2-12	Setting the tool conditions	2-23
Changing the printing origin	2-14	Kinds of the Tool Conditions	2-23
Preparing for the Heaters	2-14	Select the tool condition	2-24
Changing the Temperature Settings for		Set the Tool Conditions	2-24
the Heaters	2-14	Test Cutting	2-25
Test Printing	2-15	Cutting Data	2-25
Test Printing	2-15	Setting the origin	2-25
Head Cleaning	2-16	Start cutting	2-26
About head cleaning	2-16	Stopping a Cutting Operation	
Perform head cleaning depending on		(Data Clear)	2-26
the test printing result	2-16	Cutting a media	2-26

Workflow of printing

Turning the Power ON/OFF

Referring to “Turning the Power ON/OFF” (🖨️ P.2-3).

Setting a Media

Referring to “Setting a Media” (🖨️ P.2-4).

Preparing for the Heaters

Referring to “Preparing for the Heaters” (🖨️ Preparing for the Heaters).

Test Printing

Referring to “Test Printing” (🖨️ P.2-15).

Head Cleaning

Referring to “Head Cleaning” (🖨️ P.2-16).

Printing Data

Referring to “Printing Data” (🖨️ P.2-17)

Turning the Power ON/OFF

Turning the Power ON

This machine is provided with the following two power switches:

Main power switch :

It is located on the side of this machine. Keep this switch ON all the time.

[END/POWER] key :


Normally, use this key to turn the power ON/OFF.

The nozzle clogging prevention function periodically operates even with the [END/POWER] key turned OFF when the main power switch is turned ON.

1

Turn the main power switch ON.

- Set the main power switch located on the side of this machine to the "I" side.

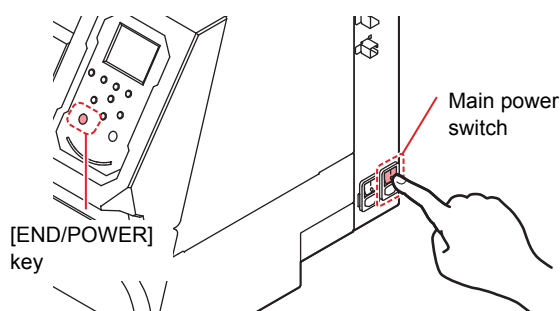

- The firmware version is displayed when the power is turned ON, and then the machine performs its initial operation.

2

Turn the power on, by pressing the

[END/POWER] key.

- The machine enters LOCAL.

3

Turn ON the power of the connected PC.


Important!

- Turn the power ON after the front cover and maintenance cover are closed.
- The head nozzle may result in nozzle clogging if the main power switch is left OFF for a long time.

Turning the Power OFF

When having ended the operation of the machine, turn the power OFF by pressing the power switch located on the front side.

Check the following items when turning the power OFF.

- If the machine is receiving data from the PC or if there is any data that has not been output yet
- If the head has returned to the capping station
- If any error has occurred
( P.6-7 "Ink Error")


1

Turn OFF the power of the connected PC.

2

Turn the power off, by giving the **[END/POWER]** key a long press.

- Do not turn OFF the main power switch located on the side of the machine.
- To use this machine again, press the [END/POWER] key .

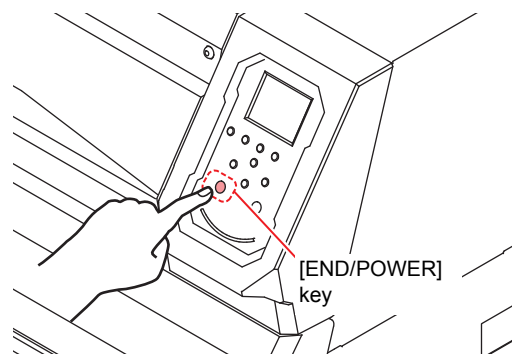

Cautions about Turning the Power OFF

● Do not turn the main power switch OFF.

When the main power switch is ON, the power periodically turns ON and the nozzle clogging prevention function (flushing function) operates. When the main power switch has been turned OFF, the auto maintenance functions, such as flushing, do not operate, and this may cause nozzle clogging.

● Keep the the maintenance cover closed.

If the cover is opened, the auto maintenance function such as the flushing function does not work.

● Turn the power OFF after having checked the position of the head.

If the power is turned OFF in a state where the head has not returned to the capping station, the ink head dries, which may cause nozzle clogging.

In this case, turn the power ON again and check that the head has returned to the capping station, and then turn the power OFF.

● Do not turn the power OFF during printing or cutting.

The head may not return to the capping station.

● After having turned the power switch OFF by pressing [END/POWER] key, turn the main power switch OFF.

When turning the main power switch off for moving the machine or for solving the error or the like, press the [END/POWER] key a long time on the front of the machine, check the display is turned off on the operation panel, and then turn the main power switch off.

2

Setting a Media

This machine can be used with a roll media and leaf media.

For usable medias, refer to P.1-10 "Usable sizes of media".

Important!

- Take care not to drop the media on your foot when setting the media. It may cause an injury due to the media.
- When setting a roll media, work by two or more people. Otherwise, you may hurt your back by the weight of the roll media.
- Adjust the head height prior to setting the media. If the head height is adjusted after the media is set, this may cause a media jamming, deterioration of the print quality or head damage.
- The range of the initial head height is adjustable by 2 levels according to the purpose of use.
- The range of the printing height of this machine is from L range (2 mm/3 mm) to H range (3 mm/4 mm). (Set to L range 2 mm at shipping)


Adjusting the Head Height

Adjust the head height according to the thickness of the media you use.

1

Move the carriage to the platen.


- When the device is turned ON :Execute [ST.MAINTENANCE - CARRIAGE OUT] of the Maintenance functions. (P.5-6 Step1,2)
- When the device is turned off : Open the front cover, then move the carriage by hand.

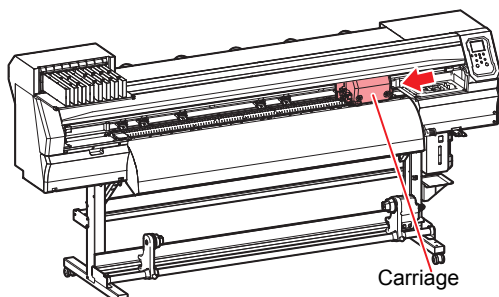

2

Loosen the screw in front.

- Loosen the screws, rotating each by one turn of a standard screwdriver.

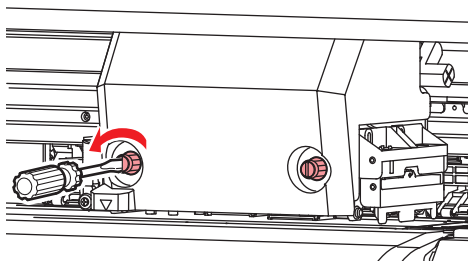


3

Adjust the height-adjusting lever according to the media.

- Adjust the position of the lever, referring to P.2-4 "For the Adjusting Lever and the Range".
- Set the height-adjusting lever to the highest stage or the lowest stage. Setting it to the intermediate height, a printing fault can result.

Height-adjusting lever

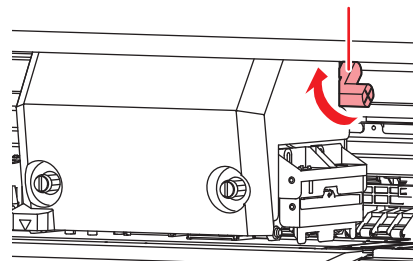


4

Fix the carriage.

- Fasten the screw securely.


Important!

- If you set the height-adjusting lever to the H range or L range, do not push the lever upward or downward when you tighten the screw.

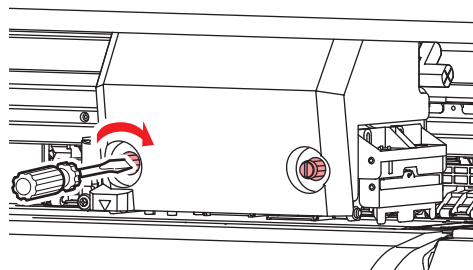

5

Return the carriage to the station position.

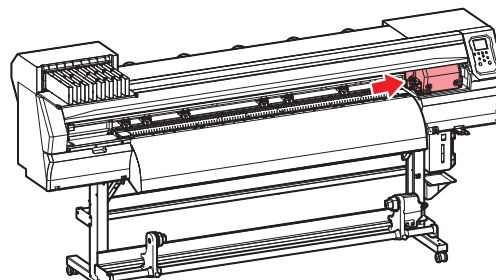

For the Adjusting Lever and the Range

Range	Head height	Note
L range	2mm (The set position at shipping)	You can raise the base of the head height 1 to 2 mm higher. To do this, contact one of our sales representatives.
M range	2.5mm	
H range	3mm	




- Set the lever to "H range" when the media is prone to gather dust in the head or is often stained with ink traces.



- When the ink is changed from dye ink to other aqueous ink, or on the contrary, after the machine is installed, the adjustment is required for the head initial height (H/L range). Consult with our sales office about it.

Adjusting the Position of the Pinch Roller According to the State of a Media


Adjust the position of the pinch roller according to the width of the media to be set.
This machine feeds the media with a pinch roller and grid roller for printing or cutting.
The pinch roller should be above the grid roller.

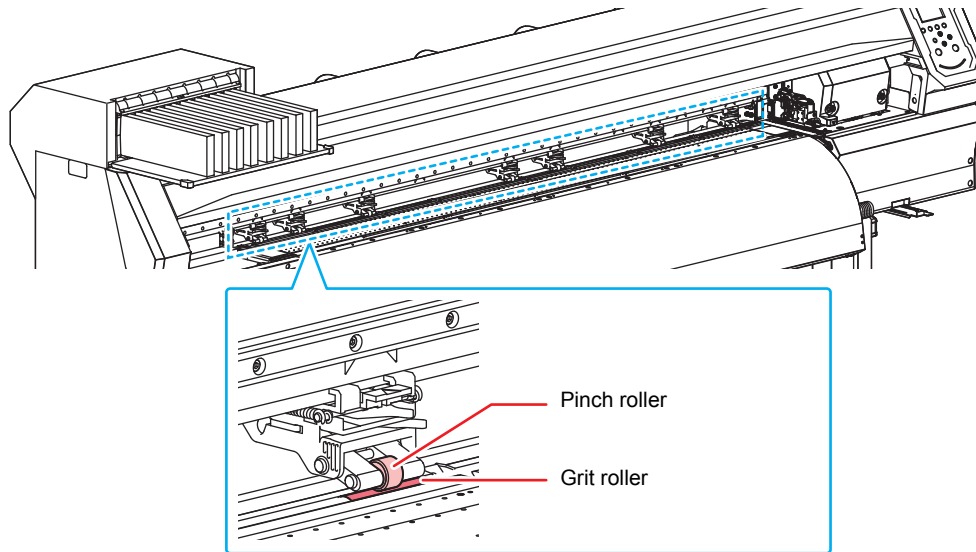


How to Adjust the Pinch Roller

Move the pinch roller unit to adjust the position of the pinch roller.
Use the pinch roller guide mark for positioning.

To adjust the pinch roller
from the front side:

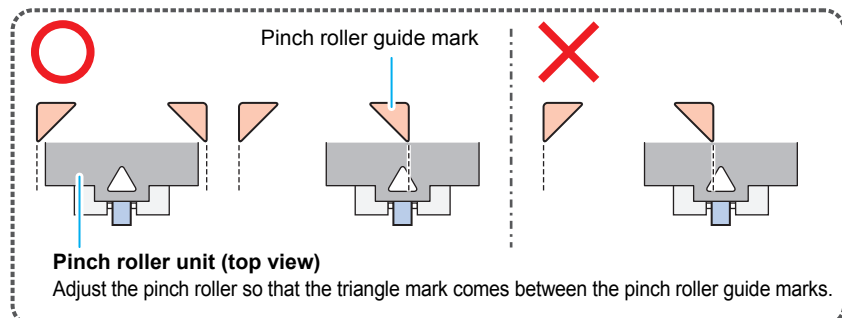

To adjust the pinch roller
from the rear side:

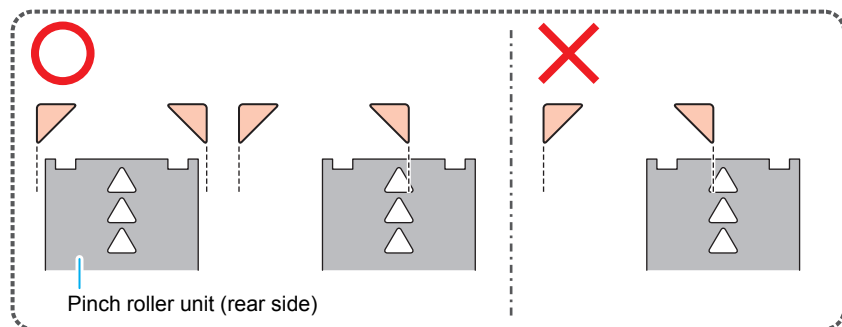


- If the pinch roller moves off the media when you have set the media in place, shift the pinch roller so that it is not aligned with the grip roller. Operating the printer with the media not gripped between the pinch roller and grid roller could wear the pinch roller out.

Media Size and the Grit Roller (CJV300-160)

The grit roller positions are determined by the size of the media.



- To feed the media smoothly, select the grid roller positions so that the media can be held at equally spaced intervals.
- When the grid rollers to be used are determined, adjust the pinch roller unit referring to "How to Adjust the Pinch Roller" of P. 2-17.
- You can use any number of pinch roller units from 2 to 7.
- Adjust the pinch roller of both ends so that they are within the range of 10cm from media left end and 2cm from media right end. If adjusting them to the further position, it will remain uncut when cutting the media.

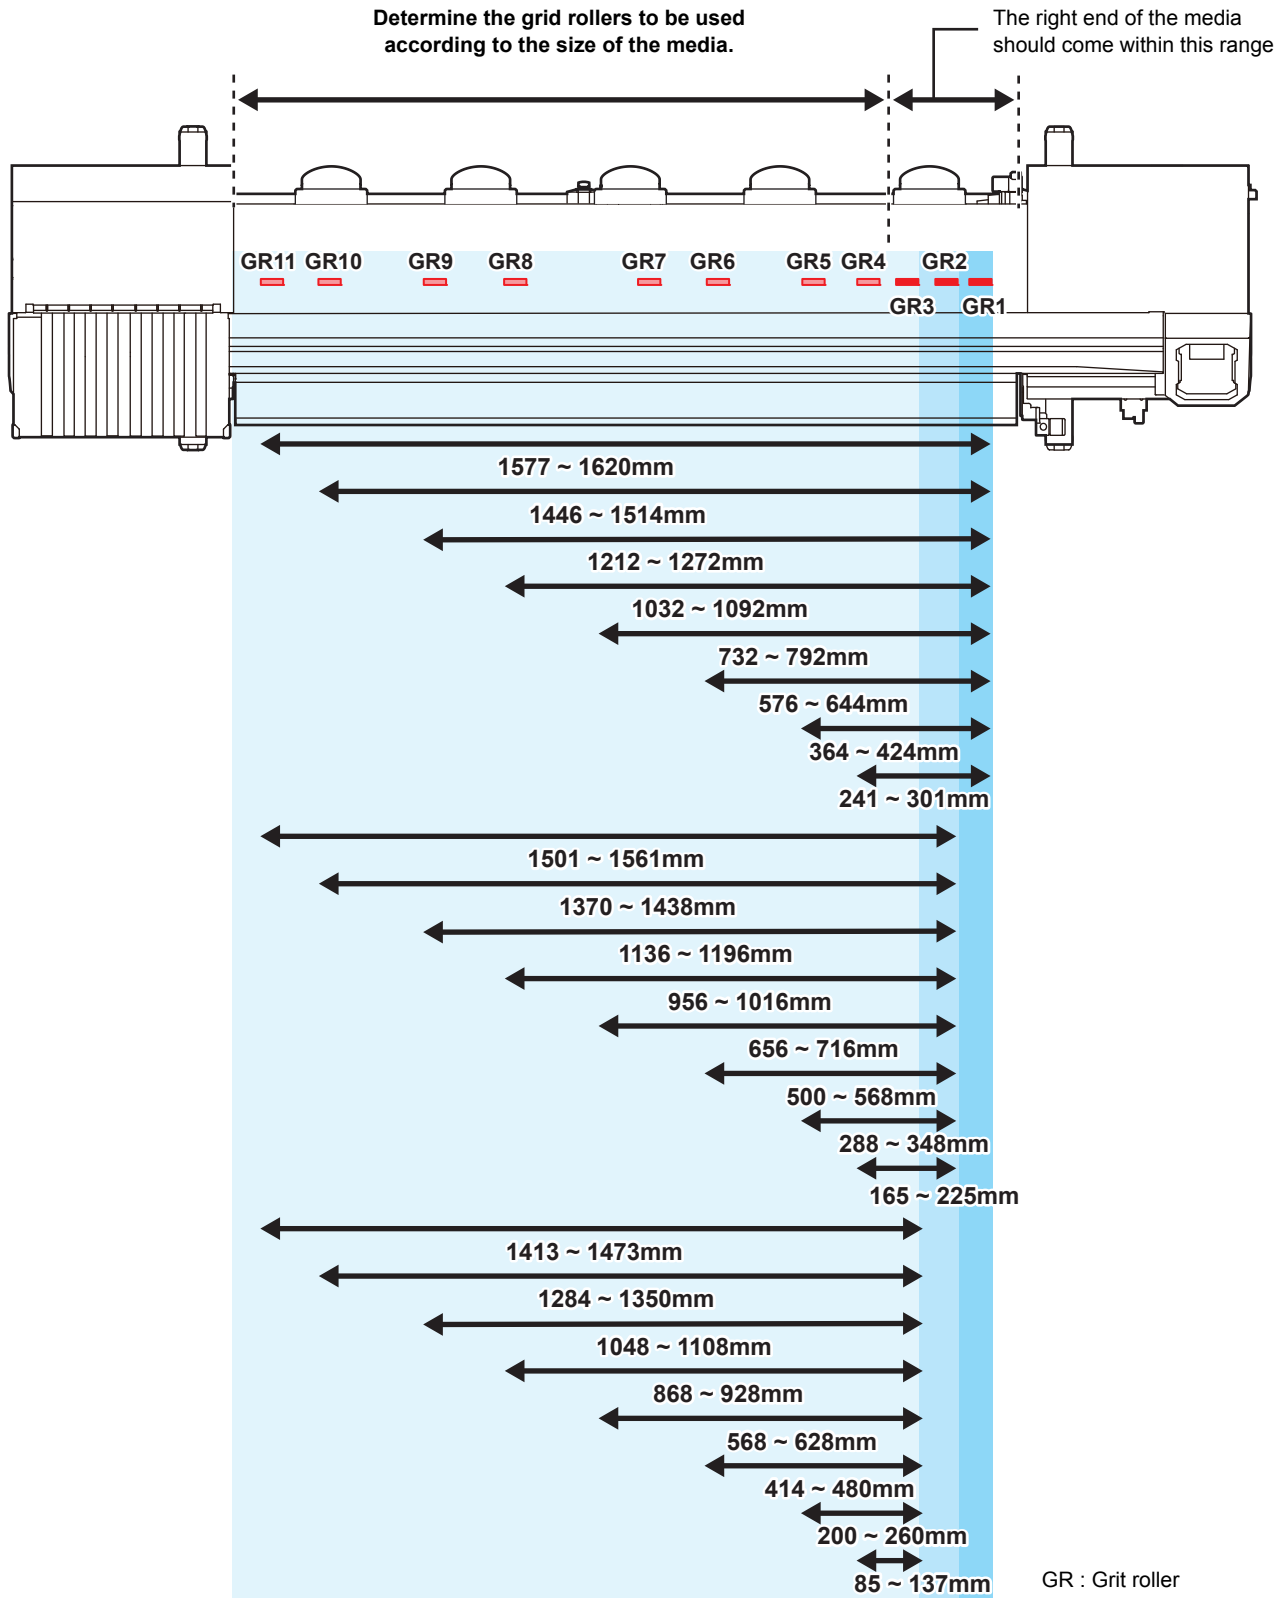


Media Size and the Grit Roller (CJV300-130)

The grit roller positions are determined by the size of the media.



- To feed the media smoothly, select the grid roller positions so that the media can be held at equally spaced intervals.
- When the grid rollers to be used are determined, adjust the pinch roller unit referring to "How to Adjust the Pinch Roller" of P. 2-17.
- You can use any number of pinch roller units from 2 to 6.
- Adjust the pinch roller of both ends so that they are within the range of 10cm from media left end and 2cm from media right end. If adjusting them to the further position, it will remain uncut when cutting the media.

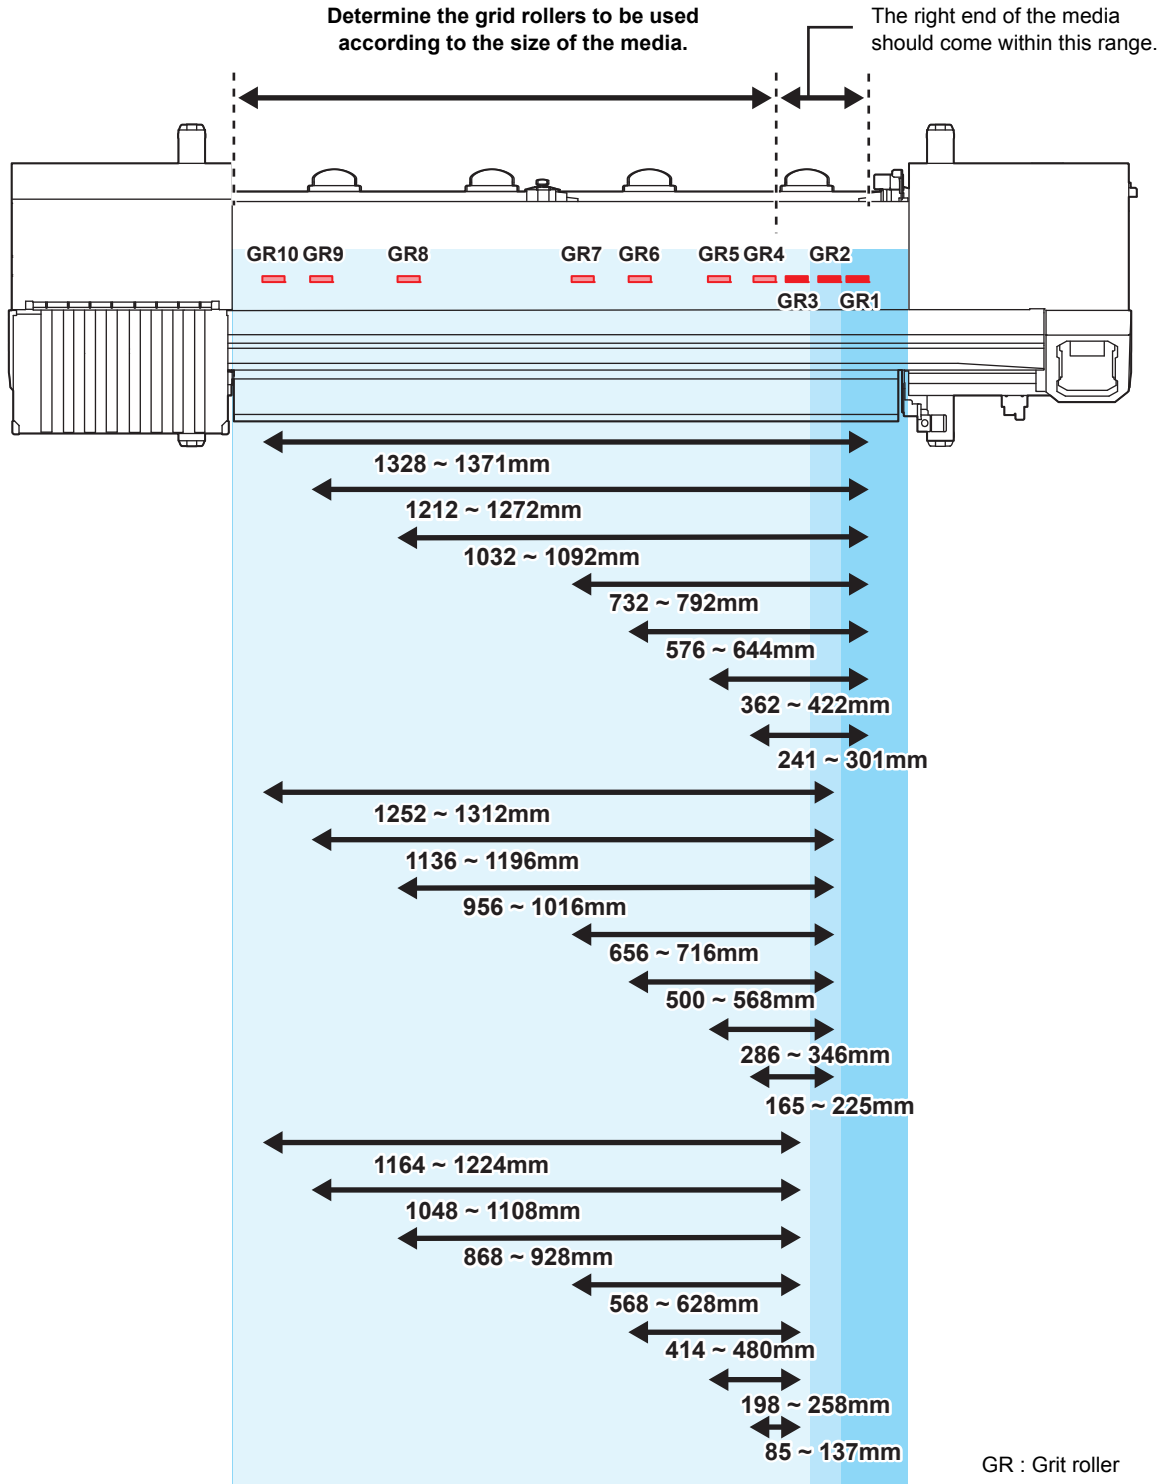

Maximum Print Area/Cut Area


The maximum printed area/cut area varies, depending on the position of the pinch roller (P.2-8 to P.2-7) and the origin position (P.2-14). The white area shown in the following figure represents the maximum print/ cut area. The area other than that is the dead space that cannot be printed/cut.

	CJV300-130	CJV300-160
Maximum printing/cut width	1361mm	1610mm

Notes When Using media Holder

Setting Position of the Media


Set the media so that the right end of the media will be inside the area shown below.

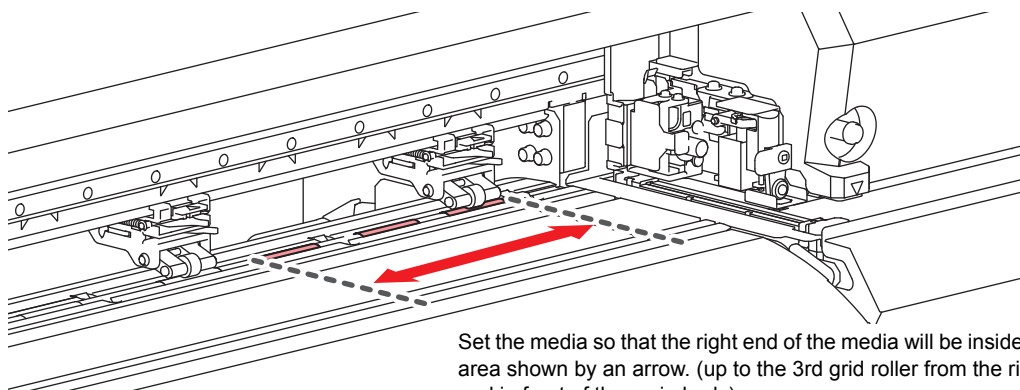

The End of the Media Should Not Exceed the Slit Line on the Platen



- If the media is set with its end exceeding the slit line on the platen, the media may be lifted when it is fed obliquely. This may cause damage to the head.

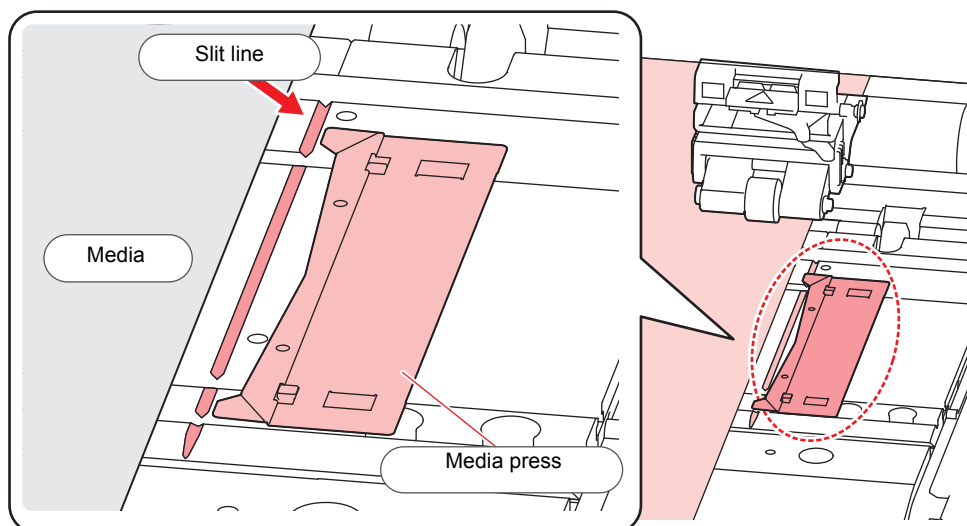

Setting a roll media

Set a roll media to the roll media hanger located on the back of this machine.



- Take care not to drop the media on a foot or so when the media is set. It may cause an injury due to the media.


1

Move the roll holder located in the back of the device to the direction of the middle of the device.

- Loosen the roll holder fixing screw and then move it.

2

Check the clamp lever is lowered.

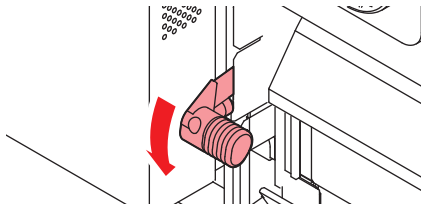


3

Move the roll holder to the roll setting position.

- Check the media size and the position to set the media, referring to the section applicable to your machine (P.2-18 to P.2-21).

Adjust the basic position of the roll holder so that it is placed between the guide marks of the pinch rollers.

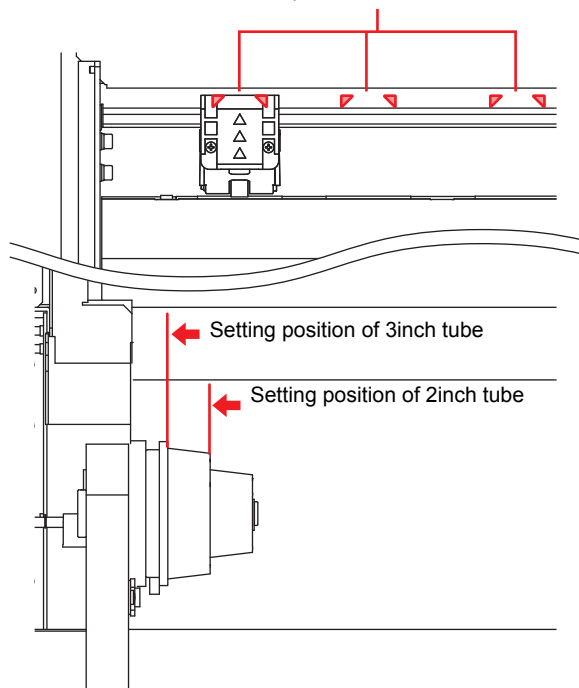

Roll Holder Side (The back of this machine)

4


Tighten the roll holder fixing screw.

- Check the Step 2 to 3 again.

5


Set the left end of the core of the roll media on the left roll holder.

- Push the roll media onto the roll holder until the roll core is all the way seated.

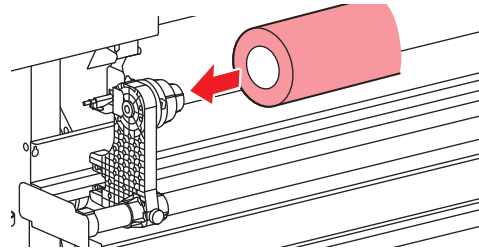


6

Loosen the screw of the right side roll holder then insert the holder into the core of the roll media.

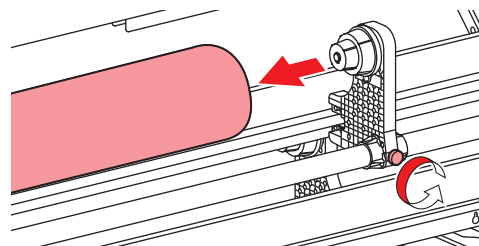

7

Raise the clamp lever in the rear of this machine.

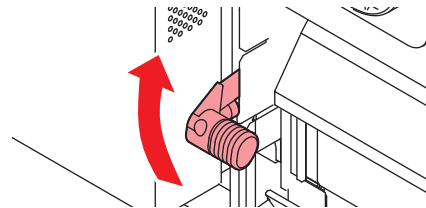

8

Insert the roll media in this machine.

- The roll media can be smoothly inserted by slanting the media.

- (1) Pull the media out of the roll to the head of the platen.
- (2) Insert the media between the platen and the pinch roller.
 - Pull the media out of the roll so that the media can be grasped from the front of the machine.
- (3) Push down the clamp lever from the back of this machine.
 - The media is held.




- Set the pinch roller units so that the media can be held at equally spaced intervals. If the pinch rollers cannot be set at equally spaced intervals, start over from Step 3.
- Ensure there is a dead space of 5 mm or above at each end of the media. (P.2-8)

9

Pull out the roll media out.


- (1) Open the front cover.
- (2) Raise the clamp lever from the front of this machine.
- (3) Pull out the roll media gently and then stop pulling when locked lightly.

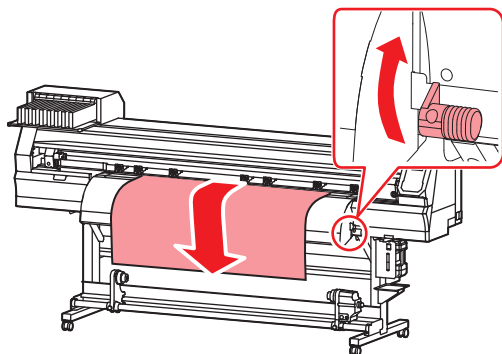

10

Make the roll media even then lower the clamp lever.


- Pulling several positions of the media lightly, Lower the clamp lever after confirming that the amount of the roll media pulled out is almost even.

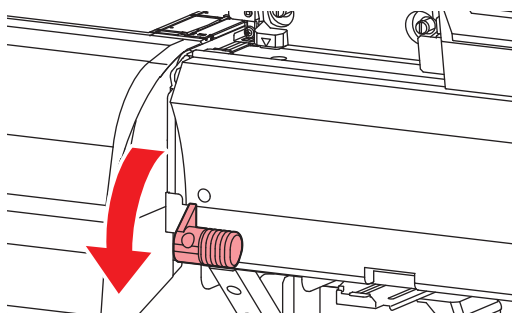


11

Hold the media with the media press gently.

- Set the media so that no media sticks out from the right end pinch roller to the right side.
- When using a thick media, remove the media press from the media before printing.
- you do not need to use the media holder for cutting.

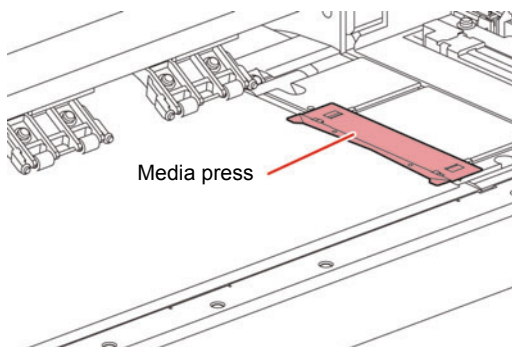


- When installing the media, align the media's right edge with the slit line in the platen. Placing the media rightward of the slit line will make it rise up if it moves obliquely, and this could cause damage to the head.
- If a media is misaligned to the right/left more than fixed position, a error message "MEDIA SET POSITION R" is displayed. Set the media again.

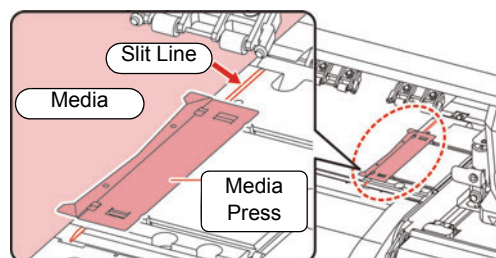

12

Set an empty core of the roll media on the take-up device.

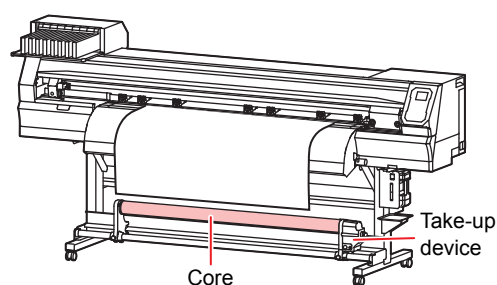

13

Press the key to select "ROLL".


- Detects the media width.
- When [MEDIA RESIDUAL] of the maintenance function is "ON" (P.3-10), the screen for entering media remaining amount is displayed after detecting the media width.(P.2-11)

14

Secure the media on the take-up device.

(P.2-12)

- (1) Feed the media up to the core of the roll media of the take-up device by pressing the [▼] key.
- (2) Fix the middle of the media with adhesive tape.
- (3) In the same manner, fix the left side and right side of the media.
 - Make sure that there is no slack or wrinkle on the media in such condition that the roll media is pulled to right and left evenly, and then stick the tape.

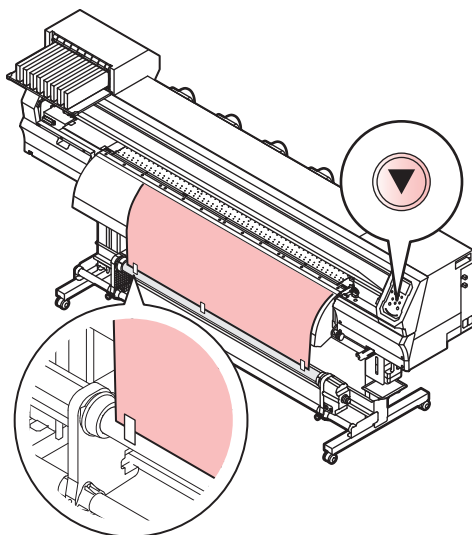

Setting the pinch roller pressure

After setting the media in place, set the pressure of the pinch rollers that retain the media.

Be sure to set a pressure value that is appropriate for the media.

With an inappropriate pinch roller pressure value, the media could skew during printing or cutting, or the pinch rollers could remain on the media after pinching.

1

Press the [FUNC3] (PR 圧切替) key in LOCAL mode.

2

Press the [FUNC3] key, to select "PRINT" or "CUT".

- Now carry out setting of the pinch roller pressure during printing and during cutting.
- The currently selected pinch roller pressure (PRINT or CUT) is indicated by a ">" mark to the left of it.

3

Press [←] [→] to select the pinch roller whose pressure you are going to adjust.

4

Press [▲] [▼], to adjust the pressure (L/M/H).

5

Press the [ENTER] key.

6

Press [▶], to end the setting.


- If you want to switch to another setting immediately, press [<].

Entering the media remaining amount

When [MEDIA RESIDUAL] of the maintenance function is "ON" (P.3-10), the screen for entering media remaining amount is displayed after detecting the media width.

1

Display the screen for entering media remaining amount.

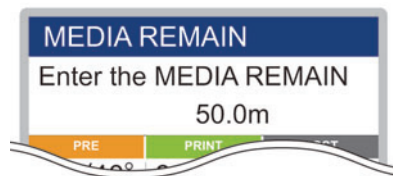

2

Press [▲] [▼] to enter the media remaining amount.


3

Press the [ENTER] key.

2

Take-up device

With the switch of the narrow take-up device, select the take-up direction of the media or others.

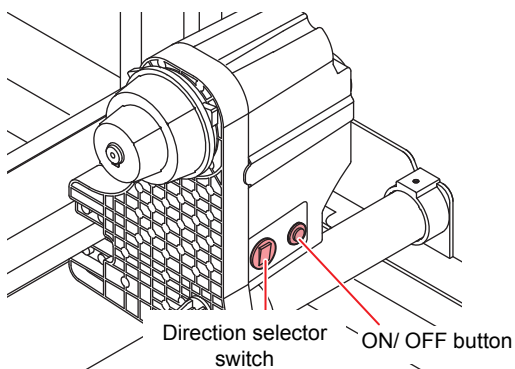

Direction selector switch	UP (REVERSE)	The take-up device winds the media with the printed side facing in.
	DOWN (FORWARD)	The take-up device winds the media with the printed side facing out.
ON/OFF button		Turns the winding motion on/off. (Take-up operation is carried out for as long as this switch is held down.)

Setting the torque limiter



The take-up device is provided with a torque limiter. The take-up torque can be adjusted with the torque limiter. (The torque limiter is set to "media" at delivery.) If the tension is too strong to use a thin media of media, lower the take-up torque with the torque limiter.

Clockwise turn :

Increases torque (a heavy and thicker media such as tarpaulin or the like)

Counterclockwise turn :


Decreases torque (For light media)

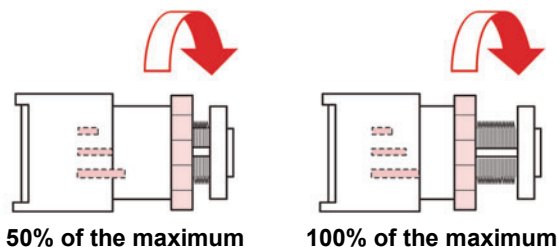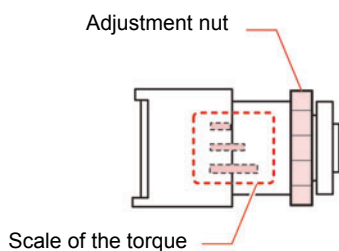

When Not Using Taking-up Device




- When performing printing or cutting of 700 mm or more without using the taking-up device, evacuate the takingup device to right and left. The quality of the print and cut may become low because of the impact when the front end of the media touches the taking-up device.

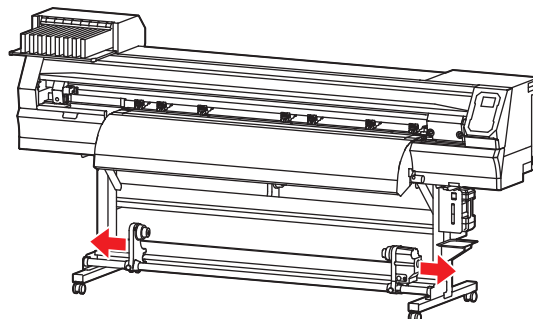

Setting leaf media


Unlike roll media, leaf media does not need to be retained with the roll holders.

1 Raise the clamp lever.

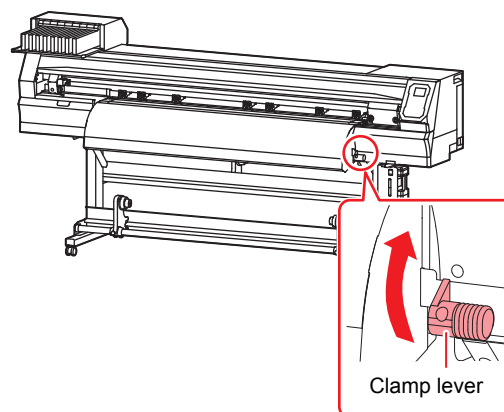

2 Insert the leaf media between the platen and the pinch rollers.


- Set the media so that no media sticks out from the right end pinch roller to the right side.

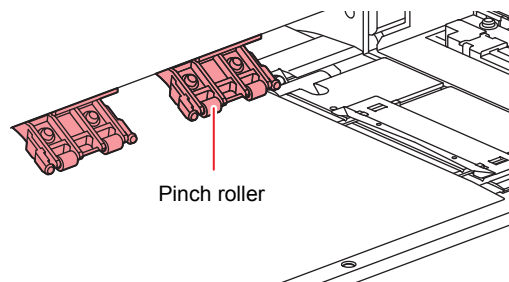

3

To print, hold the media with the media press gently.

- Set the media so that no media sticks out from the right end pinch roller to the right side.
- When using a thick media, remove the media press from the media before printing.
- You do not need to use the media holder for cutting.

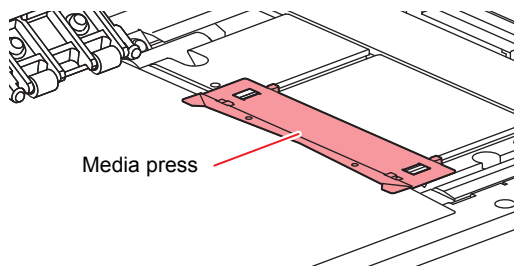


- Set the pinch roller so that the media is held at equally spaced intervals. If the pinch rollers cannot be set at equally spaced intervals, start over from Step 2.
- Ensure there is a dead space of 5 mm or above at each end of the media. (P.2-8).

4


Push down the clamp lever.

- Set the media straight.

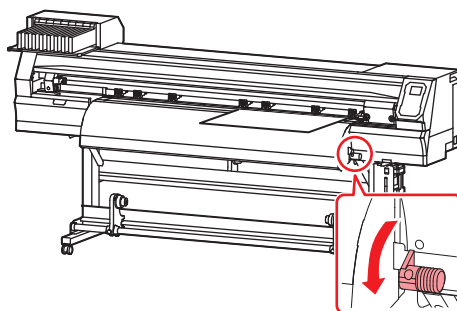

Important!

- Set the media on the black part of the platen so that it comes out approximately 40mm. If it is shorter than that, it may not be able to perform the media detection.

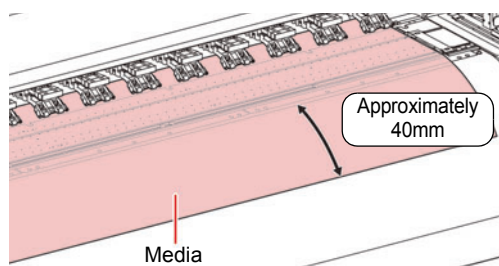

5

Press the **ENTER key.**

6

Press the **▶ key to select "LEAF" .**

7

The media detection is started.

- (1) The media width is detected.
- (2) The media is fed then the rear end of media is detected.
- (3) It returns to the Local when the detection is completed.




- After setting the media in place, set the pinch roller pressure, referring to P.2-11 "Setting the pinch roller pressure".

Notes when using media press





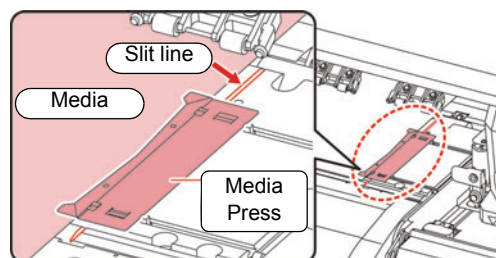

- When installing the media, align the media's right edge with the slit line in the platen. Placing the media rightward of the slit line will make it rise up if it moves obliquely, and this could cause damage to the head.
- If a media is misaligned to the right/left more than fixed position, a error message "MEDIA SET POSITION R" or is displayed. Set the media again.




2

Changing the printing origin

The position of the printing origin can be changed. Moving the LED pointer to the changing position and deciding the position.


 


- 1 In Local, Press     .

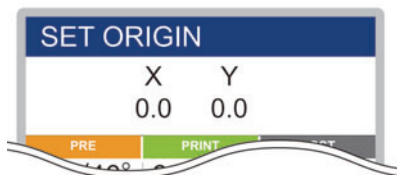- It enters into the origin setting mode.



- 2 Set a light point of the LED pointer to the changing position by pressing

    .


- Select the carriage and media, moving the point with [][][][].

- 3  After determining the origin, press the  key.

- The printing origin is changed.

Typical setting position of printing origin

The printing origin in the depth direction (X') is positioned at about 75 mm rearward from the slot for cutting on the platen. The printing origin in the scanning direction (Y') is positioned at 15 mm from the right end of the media. The value in the scanning direction (Y') can be changed using [MARGIN] in FUNCTION mode. (P.3-6) This can be changed by using the Jog key.

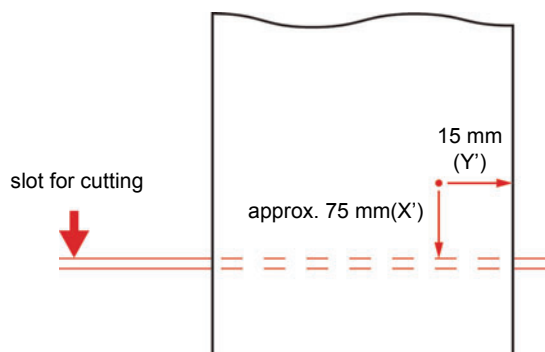

Preparing for the Heaters

Changing the Temperature Settings for the Heaters

You can change/save the temperature settings for the heaters with "Heater" of the setting mode. (P.3-5) Here, changing method of the temperature set in the setting mode is explained.

Set the heater temperature according to the characteristics of the media you use.

The temperature of the heaters has been set to "OFF" as default.

Appropriate temperature adjustment can be made because the temperature can be adjusted even during printing.

It may take several minutes to tens of minutes for the set temperature to be reached, depending on the ambient temperature.

- 1 Press the  key, and then press the  (Heater) in LOCAL.

- The heater temperature adjustment screen will be displayed.

- 2 Press     to set the temperature of each heater.

Heater selecting : Select with [][]

Temperature setting : Set with [][]

- The heater starts to get hot.

- 3 The heating of the heater stops.

- When the heater temperature reaches the set temperature, the heater icon lights in green.

- 4 Press the  key to stop heating.


- The screen returns to LOCAL.

Test Printing

Print a test pattern to check that there are no discharging defects such as nozzle clogging (slight touching of ink or nozzle missing).

Relationship between head row and test pattern

The relations between head row and test pattern print position are as follow.

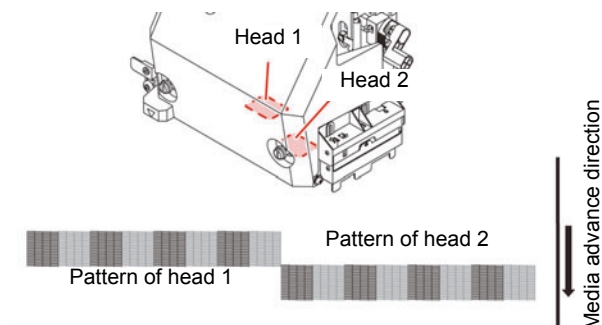

Note on test printing




- When using leaf media, set a media of more than A3 size put horizontally. If a media with narrow width is set, printing will only be conducted to midway.
- When using a roll media, rewind the media by hand before printing so that it is not loose. When the roll media has not been rewound tightly, it may cause image quality to deteriorate.

Test Printing

Print a test pattern to check that there are no discharging defects such as nozzle clogging (slight touching of ink or nozzle missing).

In addition, you can select the orientation of the test pattern to print from two types in order to perform test printing repeatedly. Select one depending on your use.

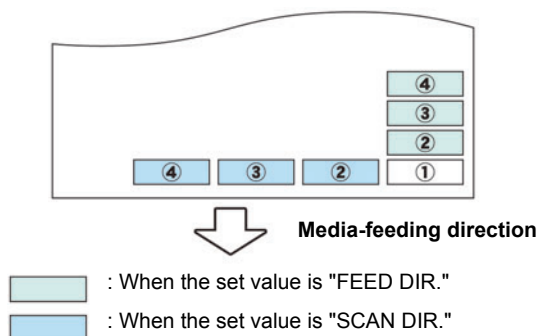

Check before test printing.

- If a media has been set P.2-4
- If the origin position has been set
- If the head gap has been adjusted P.2-4

1

Press the **FUNC2** (TEST PRINT/CLEANING), and then press the **ENTER** key in LOCAL.

- TEST PRINT MENU will be displayed.
- Press **[▲][▼]** to change the test pattern orientation. The orientation selected here will be reflected on when you will print next time.
- When performing test printing after having changed the orientation from "SCAN DIR." to "FEED DIR.", the line is fed to the position of the first test printing.

2

Press the **ENTER** key.


- Test printing starts.
- When the printing has been completed, the screen returns to LOCAL.

3


Check the printed test pattern.

- When the result is normal, end the operation.
- When the result is abnormal, perform head cleaning. (P.2-16)

Normal pattern

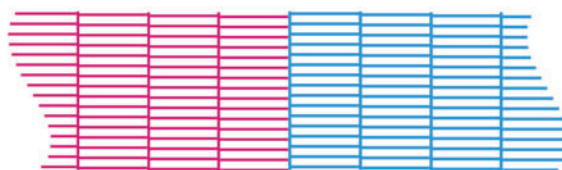

Abnormal pattern

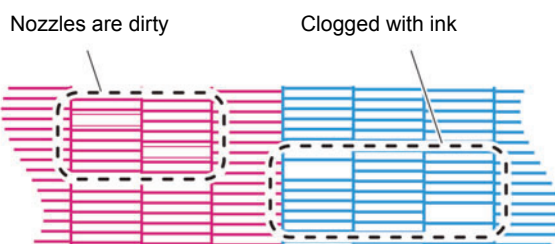

Head Cleaning

About head cleaning

Check the printed test pattern result and perform cleaning depending on the status.

Select one from the three types below:

NORMAL : When any line is missing

SOFT : When only head wiping is needed (when lines are bent)

HARD : When poor image quality cannot be improved even by NORMAL or SOFT cleaning

Perform head cleaning depending on the test printing result

There are three types of head cleaning. Use one by checking the test pattern.

1 Press the **FUNC2** (TEST PRINT/CLEANING) key in LOCAL.

- CLEANING MENU will be displayed.

2 Press **▲** **▼** to select the cleaning type.

- **NORMAL** : Select this if any line is missing.
- **SOFT** : When only head wiping is desirable. (in case of bent lines)
- **HARD** : Select this if inferior printing cannot be improved even by [NORMAL] or [SOFT] cleaning.

3 Press the **ENTER** key.

4 Press **▲** **▼** to select the cleaning head, and then press the **FUNC2** (✓).

- After selecting the head, press the [FUNC2] key and put a check in the check box. The head whose box has been checked will be cleaned.
- To have both head 1 and head 2 cleaned, put a check in both their check boxes.

5 Press the **ENTER** key.

6 Perform test printing again, and check the result.

- Repeat the cleaning and the test printing until the drawing result becomes in normal.



- When the image quality is not improved after the head cleaning.
- Clean the wiper and ink cap. (P.5-6)
- Wash the head nozzle. (P.5-7)

Setting of Media Correction

Correct the media feed amount to match the type of media you are using.

If the correction value is not appropriate, stripes may appear on the printed image, thus resulting in a poor printing.




- On completion of [MEDIA COMP.] during use of a roll media, the media returns to the printing origin. Then the roll media in the rear of this machine will slacken. Before printing, take up the slack in the roll media by hand; a loose roll media can result in an inferior image quality.
- When printing with a take-up device, set the media first and then perform media correction.

Setting of Media Correction

A pattern for media correction is printed and a media-feeding rate is corrected.



- Two bands are printed in the correction pattern.
- Make adjustment so that an even color density is obtained in the boundary between the two bands.

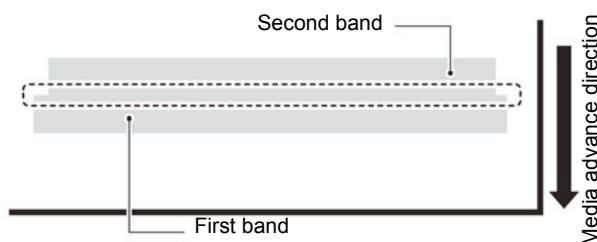

1 Set a media. (P.2-4)

2 Press the **SEL** key, and then press the **FUNC2** (ADJUST) in LOCAL.

- ADJUST MENU will be displayed.

3 Press the **ENTER** key twice to print the correction pattern

4 Check the correction pattern and enter a correction value.


- A screen for entering the correction value will be displayed.
- **Enter a correction value in "+":**
The boundary between the two bands is widened.
- **Enter a correction value in "-":**
The boundary between the two bands is narrowed.
- When you change the correction value by "30", the width of the boundary changes by about 0.1 mm.

If the Positions of Dots Shift...

When the condition for printing (media thickness/ink type/etc.) has been changed, perform the following operation to correct the ink drop position for bidirectional (Bi) printing and obtain the proper printing result.

- Important!**
- When using leaf media, set a media of more than A3 size put horizontally. If a media with narrow width is set, printing will only be conducted to midway.

Example of a Printed Pattern

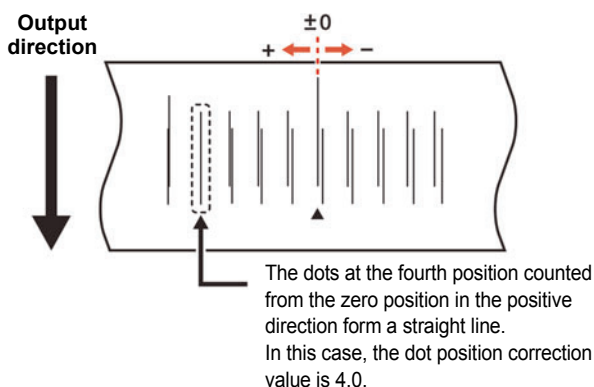

- Press the **SEL** key, and then press the **FUNC1** (ADJUST) in LOCAL.
 - ADJUST MENU will be displayed.
- Press **▼**, and then press the **ENTER** key.
 - "DROP.POScorrect" will be selected.
- Press the **ENTER** key.
 - Printing of the Drop position correct printed pattern will start.
 - Multiple test patterns are printed. (The printed patterns are called Pattern 1, Pattern 2, Pattern 3... in the order of printing.)
- Press **▲** **▼** to enter a correction value of Pattern 1, and then press the **ENTER** key.
 - Corrected feeding rate: -40 to 40
 - Check the test patterns. The position where an outward feeding line and a return feeding line become one straight line is the correction value.
 - When the correction value is not between -40 and 40, adjust the height of the printing heads and then perform the operations in Step 2 and later.
- In the same way as in Step 4, enter a correction value of Pattern 2 and later, and then press the **ENTER** key.
- Press the **END/POWER** key several times to end the setting.


Printing Data

Starting a Printing Operation

Important!

- When using a roll media, rewind the media by hand before printing so that it is not loose. When the roll media has not been rewound tightly, it may cause the image quality to deteriorate.

1 Setting a Media (P.2-4)

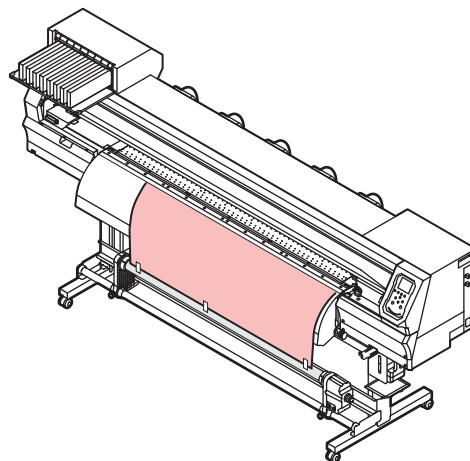


2 Press the **FUNC3** (REMOTE) key in LOCAL.

- The screen changes to REMOTE, and data can be received from the PC.

3 Transmit data to be printed from the PC.

- For the method of data transmission, see the instruction manual for the output software.

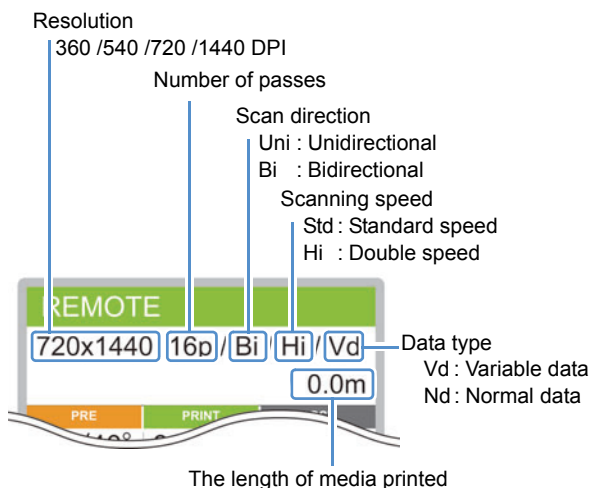

4 Start printing.

- The printing speed may change, depending on the width of the set media or the position of the print origin even when the same data is printed. This is because of a difference in resolution.

Stopping a Printing Operation

Perform the following operation when stopping a printing operation halfway.

1 Press the **FUNC3** (LOCAL) during printing.

- The printing operation stops.
- Interrupt data sending at the PC side during the data is sent from the PC.
- Printing restarts from the interrupted data by repressing the [REMOTE] key.

Deleting Received Data (Data Clear)

When you want to stop printing, delete the already received data.

1 Press the **SEL** key, and then press the **FUNC3** (DATA CLEAR) in LOCAL.

2 Press the **ENTER** key.


- The received data is erased then it returns to the Local.

Cutting a media

By using the keys on the operation panel, you can cut the media at any position.


1 In Local, Press **▲** **▼** **◀** **▶** .

- It enters into the origin setting mode.
- By pressing [**▼**] , feed the media to the cutting position.

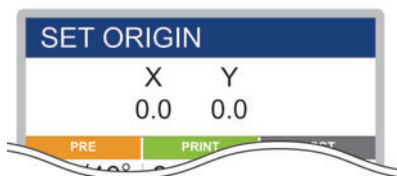


2 Press the **FUNC2** **ENTER** key.

- The media is cut.
- When the cutting has been completed, the current mode returns to LOCAL.

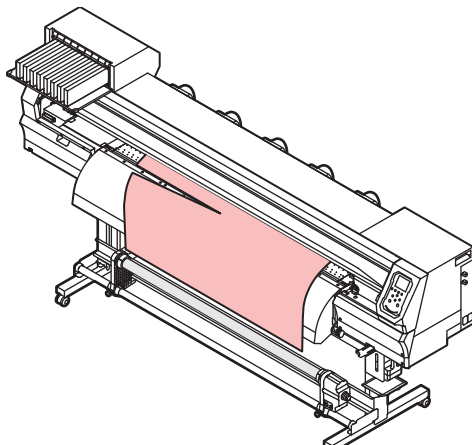


Workflow of cutting


Turning the Power ON/OFF

Referring to “Turning the Power ON/OFF” ( P.2-3).


Setting a Media

Referring to “Setting a Media” ( P.2-4).

Installing Tools

Referring to “Installing Tools” ( P.2-20).

Setting the tool conditions

Referring to “Setting the tool conditions” ( P.2-23).

Test Cutting

Referring to “Test Cutting” ( P.2-25).

Cutting Data

Referring to “Cutting Data” ( P.2-25).

Installing Tools

This machine allows you to use the following tools:

Cutter :

This tool is selected when an image printed on a media is cut or when letters are cut with a cutting media.

Pen (water-based ballpoint pen) :

This tool is used to perform "test printing" for checking how images or letters are cut actually.


When a Cutter Is Used



- **Do not touch the cutter with your fingers.**
The sharp blade edge of the cutter may cause you to get injured.
- **Do not shake the tool after having set the cutter.**
Otherwise, the blade edge may pop out, causing you to get injured.
- Store the cutter blade in a place that is out of the reach of children. In addition, dispose of used cutter blades according to regional laws and regulations.


How to install a cutter

- 1 Remove the cap located at the edge by rotating it, and replace the cutter with a new one using tweezers or the like.**

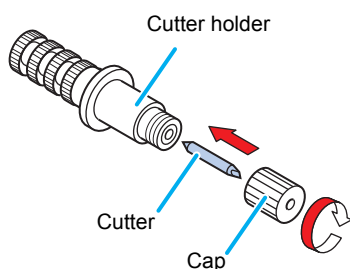

- 2 Turn the adjusting knob to adjust the protruding amount of the cutter.**

- arrow to protrude the cutter blade.
(0.5 mm per revolution)

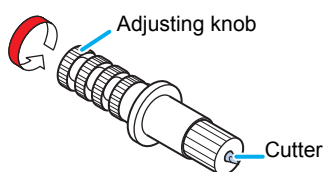

Adjusting the protrusion of the cutter blade

Adjust the cutter blade according to the types of the cutters and the sheet for use.

After adjusting the protrusion of the cutter blade, set the cutting conditions and conduct test cutting to check the cutting quality. For the cutter supplied with unit, the protruding amount of the blade can be adjusted with the cutter mounted in the pen carriage.


Important!

- Take care not to protrude the blade too much. If the cutter is used with its blade excessively protruded, the cutter can cut out the base paper, thus damaging the main unit.

1

Turn the adjusting knob to adjust the protruding amount of the cutter blade.


- arrow to protrude the cutter blade.
(0.5 mm per revolution)

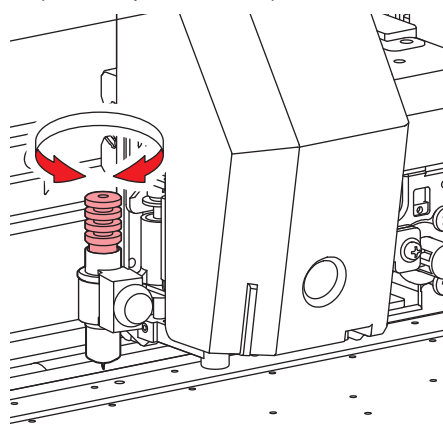

Important!

- See the appendix for the blade adjustment of the cutters other than the auxiliary products.
(P.5-19)

Protruding amount of the cutter blade

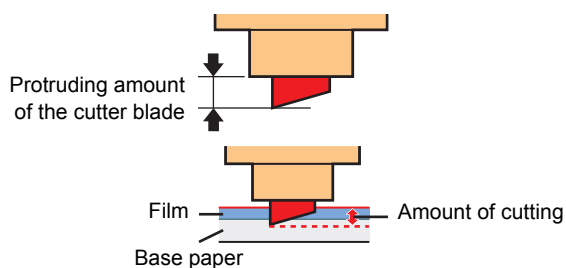

$$\text{Amount of cutting} = \frac{(\text{Film thickness} + \text{Base paper thickness})}{2}$$

- However, Film thickness < Base paper thickness

For reference :

the protruding amount of the cutter blade = 0.2 to 0.5mm
(Replace the blade when it is blunt.)

Important!

- Adjust the blade pressure so that the cutter may leave a little bit of cutter track on the sheet.
- In case the sheet thickness is thinner than the film thickness, which may not provide correct cutting quality, change the protruding amount of the blade and you may get a better result.


How to install the cutter holder

Important!

- Install the cutter holder to the tool holder of the carriage. Be sure to insert the cutter holder all the way in the tool holder.

1


Rotate the knob to loosen the holder presser.

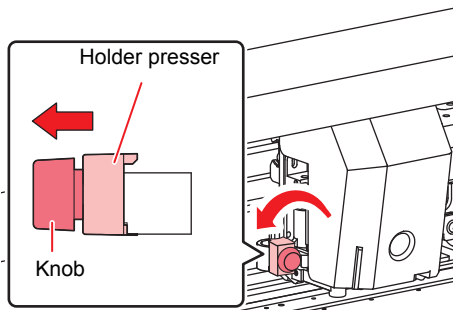

2

Insert the cutter holder into the tool holder.


- Push the brim of the cutter holder against the tool holder.
- Press the brim of the cutter holder with the holder presser.

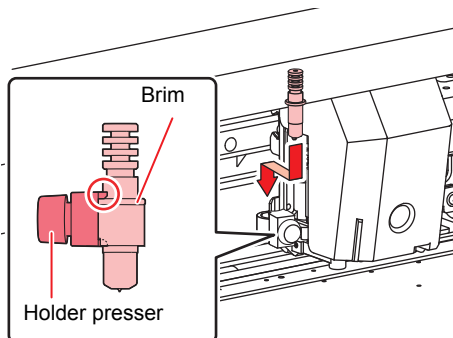

3

Fix the cutter holder.

- Turn the knob of the tool holder clockwise, and surely fix it.

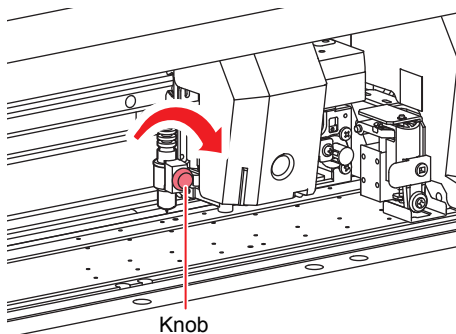

Important!

- Fix the cutter holder firmly. If not, accurate and high-quality cutting will not be achieved.


How to Install a Ballpoint Pen

Important!

- When you want to use a commercially available ballpoint pen, you must use the pen of 8mm to 9mm in diameter. Image quality may depend on the pen. (Recommended ballpoint pen: the one available from Pentel Co., Ltd. with the product No.: K105-A, K105-GA)
- Regarding such ballpoint pens as shown below, the pen inclines to touch the cover when held by the pen adapter (the pen that the pen holder girth of which may vary, the pen that the pen holder of which has umbo and differences)



Uneven gauge

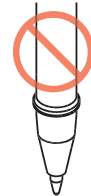

With steps or bumps

1

Put the cap on the pen adapter.

- Use the cap to adjust the pen height.

2

Insert the pen into the pen adapter.

- Insert the pen until the tip of the pen reaches the cap.


3

Fix the tip of the pen.

- Tighten the fixing screw clockwise.
- Be careful not to over-tighten the fixing screw for the pen adapter. If tightened too much, the ballpoint pen may crack.


4

Remove the cap.

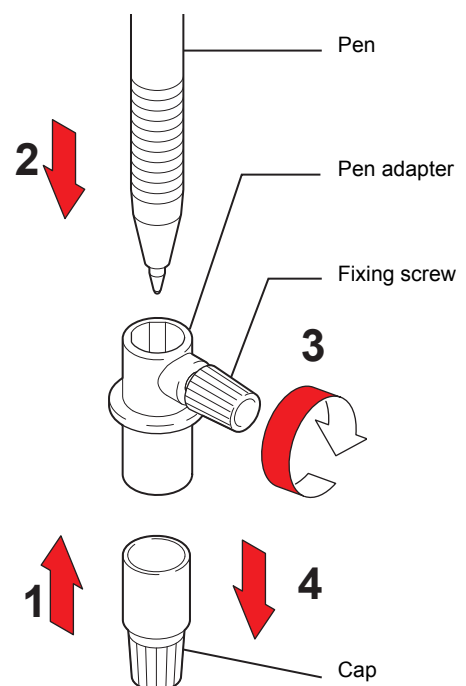

5

Rotate the knob to loosen the holder presser.

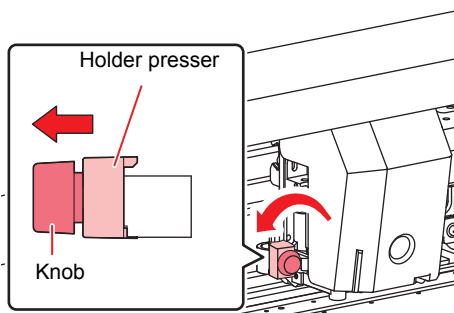


6

Insert the pen adapter with the pen into the tool holder.

- Make sure that the brim of the pen adapter is rested on the tool holder.
- Set the adapter in such a way that the fixing screw will not obstruct operation.
- Press the brim of the pen adapter with the holder presser.

Insert until it is rested

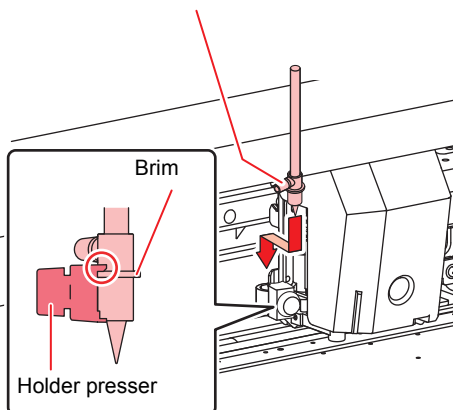

7


Turn the knob clockwise to fix the tool.

- Turn the knob of the tool holder clockwise, and surely fix it.




- Instead of the ballpoint pen, you can attach the refill that comes with it. Follow the procedure below to attach the ballpoint pen refill to the pen adapter, then put it into the tool holder in the same way as in step 6.

(1) Insert a spring into the pen tip.

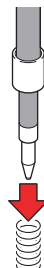

(2) While pressing the cap onto the spring, attach it on the pen adapter.

- Rotate the cap to the direction indicated with an arrow and attach it on the pen adapter.

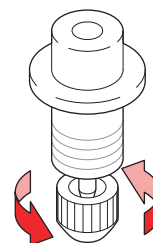

Important!


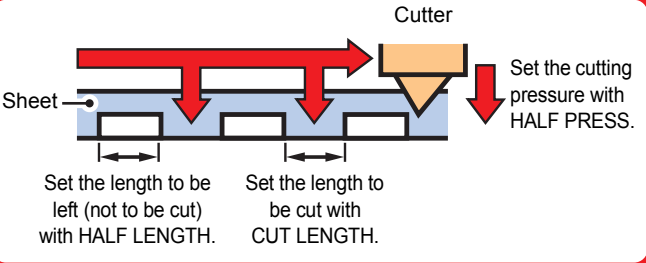
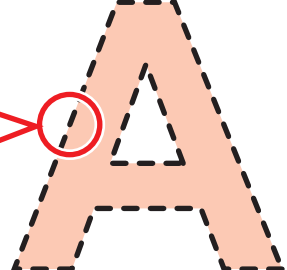
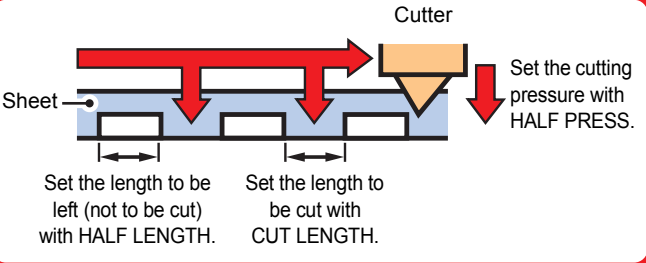
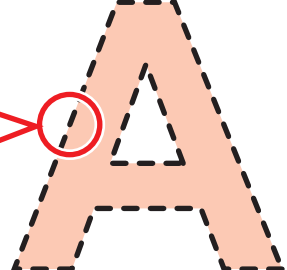
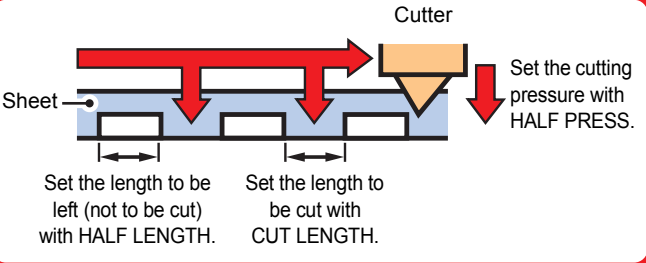
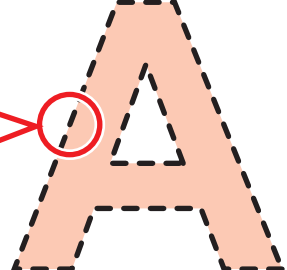
- When you replace the ballpoint pen (SPB-0726), contact a distributor in your district or our office to call for service

Setting the tool conditions

You can register the cutting speed and the pressure depending on the sheet or the tool type to be used. (Tool condition)

Kinds of the Tool Conditions

A tool condition consists of cutting conditions (CUT1 to CUT7), printing-with-a-pen condition (PEN).

Kinds	Description			
Cutting Condition (CUT1 to 7)	<p>This is a tool condition when a cutter is used.</p> <p>When you press the , it moves to the half cut condition.</p> <div><div><div><div><div><CUT CONDITION></div><div>CUT12012030</div><div>SPEEDPRESSOFFSET</div><div>FUNC</div><div>TOOL</div><div>REMOTE</div></div><div><div>OFFSET</div><div>The distance from the center of the cutter holder to the cutter blade. (0.01mm)</div></div><div><div>PRESS</div><div>The pressure required for cutting. (g)</div></div><div><div>SPEED</div><div>The speed of cutting.</div></div></div><div>Cutting condition No.(1 to 7)</div></div><div><div><div><div><CUT CONDITION></div><div>ON82.060</div><div>HALFH-PRESH-LENGC-LENG</div><div>FUNC</div><div>TOOL</div><div>REMOTE</div></div><div><div>CUT LENGTH</div><div>Length to be cut. (mm)</div></div><div><div>HALF LENGTH</div><div>Length to be left (not to be cut). (mm)</div></div><div><div>HALF PRESS</div><div>Pressure of left part. (g)</div></div></div><div>HALF Valid (ON) or invalid (OFF) of half cut.</div></div></div> <tr><td><div><div><div><div>About Half Cutting</div></div><div><p>You can cut on the dotted line, not to cut sheet out. (Half cut)</p><p>When you set half cut to valid (ON), you can use the half cut function.</p><p>The cutting condition changes from CUT to HLF when Half Cut is changed to “Valid (ON)”.</p></div></div><div><div><div><div><div><div>Cutter</div><div>Sheet</div></div><div></div><div><div>Set the length to be left (not to be cut) with HALF LENGTH.</div><div>Set the length to be cut with CUT LENGTH.</div></div><div><div>Set the cutting pressure with HALF PRESS.</div></div></div><div><div><div>Important!</div><div><ul style="list-style-type: none">The illustration above is the image. The shape of cut surface differs depending on the cutting conditions.</div></div><div></div></div></div></div></div></div></td></tr> <tr><td>Plotting Condition (PEN)</td><td><p>This is a tool condition when the pen is used.</p><div><div><div><div><div><CUT CONDITION></div><div>PIN20120</div><div>H-PRESH-LENGC-LENG</div><div>TOOL</div></div><div><div>PRESS</div><div>The pressure required for plotting. (g)</div></div><div><div>SPEED</div><div>The speed of plotting.</div></div></div></div></div></td></tr>	<div><div><div><div>About Half Cutting</div></div><div><p>You can cut on the dotted line, not to cut sheet out. (Half cut)</p><p>When you set half cut to valid (ON), you can use the half cut function.</p><p>The cutting condition changes from CUT to HLF when Half Cut is changed to “Valid (ON)”.</p></div></div><div><div><div><div><div><div>Cutter</div><div>Sheet</div></div><div></div><div><div>Set the length to be left (not to be cut) with HALF LENGTH.</div><div>Set the length to be cut with CUT LENGTH.</div></div><div><div>Set the cutting pressure with HALF PRESS.</div></div></div><div><div><div>Important!</div><div><ul style="list-style-type: none">The illustration above is the image. The shape of cut surface differs depending on the cutting conditions.</div></div><div></div></div></div></div></div></div>	Plotting Condition (PEN)	<p>This is a tool condition when the pen is used.</p> <div><div><div><div><div><CUT CONDITION></div><div>PIN20120</div><div>H-PRESH-LENGC-LENG</div><div>TOOL</div></div><div><div>PRESS</div><div>The pressure required for plotting. (g)</div></div><div><div>SPEED</div><div>The speed of plotting.</div></div></div></div></div>
	<div><div><div><div>About Half Cutting</div></div><div><p>You can cut on the dotted line, not to cut sheet out. (Half cut)</p><p>When you set half cut to valid (ON), you can use the half cut function.</p><p>The cutting condition changes from CUT to HLF when Half Cut is changed to “Valid (ON)”.</p></div></div><div><div><div><div><div><div>Cutter</div><div>Sheet</div></div><div></div><div><div>Set the length to be left (not to be cut) with HALF LENGTH.</div><div>Set the length to be cut with CUT LENGTH.</div></div><div><div>Set the cutting pressure with HALF PRESS.</div></div></div><div><div><div>Important!</div><div><ul style="list-style-type: none">The illustration above is the image. The shape of cut surface differs depending on the cutting conditions.</div></div><div></div></div></div></div></div></div>			
Plotting Condition (PEN)	<p>This is a tool condition when the pen is used.</p> <div><div><div><div><div><CUT CONDITION></div><div>PIN20120</div><div>H-PRESH-LENGC-LENG</div><div>TOOL</div></div><div><div>PRESS</div><div>The pressure required for plotting. (g)</div></div><div><div>SPEED</div><div>The speed of plotting.</div></div></div></div></div>			


Select the tool condition

Before cutting (plotting), select the tool condition depending on the sheet and the tool type to be used.

1 Press the **[FUNC1]** (TOOL設定) key in LOCAL mode.

2 Press the **[FUNC1]** key to select a tool condition to be used.

- Each time you press the [FUNC1] key, the tool condition is switched as follows.

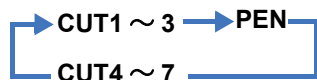

3 Cutting. (P.2-22)

Set the Tool Conditions

Set the condition to cut or to plot with a pen.

Setting contents of cutting condition (CUT1 to 7):
Cut speed (SPEED)/ cut pressure (PRESS)/ OFFSET value/ Half cut

Setting contents of plotting condition (PEN):
Plotting speed (SPEED)/ pen pressure (PRESS)

1 Press the **[FUNC1]** (TOOL設定) key in LOCAL.

2 Press the **[FUNC1]** key to select a tool condition to be set.

3 Press **[▲]** **[▼]** to set the cutting speed.

- Set the moving speed of the tool for cutting or pen plotting.
- Setting values** : 1 to 10cm/s (settable by 1cm/s step)
15 to 70cm/s (settable by 5cm/s step)

4 Press **[◀]** to move the cursor to cutting pressure (PRESS).

5 Press **[▲]** **[▼]** to set the cutting pressure.

- Set the pressure that the tool presses the sheet for cutting or pen plotting.
- Setting values** : 10 to 20g (settable by 2g step)
25 to 100g (settable by 5g step)
110 to 500g (settable by 10g step)




- When the cutting (plotting) pressure setting is completed, proceed to the setting of the
- OFFSET value. When you set the plotting condition (PEN), you cannot set the OFFSET value and half cut. Proceed to the Step 16.
- The maximum pressure at selecting PEN is 150g.

6 Press **[▶]** to move the cursor to OFFSET.

7 Press **[▲]** **[▼]** to set the offset value.

- When you set the cutting condition (CUT1 to 7), set the distance between the center of the cutter holder and the blade tip.
- Setting values** : 0 to 250 (0.00 to 2.50mm) (settable by 0.05mm step)

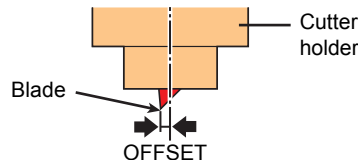

- Nothing is displayed on the LCD if "0" is specified.

8 Press **[▶]** to move the cursor to half cut ON/OFF.

9 Press **[▲]** **[▼]** to set ON/OFF.

- When you perform half cut, select ON and proceed to the Step 10.
- When you do not want to set AUTO CUT, select "OFF" and proceed to Step 16.

10 Press **[▶]** to move the cursor to pressure setting of left part (not to be cut).

11 Press **[▲]** **[▼]** to set pressure.

- Set the pressure of the left part (not to be cut) when performing half cut.
- Setting values** : 0 to 300g (settable by 5g step)

12 Press **[▶]** to move the cursor to the setting of length to be left.

13 Press **[▲]** **[▼]** to move the cursor to the setting of length to be left.

- Set the length to be left not to be cut when performing half cut.
- Setting values** : 1 to 5mm (settable by 0.1mm step)

14 Press **[▶]** to move the cursor to the setting of cut length.

15 Press **[▲]** **[▼]** to set the cut length.

- Set the length to be cut when performing half cut.
- Setting values** : 5 to 150 mm
(5 to 20mm: 1mm step, 20 to 150mm: 5mm step)

16 Press **[END/POWER]** the key to register the set contents.

- Return to the local.




- The set value is retained even when the power is turned "OFF".

Test Cutting

Execute test cutting to confirm the tool conditions.

In the test cutting, the plotter cuts two squares.

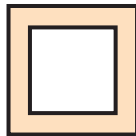

- When the cutter blade is worn and dull, you can use it temporarily by enhancing the value of PRESSURE. However, you are recommended to replace the worn cutter blade with a new one to ensure a satisfactory cutting quality.



When the tool conditions are proper, the results of test cutting are as follows:

- The two squares are cut perfectly.
- The base media remains uncut.
- No corner of the squares is rounded.
- No corner of the squares is curled-up.

1

Press the **SEL** key, and then press the **FUNC1** (TEST CUT) in LOCAL.

- TEST CUT will be displayed.

2

Press the **ENTER** key.

- The plotter will execute test cutting and then return to the local mode display.

Change the settings of the cut conditions according to the test cutting results.

Cut Condition	Cause	Solution
Some parts uncut.	The blade is lifted above the media because of a too high cutting speed.	Lower the speed. (P.2-24).
		Tighten up the knob for the tool holder. (P.2-21).
The base media has been cut.	Too high pressure.	Lower the pressure. (P.2-24).
	Too large protrusion of the cutter blade.	Adjust the protrusion of the cutter blade. (P.2-20).
Any of the square corners rounded.	Improper OFFSET value.	Adjust the OFFSET value so that it suits the cutter blade in use. (P.2-24).
Any of the square corners curled-up.	The protruded cutter blade is too much.	Adjust the protrusion of the cutter blade. (P.2-20).
	The cutting pressure is higher.	Adjust the cutting pressure. (P.2-24).
	The [COMPENSATION PRESSURE OFFSET value] is large. More than two out of the above fall under this category.	Adjust the ADJ-PRS OFS value. (P.4-8).

Cutting Data

You can start cutting after completion of setting up a tool, a media and the tool conditions.

Setting the origin

The origin is a reference point for the cutting data.

When the origin is changed, set the new origin before starting cutting.




- Change the origin before cutting the next data; otherwise, cutting will be performed over the previous data.

1

Move the carriage to a point at which the new origin is to be set.

- [▶] : Moves the carriage to the right.
- [◀] : Moves the carriage to the left.
- [▲] : Feeds the media to the rear of the plotter.
- [▼] : Feeds the media to the front of the plotter.

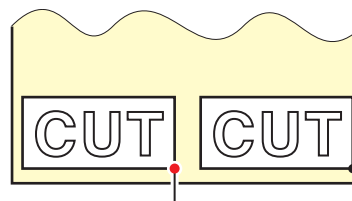

New origin

2

Press the **ENTER key to register the origin.**

- The display panel will show the effective cutting area first and then the tool conditions.

Start cutting


1 After completion of setting the origin, press the **[FUNC3] (REMOTE)**.

- The screen changes to REMOTE, and data can be received from the PC.


2 Transmit data to be cut from the PC.

- On receiving the data, the plotter performs cutting while displaying the remaining amount of the data.
- Upon completion of cutting, the display changes as shown at below.

When the cutter is selected

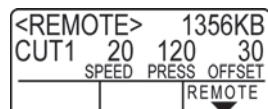

When the pen is selected

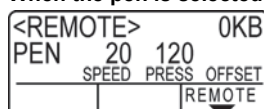

Bringing the cutting to a halt

To temporarily stop the plotter during cutting, press the **[FUNC3] (REMOTE)** key once. Another press of the key will make the plotter resume cutting.



- In case the media has slipped off the plotter during cutting operation, turn off the power immediately; otherwise, the main unit may be damaged.



- The LCD will show the error message "ERROR 902/ DATA REMAIN" if you try to execute any function that can initiate some action during temporary suspension or any operation that can affect the command coordinate system.
- If the error message appears, let the plotter complete the cutting for the remaining portion of the data or discontinue the cutting by executing data clearing (P.2-26).

Stopping a Cutting Operation (Data Clear)

If you want to stop a cutting operation of the received data, clear the data.



- When clearing the data, the process will not restart even if you press the **[FUNC3] (REMOTE)** key.
- After clearing the data, switching to the remote mode and receiving another data, new data will be cut.



- Do not perform the data clearance during the data transmitting.
- Even after performing the data clearance, the received data is stored in the reception buffer.

1 Press the **[SEL]** key, and then press the **[FUNC3] (DATA CLEAR)** in LOCAL.

2 Press the **[ENTER]** key.


- The reception buffer is cleared, and the present mode returns to LOCAL..

Cutting a media

By using the keys on the operation panel, you can cut the media at any position.


1 In Local, Press **[▲] [▼] [◀] [▶]**.

- It enters into the origin setting mode.
- By pressing **[▼]**, feed the media to the cutting position.

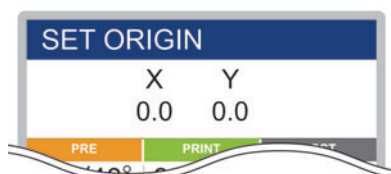

2 Press the **[FUNC2] [ENTER]** key.

- The media is cut.
- When the cutting has been completed, the current mode returns to LOCAL.

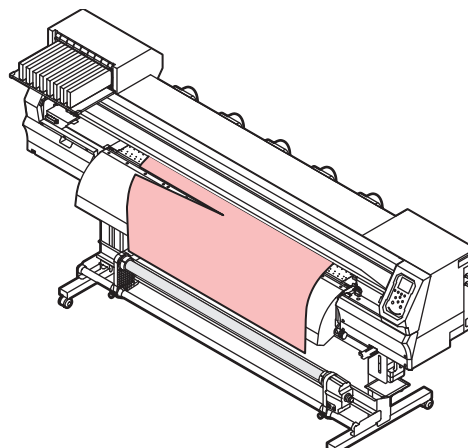

Chapter 3

Setup




This chapter

describes the various setting of this machine.

About SETUP MENU	3-2	Setting Time.....	3-11
SETUP MENU table	3-3	Setting Unit (Temperature/ Length)	3-11
Setting of Media Correction.....	3-4	Setting a KEY BUZZER.....	3-11
If the Positions of Dots Shift.....	3-4	Setting the CONFIRM. FEED	3-11
Setting the HEATER	3-5	Set the network.....	3-12
Setting of Logical Seek	3-5	Setting event mail function.....	3-12
Setting of Drying Time.....	3-6	Initializing the Settings	3-16
Setting of Left and Right Margins.....	3-6	About NOZZLE CHECK MENU	3-17
Setting of VacuumFan.....	3-6	INFORMATION MENU table	3-17
Setting of Feed Speed	3-7	Printing Check Flow.....	3-18
Setting Auto Cleaning	3-7	Printing Operations at “Nozzle Missing”	
Setting Interval wiping	3-7	Judgment and Error Occurrence	3-18
About MACHINE SETUP MENU	3-8	Setting the Printing Check	3-19
MACHINE SETUP MENU table	3-9	Setting the NOZZLE RECOVERY	3-19
Setting a AUTO Power-off.....	3-10	Setting the Judgement Condition.....	3-19
Setting Take-up unit	3-10	About INFORMATION MENU	3-20
Setting the Display of Media Residual	3-10	INFORMATION MENU table	3-21
Setting a LANGUAGE	3-11	Displaying the Information	3-21


About SETUP MENU

On **SETUP MENU**, you can set the print conditions to match the media you usually use.

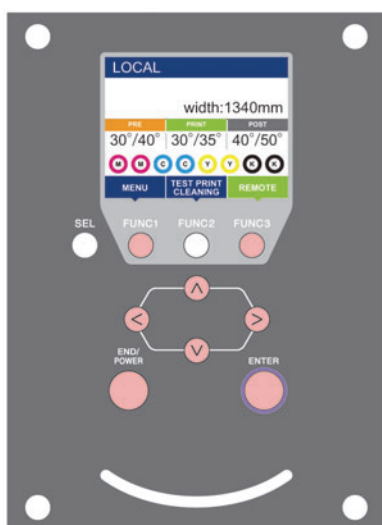

- FUNC1** : Press this to select SETUP MENU, or to switch to the previous screen.
- FUNC3** : Press this to switch to the next screen.
- ▲ ▼** : Use these to select a setting item.
- ENTER** : Press this to confirm a setting, etc..

◆ SETUP MENUs at-a-glance

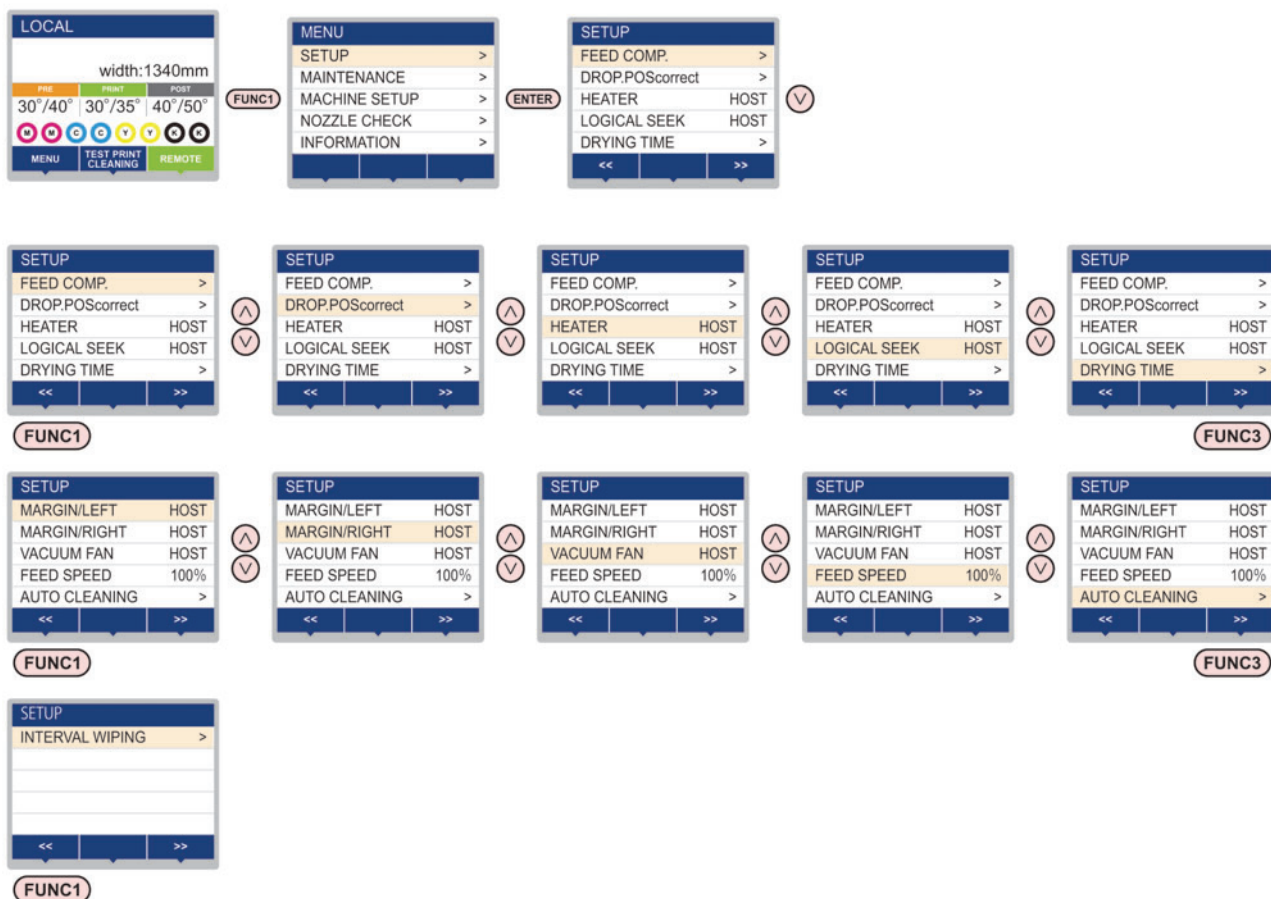

SETUP MENU table



- For each setting item below, you can set it so that the machine may operate according to the value specified when you printed from your RIP software in the connected host PC.
- Set Item** : DRYING TIME/ MARGIN (LEFT and RIGHT)/ VACUUM FAN/ FEED SPEED
- When you operate the machine according to the contents specified with the RIP software, set each item to "Host" when registering this machine type. When you set it other than "Host", the machine operates according to the machine setting.
- For the specifying method with the RIP software, refer to the operation manual of the RIP software.

Function name		Set value	When no instruction from RIP exists *1	Outline	
FEED COMP. (🖨️ P.3-4)		-9999 to <u>0</u> to 9999	_____	Used to print a pattern for correcting a media-feeding rate and correct it.	
DROP.POScorrect (🖨️ P.3-4)		-40.0 to <u>0</u> to 40.0	_____	Used to adjust the dot position in go and return printing.	
HEATER (🖨️ P.3-5)	PRE	OFF/ 20 to 60 °C (OFF/ 68 to 140°F)	_____	Sets each heater's conditions.	
	PRINT				
	POST				
LOGICAL SEEK (🖨️ P.3-5)		HOST/ON / OFF	OFF	Sets the scan movable area during printing.	
DRYING TIME (🖨️ P.3-6)	SCAN	HOST/0.0 to 9.9 sec	0 sec	Sets the time to wait for ink drying.	
MARGIN/LEFT (🖨️ P.3-6)		-10 to 85mm	0 mm	Sets a non-printing area along the right and left edges of the media.	
MARGIN/RIGHT (🖨️ P.3-6)			0 mm		
VACUUM FAN (🖨️ P.3-6)		HOST/ WEAK/ STANDARD/ STRONG	STRONG	Sets the absorbability of the media.	
FEED SPEED *2 (🖨️ P.3-7)		10 to <u>100</u> to 200%	100 %	Changes the media feeding speed in printing.	
AUTO CLEANING (🖨️ P.3-7)	OFF, FILE, LENGTH, TIME		_____	Sets the automatic cleaning operation for the head performed before printing or during printing.	
	FILE	INTERVAL	1 to 1000		_____
		TYPE	NORMAL/ SOFT/ HARD		_____
	LENGTH	INTERVAL	0.1 to 100.0m		_____
		TYPE	NORMAL/ SOFT/ HARD		_____
	TIME	INTERVAL	10 to 120 min		_____
TYPE		NORMAL/ SOFT/ HARD	_____		
INTERVAL WIPING (🖨️ P.3-7)		3 to 255 分 , OFF	_____	Sets the wiping operation performed after printing is completed.	

*1. This is the setting value to be used for printing when setting value is not specified at the RIP software (host) side, or, you give priority to the setting value at the machine side.

*2. When you set this to "100%" or more, required time for completion of printing will be shortened. However, enough drying time cannot be ensured and it may affect the image quality.

Setting of Media Correction

Correct the media feed amount to match the type of media you are using.

If the correction value is not appropriate, stripes may appear on the printed image, thus resulting in a poor printing.




- On completion of [MEDIA COMP.] during use of a roll media, the media returns to the printing origin. Then the roll media in the rear of this machine will slacken. Before printing, take up the slack in the roll media by hand; a loose roll media can result in an inferior image quality.

A pattern for media correction is printed and a media-feeding rate is corrected.



- Two bands are printed in the correction pattern.
- Make adjustment so that an even color density is obtained in the boundary between the two bands.

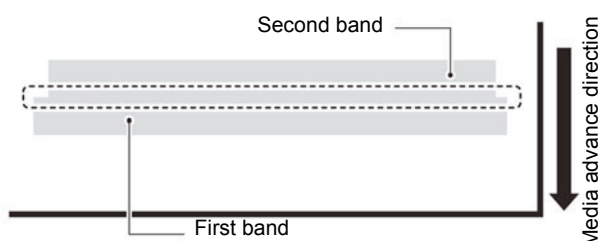

1

Set a media. (P.2-4)

2

Press the **FUNC1 (MENU) → **ENTER** key in LOCAL.**

- SETUP MENU will be displayed.

3

Press the **ENTER key.**

- "FEED COMP." will be selected.

4

Press **ENTER the key twice to print a correction pattern.**

5

Check the correction pattern and enter a correction value.

- A screen for entering the correction value will be displayed.
- Enter a correction value in "+":**
The boundary between the two bands is widened.
- Enter a correction value in "-":**
The boundary between the two bands is narrowed.
- When you change the correction value by "30", the width of the boundary changes by about 0.1 mm.

6

Press the **ENTER key.**

- Print a correction pattern again and check it.
- When media correction is needed, perform the operation in Step 7 to make correction.

7

Press the **END/POWER key several times to end the setting.**

Correcting Media-feeding during Printing

A media-feeding rate can be corrected even in the remote mode or when image data is printed.

1

Press the **FUNC1 (ADJUST) → **ENTER** key in the Remote.**

2

Press **▲ **▼** to enter a corrected feeding rate.**

- Corrected feeding rate: -9999 to 9999
- The value entered here is reflected in the corrected feeding rate soon.

3


Press the **ENTER twice key.**

- key. The changed value is registered.
- When you press the [ENTER] key instead of the [END] key, the value entered here will be valid temporarily. (When you perform media detection again or turn the power OFF, the correction value is cleared.)

If the Positions of Dots Shift...

When the condition for printing (media thickness/ink type/etc.) has been changed, perform the following operation to correct the ink drop position for bidirectional (Bi) printing and obtain the proper printing result.

Example of a Printed Pattern

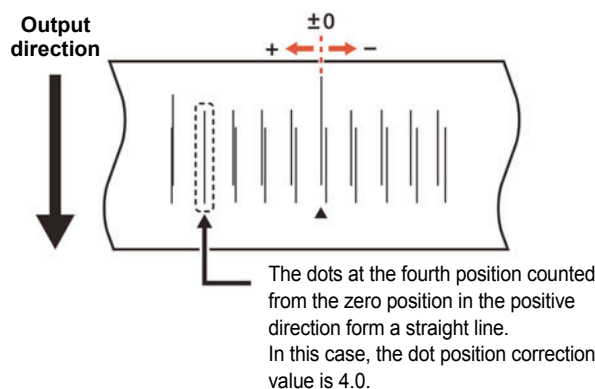

1

Set a media on the machine. (P.2-4)

- In order to print a pattern, a media that is 500 mm wide at least is necessary.

2

Press the **FUNC1 (MENU) → **ENTER** key in LOCAL.**

- SETUP MENU will be displayed.

3

Press **▼, and then press the **ENTER** key.**

- "DROP.POScorrect" will be selected.

4

Press the **ENTER** key.

- Start the pattern printing.
- Multiple test patterns are printed. (The printed patterns are called Pattern 1, Pattern 2, Pattern 3... in the order of printing.)

5

Press **▲** **▼** to enter a correction value of Pattern 1, and then press the **ENTER** key.

- Corrected feeding rate: -40 to 40
- Check the test patterns. The position where an outward feeding line and a return feeding line become one straight line is the correction value.
- When the correction value is not between -40 and 40, adjust the height of the printing heads and then perform the operations in Step 2 and later.

6

In the same way as in Step 4, enter a correction value of Pattern 2 and later, and then press the **ENTER** key.

7

Press the **END/POWER** key several times to end the setting.

Setting the HEATER

Pre-heater /Print heater / Post-heater are equipped on the platen.

Type of HEATER	Function
Pre-heater	Used for pre-heating of the media prior to printing to prevent rapid temperature changing.
Print-heater	Improves the image quality in printing.
Post-heater	Dries ink after printing.

1

Press the **FUNC1** (MENU) **→** **ENTER** key in LOCAL.

- SETUP MENU will be displayed.

2

Press **▼** twice, and then press the **ENTER** key.

- "HEATER" will be selected.

3

Set each heater temperature by pressing **▲** **▼** **◀** **▶**.

- Heater selecting : by the **▲**/**▼** keys
- Temperature setting : by the **◀**/**▶** keys

4

Press the **END/POWER** key several times to end the setting.




- press **[FUNC3]** (off) in Step 3 to turn all heaters OFF.
or, press **[FUNC1]** to raise all heaters by 10°C.


Setting of Logical Seek

The head's operation varies depending on the LOGICAL SEEK settings, as shown in the figure below.

Movement of heads when LOGICAL seek is OFF

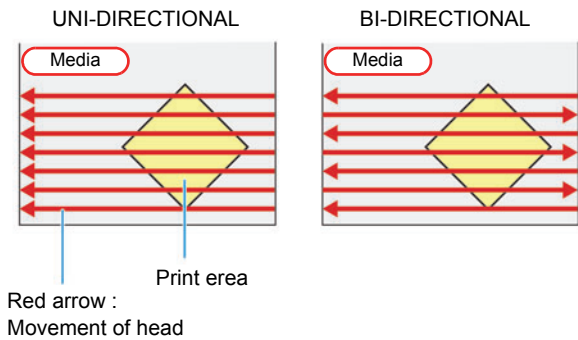

Movement of heads when LOGICAL seek is ON

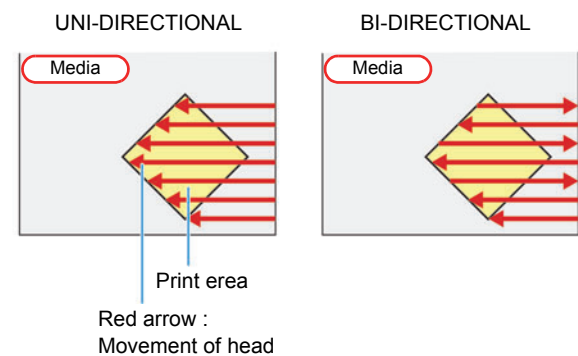

1

Press the **FUNC1** (MENU) **→** **ENTER** key in LOCAL.

- SETUP MENU will be displayed.

2

Press **▼**, and then press the **ENTER** key.

- "LOGICAL SEEK" will be selected.

3

Press **▲** **▼** to select a set value, and then press the **ENTER** key.

- Set value : HOST / ON / OFF

4

Press the **END/POWER** key several times to end the setting.

Setting of Drying Time

In the drying time setting, the following items for ink drying time are set.

- **SCAN** : Ink drying time for each scanning is set. (During bidirectional printing, the machine stops for a certain period of time specified for each of the outward and return scanning.)



- When you give priority to the setting at the RasterLink side, make the setting value "Host".
- "SCAN" set in this machine is displayed as "Pause Time per Scan" in the RasterLink.
- You cannot specify the print end at the RasterLink side. When you set this machine to "Host", printing will be performed in "PRINT END= 0 sec." status.

1 Press the **FUNC1 (MENU)** ➡ **ENTER** key in **LOCAL**.

- SETUP MENU will be displayed.

2 Press **▼** times, and then press the **ENTER** key.

- "DRYING TIME" will be selected.

3 Press the **ENTER** key.

4 Press **▲** **▼** **◀** **▶** to set drying time, and then press the **ENTER** key.

- Set the drying time for canning and after printing is completed. To enable the drying time specified in your RIP, select "Host".
- **Setting value** :
Host or 0.0 sec. to 9.9 sec.
- **Item selecting** : by the **▲****▼** keys
- **Time setting** : by the **◀****▶** keys

5 Press the **END/POWER** key several times to end the setting.

Setting of Left and Right Margins

Set a non-printing area along the left and right edges of the media.

The offset value against the standard margin 15mm is set hereupon.



- When you give priority to the setting at the RIP software side, make the setting value "Host".
- You cannot specify the margins at the attached RIP software (RasterLink). When you use the RasterLink, if you set this machine to "Host", printing will be performed in "Margins for right and left off set value= 0 mm" status.
- The margin setting is reflected when the media width is detected.

1 Press the **FUNC1 (MENU)** ➡ **ENTER** key in **LOCAL**.

- SETUP MENU will be displayed.

2 Press the **FUNC3 (PAGE>)**.

3 Press the **▼** times to select "Margin/L" or "Margin/R", and then press the **ENTER** key.

4 Press **▲** **▼** to select a set value, and then press the **ENTER** key.

- Set value : HOST / -10 to 85 mm

5 Press the **END/POWER** key several times to end the setting.



- Pay attention to that printing may start on the media press if a right and left margin is set to 5 mm or less when the media press is used in printing.

Setting of VacuumFan

Sets the absorbability of the media.

By setting the absorption power to match the media, you can prevent print errors due to media rise-up.

1 Press the **FUNC1 (MENU)** ➡ **ENTER** key in **LOCAL**.

- SETUP MENU will be displayed.

2 Press the **FUNC3 (PAGE>)**, and then press **▼**.

- "VACUUM FAN" will be selected.

3 Press the **ENTER** key.

4 Press **▲** **▼** to select a set value, and then press the **ENTER** key.

- Set value : HOST/WEAK /STANDARD/ STRONG

5 Press the **END/POWER** key several times to end the setting.

Setting of Feed Speed

Changes the media feeding speed in printing.

- 1** Press the **FUNC1** (MENU) ➡ **ENTER** key in **LOCAL**.
 - SETUP MENU will be displayed.
- 2** Press the **FUNC3** (PAGE>), and then press **▼**.
 - "FEED SPEED" will be selected.
- 3** Press the **ENTER** key.
- 4** Press **▲** **▼** to select a set value, and then press the **ENTER** key.
 - Set value : HOST / 10 to 200%
- 5** Press the **END/POWER** key several times to end the setting.

Setting Auto Cleaning

You can set the machine so that it counts the number of printed files or the length or time after printing has been completed, and performs cleaning automatically if required. You can select the auto cleaning setting from three types below:

- **PAGE** : Set the cleaning intervals by the number of printed files.
- **LENGTH** : Set the cleaning intervals by the printed length.
- **TIME** : Set the cleaning intervals by the printed time.

The machine can perform a stable printing operation with its heads always kept clean.

- 1** Press the **FUNC1** (MENU) ➡ **ENTER** key in **LOCAL**.
 - SETUP MENU will be displayed.
- 2** Press the **FUNC3** (PAGE>), and then press **▼** times.
 - "AUTO CLEANING" will be selected.
- 3** Press **ENTER** key, and then press **▲** **▼** to select the type of auto cleaning.
 - There are "PAGE", "LENGTH" and "TIME" for auto cleaning.
 - FILE** : When the set number of prints has been completed, the machine performs head cleaning automatically.
 - LENGTH** : When the set length has passed, the machine performs head cleaning automatically.
 - TIME** : When the set time has passed, the machine performs head cleaning automatically.
 - If you do not set auto cleaning, first select "OFF" and then proceed to the Step 6.

- 4** Press **ENTER** key, and then press **▲** **▼** to select the cleaning interval.
 - Depending on the auto cleaning type selected in the Step 3, the setting value differs.
 - For **FILE** : 1 to 1000 file
 - For **LENGTH** : 0.1 to 100.0m (in 0.1m increment)
 - For **TIME** : 10 to 120min (in 10min increment)
- 5** Press **ENTER** key, and then press **▲** **▼** to select the cleaning type.
 - Set Value : NORMAL/ SOFT/HARD
- 6** Press the **ENTER** key.
- 7** Press the **END/POWER** key several times to end the setting.
 - Depending on the state of the heads, etc., the image quality deterioration may not be improved even with this function performed. In this case, contact our service office or the distributor in your region.

Setting Interval wiping


When the set time has passed, nozzle face of the head is cleaned automatically to remove ink droplets on the nozzle face.

In case that deflection, nozzle missing, or symptom which ink droplets fall down occurred, set the interval between each operation shorter.

- 1** Press the **FUNC1** (MENU) ➡ **ENTER** key ➡ **FUNC1** (<<) in **LOCAL**.
 - SETUP MENU will be displayed.
- 2** Press the **FUNC3** (PAGE>), and then press **▼** 4 times.
 - "INTERVAL WIPING" will be selected.
- 3** Press **▲** **▼** to set intervals.
 - Set Value : 3 to 255 Minutes, OFF
 - When [OFF] is set, periodical wiping is not executed.
- 4** Press the **ENTER** key.
- 5** Press the **END/POWER** key several times to end the setting.


About MACHINE SETUP MENU

Common settings are functions for using this machine easily.
The following items can be set in Machine settings.

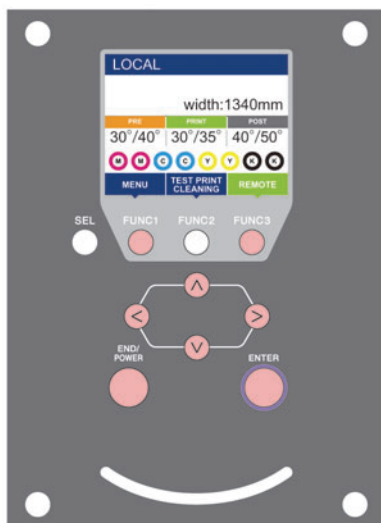




- FUNC1** : Press this to select MACHINE SETUP MENU, or to switch to the previous screen.
- FUNC3** : Press this to switch to the next screen.
- ↑ ↓** : Use these to select a setting item.
- ENTER** : Press this to confirm a setting, etc..

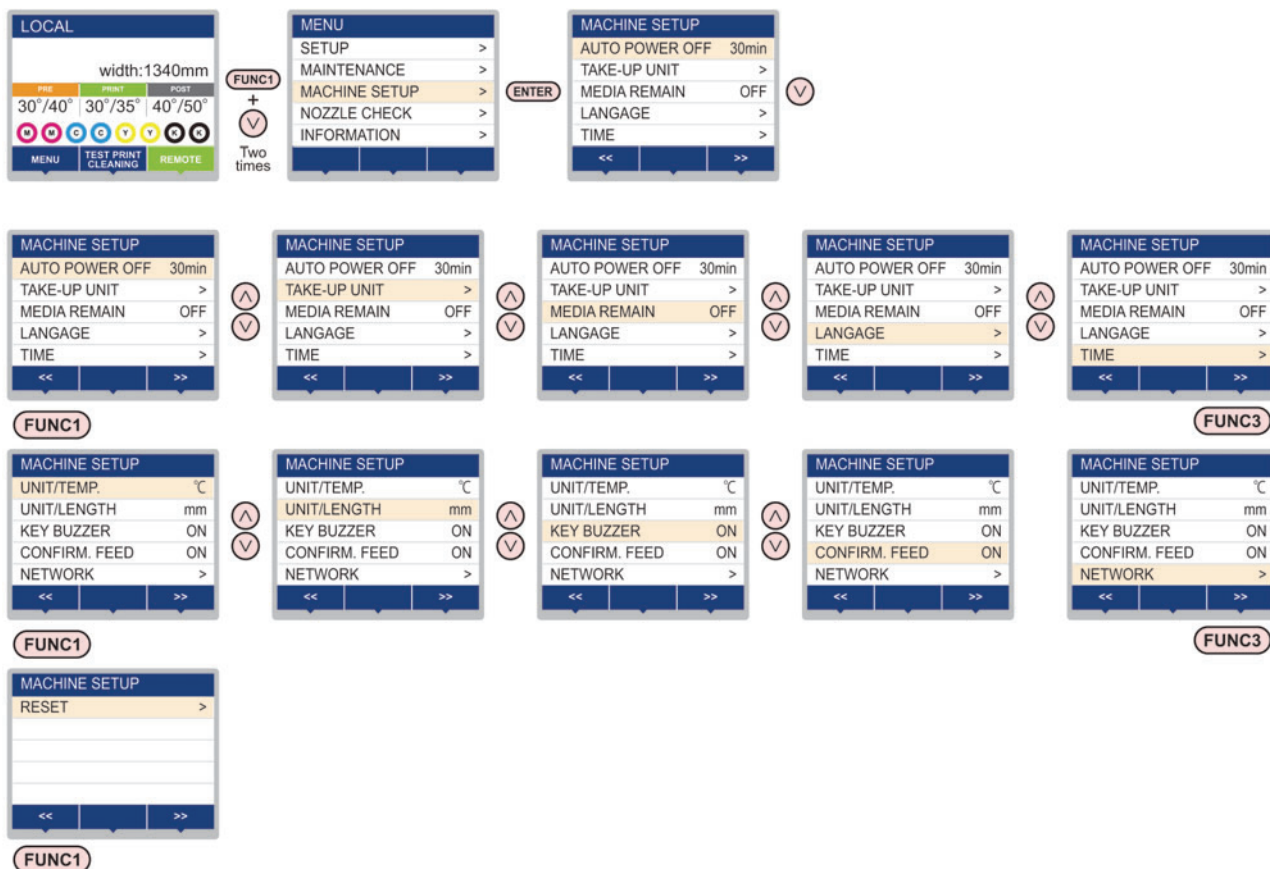◆ MACHINE SETUP MENUS at-a-glance



MACHINE SETUP MENU table

Function name		Set value		Default	Meaning
AUTO Power-off (P.3-10)		NONE/ 10 ~ 600min		30min	When no operation has been performed for the set time, the power supply is automatically turned "OFF".
TAKE-UP UNIT (P.3-10)	TAKE-UP UNIT	ON/ OFF		ON	For setting whether the take-up unit is used or not used.
	TENSION BAR	ON/ OFF		OFF	For setting whether the optional tension bar is used or not used.
MEDIA REMAIN (P.3-10)		ON/ OFF		OFF	You can control the remaining amount of media
LANGUAGE (P.3-11)		English ニホンゴ Deutsch Français Español Italiano Português		English	Displayed language is changed.
TIME (P.3-11)		+4h ~ -20h		Japan time	Time difference is corrected.
UNIT/ TEMP. (P.3-11)		°C (Centigrade)/°F (Fahrenheit)		°C	A unit for displaying temperature is set.
UNIT/ LENGTH (P.3-11)		mm / inch		mm	A unit for displaying length and area is set.
KEY BUZZER (P.3-11)		OFF / ON		ON	A buzzer sound when keys are pressed is set.
CONFIRM. FEED (P.3-11)		ON / OFF		ON	Set whether media feeding is performed for checking the result of the test printing etc. or not.
NETWORK (P.3-12)	Set the network.				
	Check IP Addr.	The IP address currently used by this machine is displayed.			
	Check MAC Addr.	The IP address currently used by this machine is displayed.			
	DHCP	ON / OFF			When it is ON, the IP address given by the DHCP server is used.
	AutoIP	ON / OFF			When it is ON, the IP address is determined by the AutoIP protocol. However, DHCP is ON, DHCP has priority.
	IP Address *1	Set the IP address used by this machine.			
	Default Gateway *1	Set the default gateway used by this machine.			
	DNS Address *1	Set the DNS server address used by this machine.			
	SubNet Mask *1	Set the digit number of the subnet mask used by this machine.			
EVENT MAIL	Mail Delivery (P.3-13)	ON / OFF		OFF	Set whether you send/ do not send the e-mail when the set event occurs.
	Select Event (P.3-13)	Print Start Event	ON / OFF	OFF	Set whether you send/ do not send the e-mail at the start of printing.
		Print End Event	ON / OFF	OFF	Set whether you send/ do not send the e-mail at the end of printing.
		Error Event	ON / OFF	OFF	Set whether you send/ do not send the e-mail when a error occurs.
		Warning Event	ON / OFF	OFF	Set whether you send/ do not send the e-mail when a warning occurs.
		Other Event	ON / OFF	OFF	Set whether you send/ do not send the e-mail when an event other than the above occurs.
	Mail Address (P.3-13)	Set the e-mail address to which you send the event mail.		Alphanumeric characters and symbols (within 96 characters)	
	Message Subject (P.3-13)	Set the characters to write in the subject of the event mail.		Alphanumeric characters and symbols (within 8 characters)	

Function name		Set value		Default	Meaning
EVENT MAIL	Server Setup ( P.3-14)	SMTP Address		Set the SMTP server.	
		SMTP Port No.		Set the SMTP port number.	
		SENDER ADDRESS		Set the e-mail address to be used as the sender mail address.	
		Authentication	POP before SMTP	Set the SMTP server authentication method (SMTP authentication).	
			SMTP Authentication		
			OFF		
		User Name *2		Set the user name used for the authentication.	
		Pass Word *2		Set the password used for the authentication.	
		POP3 Address *3		Set the POP server.	
	APOP *3		Set ON/ OFF of APOP.		
Transmit Test ( P.3-15)	Send the test e-mail.				
RESET( P.3-16)					All setting values are returned to the status default.







*1. Settable when both of DHCP and AutoIP are [OFF]

*2. Settable only when Auth. is not OFF

*3. Settable only when Auth. is POP before SMTP

Setting a AUTO Power-off

When no operation has been performed for the set time, the power supply is automatically turned "OFF".

 



- 1 Press the **FUNC1 (MENU)**   (twice)  **ENTER** key in LOCAL.
• MACHINE SETUP MENU will be displayed.
- 2 Press  3 times, and then press the **ENTER** key.
• "AUTO POWER OFF" will be selected.
- 3 Press   to select a set value, and then press the **ENTER** key.
• Set Value : none, 10 to 600min
- 4 Press the **END/POWER** key several times to end the setting.



- If the machine received data from the PC in the auto-power-off status, the power supply is turned ON, however, printing operation is not started automatically.

Setting Take-up unit

For setting whether the take-up unit is used or not used. Also, when the optional tension bar is installed, for setting whether the tension bar is used or not used.

- 1 Press the **FUNC1 (MENU)**   (twice)  **ENTER** key in LOCAL.
• MACHINE SETUP MENU will be displayed.
- 2 Press , and then press the **ENTER** key.
• "TAKE-UP UNIT" will be selected.

- 3 Press   to select a set value, and then press the **ENTER** key.

- Set Value : ON/ OFF


- 4 Press the **END/POWER** key several times to end the setting.




Setting the Display of Media Residual

Whether the screen displays the remaining amount of a media is set.

When the media remaining amount display is turned to "ON"	the remaining amount of a media is displayed in Remote. (However, when a leaf media is used, the length of the media to be printed is displayed.)
When the media remaining amount display is turned to "OFF"	the remaining amount of a media is not displayed in the Remote.

 

- The amount of a media that has been fed by the printing and jog keys is reflected in the remaining amount of a media.
- The length of a media (initial value of the remaining amount) is entered when a roll media is detected. ( P.2-11)
- The setting configured here does not become effective unless media detection is performed after the setting has been complete.

- 1 Press the **FUNC1 (MENU)**   (twice)  **ENTER** key in LOCAL.
• MACHINE SETUP MENU will be displayed.
- 2 Press the **FUNC3 (>>)**, and then press the **ENTER** key.
• "MEDIA REMAIN" will be selected.




3 Press   to select ON/OFF.

4 Press the  key.

5 Press the  key several times to end the setting.

Setting a LANGUAGE

You can change the displayed language.

1 Press the   (twice)  key in LOCAL.

• MACHINE SETUP MENU will be displayed.

2 Press  3 times, and then press the  key.

• "LANGUAGE" will be selected.




3 Press   to select language, and then press the  key.

• Set Value : ニホンゴ / English / Deutsch /
Français / Español / Italiano /
Português

4 Press the  key several times to end the setting.

Setting Time

You can set time of your country (time difference).




 
1 Press the   (twice)  key in LOCAL.

• MACHINE SETUP MENU will be displayed.

2 Press  4 times, and then press the  key.

• "TIME" will be selected.

3 Press     to enter time, and then press the  key.

• Year/Month/Day/Time selecting:
by the [][] keys.
• Year/Month/Day/Time inputting:
by the [][] keys.




4 Press the  key several times to end the setting.



• -20 hours to +4 hours can be set.



Setting Unit (Temperature/ Length)

Units used by this machine are set.

1 Press the   (twice)  key in LOCAL.

• MACHINE SETUP MENU will be displayed.

2 Press the  .

3 Press the  several times to select "UNIT/TEMP." or "UNIT/LENGTH", and then press the  key.

4 Press   to select a set value, and then press the  key.

• Set value of tempture : °C / °F
• Set value of length : mm / inch

5 Press the  key several times to end the setting.

Setting a KEY BUZZER

You can turn off the buzzer sound when pressing the key.

1 Press the   (twice)  key in LOCAL.

• MACHINE SETUP MENU will be displayed.

2 Press the   (twice)  key .

• "KEY BUZZER" will be selected.

3 Press   to select a set value, and then press the  key.

• Set value : ON/ OFF



4 Press the  key several times to end the setting.



• When the key buzzer is set to "OFF", the buzzer sound for errors, warnings, operation completion, etc. cannot be shut off.

Setting the CONFIRM. FEED

Set whether media feeding is performed for checking the result of the test printing etc. or not.

1 Press the   (twice)  key in LOCAL.

• MACHINE SETUP MENU will be displayed.

2 Press the   (3 times)  key .

• "CONFIRM. FEED" will be selected.




3 Press   to select a set value, and then press the  key.

- Set value : ON/ OFF

4 Press the  key several times to end the setting.

Set the network

You can also perform network setting with "Network Configurator", the tool to perform network setting of Mimaki's product. To download the Network Configurator, check "Driver / Utility" on the download page at Mimaki Engineering (<http://eng.mimaki.co.jp/download/>).

1 Press the   (twice)  key in LOCAL.

- MACHINE SETUP MENU will be displayed.

2 Press the   (4 times)  key .



- "NETWORK" will be selected.

3 Press the  key.



- "CHECK IP ADDRESS" will be selected.
- The IP address currently used by this machine is displayed.
- When you have finished the check, press the [ENTER] key.



- After connecting with the network, it takes time until the IP address is determined. If the IP address has not been determined, "0.0.0.0" is displayed.

4 Press , and then press the  key.



- "CHECK MAC ADDRESS" will be selected.
- The MAC address currently used by this machine is displayed.
- When you have finished the check, press the [ENTER] key.

5 Press , and then press the  key.

- "DHCP" will be selected.

6 Press   to select a set value, and then press the  key.



- Set value : ON/ OFF
- When it is ON, the IP address given by the DHCP server is used.

7 Press , and then press the  key.

- "AutoIP" will be selected.

8 Press   to select a set value, and then press the  key.

- Set value : ON/ OFF
- When it is ON, the IP address is determined by the AutoIP protocol. However, DHCP is ON, DHCP has priority.

9 Press , and then press the  key.



- "IP ADDRESS" will be selected.

10 Press   to select a set value, and then press the  key.

- Set value : ON/ OFF
- Both of DHCP and AutoIP is OFF, you can set IP Address. For other than above, proceed to the Step 14.

11 Press the  key .

- The setting items DEFAULT GATEWAY, DNS ADDRESS and SUBNET MASK will be displayed.
- Both of DHCP and AutoIP is OFF, you can set DEFAULT GATEWAY/ DNS ADDRESS/ SUBNET MASK. For other than above, proceed to the Step 14.

12 Press the  several times to select setting item, and then press the  key.

13 Press   to select a set value, and then press the  key.

14 Press the  key several times to end the setting.



- To reflect network setting, once turn off the power supply and then turn it on again.

Setting event mail function

Set the function to send e-mails to the set e-mail address when events such as cutting start/ end and stop due to an error.

You can also perform network setting with "Network Configurator", the tool to perform network setting of Mimaki's product. To download the Network Configurator, check "Driver / Utility" on the download page at Mimaki Engineering (<http://eng.mimaki.co.jp/download/>).

- Disclaimer
- The customer is responsible for the communication fee for Internet communication such as e-mail notification.
- The notification by the event mail function may not be delivered due to Internet environment, failure of the device/ the power supply, etc. Mimaki has absolutely no responsibility for any damages or loss resulting from non-delivery or delays.



- You can use event mail function by connecting LAN to this machine. Please prepare for LAN cable connection beforehand.
- Not compatible with SSL communication.

Enable the event mail function

- 1 Press the **FUNC1** (MENU) \Rightarrow ∇ (twice times) \Rightarrow **ENTER** key in LOCAL.
 - MACHINE SETUP MENU will be displayed.
- 2 Press the **FUNC1** (<<) \Rightarrow **ENTER** key .
 - "EVENT MAIL" will be selected.
- 3 Press the **ENTER** key.
 - "MAIL DELIVERY" will be selected.
- 4 Press \triangle ∇ to select "ON", and then press the **ENTER** key.
- 5 Press the **END/POWER** key several times to end the setting.

Set the event to send an event mail

- 1 Press the **FUNC1** (MENU) \Rightarrow ∇ (twice) \Rightarrow **ENTER** key in LOCAL.
 - MACHINE SETUP MENU will be displayed.
- 2 Press the **FUNC1** (<<) \Rightarrow **ENTER** key .
 - "EVENT MAIL" will be selected.
- 3 Press ∇ , and then press the **ENTER** key.
 - "SELECT EVENT" will be selected.
- 4 Press \triangle ∇ to select the event, and then press the **FUNC2** (\checkmark).
 - After selecting the event, press the [FUNC2] key and put a check in the check box. An email will be sent when the event whose box has been checked occurs.
 - To select multiple events, use [\triangle][∇] to put the cursor over the events you want, and put a check in their boxes by pressing [FUNC2].

Event name	Outline
PRINT START	Sets sending/not sending of an email when printing starts.
PRINT END	Sets sending/not sending of an email when printing ends.
ERROR	Sets sending/not sending of an email when printing is stopped due to occurrence of an error.
WARNING	Sets sending/not sending of an email when a warning occurs during printing.
etc.	Sets sending/not sending of an email when an event other than the above occurs.

- 5 Press the **END/POWER** key several times to end the setting.


























Set the e-mail address





- 1 Press the **FUNC1** (MENU) \Rightarrow ∇ (twice times) \Rightarrow **ENTER** key in LOCAL.
 - MACHINE SETUP MENU will be displayed.
- 2 Press the **FUNC1** (<<) \Rightarrow **ENTER** key .
 - "EVENT MAIL" will be selected.
- 3 Press ∇ twice, and then press the **ENTER** key.
 - "MAIL ADDRESS" will be selected.
- 4 Press \triangle ∇ \triangleleft \triangleright to set mail address, and then press the **ENTER** key.
 - Set the e-mail address to which you send the event mail.
 - Set it with alphanumeric characters and symbols within 96 characters.
- 5 Press the **END/POWER** key several times to end the setting.



















Set the subject


- 1 Press the **FUNC1** (MENU) \Rightarrow ∇ (twice) \Rightarrow **ENTER** key in LOCAL.
 - MACHINE SETUP MENU will be displayed.
- 2 Press the **FUNC1** (<<) \Rightarrow **ENTER** key .
 - "EVENT MAIL" will be selected.
- 3 Press ∇ 3 times, and then press the **ENTER** key.
 - "MESSAGE SUBJECT" will be selected.
- 4 Press \triangle ∇ \triangleleft \triangleright to set subject, and then press the **ENTER** key.
 - Set the characters to write in the subject of the event mail.
 - Set it with alphanumeric characters and symbols within 8 characters.
- 5 Press the **END/POWER** key several times to end the setting.













Set the server

- 1** Press the **FUNC1** (MENU)   (twice)  **ENTER** key in LOCAL.
 - MACHINE SETUP MENU will be displayed.
- 2** Press the **FUNC1** (<<)  **ENTER** key.
 - "EVENT MAIL" will be selected.
- 3** Press  4 times, and then press the **ENTER** key.
 - "SERVER SETUP" will be selected.
- 4** Press the **ENTER** key.
 - "SMTP ADDRESS" will be selected.
- 5** Press     to set SMTP Address, and then press the **ENTER** key.
 - Press the jog key [][][][] to set SMTP address.
 - Input the SMTP address name.
- 6** Press , and then press the **ENTER** key.
 - "SMTP PORT No." will be selected.
- 7** Press   to set SMTP Port No., and then press the **ENTER** key.
 - Set the SMTP port number.
- 8** Press , and then press the **ENTER** key.
 - "SENDER ADDRESS" will be selected.
- 9** Press     to set SENDER ADDRESS, and then press the **ENTER** key.
 - Press [][][][] and set the e-mail address to be used as the sender mail address.
 - Set it with alphanumeric characters and symbols within 64 characters.


 - Depending on your server, if you do not set the e-mail address not supporting the account, sending/ receiving e-mails may be unavailable.
- 10** Press , and then press the **ENTER** key.
 - "AUTHENTICATION" will be selected.
- 11** Press   to set authentication method, and then press the **ENTER** key.
 - Set the authentication method of the SMTP server.
 - When you select [OFF], proceed to the Step 20.

- 12** Press , and then press the **ENTER** key.
 - "USER NAME" will be selected.
- 13** Press     to set User Name, and then press the **ENTER** key.
 - Press [][][][] to set the user name to use for the authentication.
 - Set it with alphanumeric characters and symbols within 30 characters.
- 14** Press , and then press the **ENTER** key.
 - "PASSWORD" will be selected.
- 15** Press     to set Pass Word, and then press the **ENTER** key.
 - Press [][][][] to set the password to use for the authentication.
 - Set it with alphanumeric characters and symbols within 15 characters.


 - On the password setting screen, you can only check the value that you are currently inputting.

 - When you select [POP before SMTP] in the Step 11, set the items in the Step 16 to 19.
- 16** Press , and then press the **ENTER** key.
 - "POP3 ADDRESS" will be selected.
- 17** Press     to set POP3 Address, and then press the **ENTER** key.
 - Press [][][][] to set POP server.
 - Input the POP server name.
- 18** Press , and then press the **ENTER** key.
 - "APOP" will be selected.
- 19** Press   to set ON/ OFF, and then press the **ENTER** key.
- 20** Press the **END/POWER** key several times to end the setting.

Send a test e-mail

1 Press the **FUNC1 (MENU)** \Rightarrow **ENTER** key in **LOCAL**.

- MACHINE SETUP MENU will be displayed.

2 Press the **FUNC1 (<<)** \Rightarrow **ENTER** key.

- "EVENT MAIL" will be selected.

3 Press the **FUNC3 (>>)** \Rightarrow **ENTER** key.

- "TRANSMIT TEST" will be selected.

4 Press the **ENTER** key.

- The sent result is displayed.
- If sending test e-mail has failed, an error code is displayed.
Refer to the next page to solve the problem.

Transmit Test
Failed: 12345 :ent

Error code

5 Press the **END/POWER** key several times to end the setting.

Important!

- The sent result of the test e-mail is the result of e-mail sending process performed by this machine to the e-mail server. It does not indicate that the e-mail was received at the address.
- If the spam e-mail filter etc. has been set in the terminal in which e-mails are received, even if "Sending has been completed" is displayed, the e-mail cannot be received in some cases.
- If sending test e-mail has failed, the error code below is displayed.
- If the error cannot be solved, try again after a while.
- For the server setting etc., contact with the network administrator or the provider.

Error Code	The expected casus	Remedy
10	Network connection error	<ul style="list-style-type: none"> • Check that the machine is connected with the network. • Check that the machine IP address is correct. • Check that the machine is in the environment where DNS is available.
20	No valid e-mail address.	<ul style="list-style-type: none"> • Enter the correct e-mail address.
11003 11004	The POP server cannot be found. Or cannot access DNS server.	<ul style="list-style-type: none"> • Check the POP server address. • Check that the machine is in the environment where DNS is available.
11021	Cannot connect with the POP server.	<ul style="list-style-type: none"> • Check the POP server setting. • Check the firewall setting.
12010	An error returns from the POP server.	<ul style="list-style-type: none"> • Check the POP server setting.
13000	The POP authentication has failed.	<ul style="list-style-type: none"> • Check the user name and the password. • Check the APOP setting. • Confirm the authentication method.
10013 10014	The SMTP server cannot be found. Or cannot access DNS server.	<ul style="list-style-type: none"> • Check the SMTP server address. • Check that the machine is in the environment where DNS is available.
10021	Cannot connect with the SMTP server.	<ul style="list-style-type: none"> • Check the SMTP server setting. • Check the SMTP port number. • Check the firewall setting.
10*** 11*** 20*** 21***	An error returns from the SMTP server. Or, there was no response.	<ul style="list-style-type: none"> • Check the SMTP server setting. • Cannot communicate with a server that requires mandatory SSL communication. • Check protocol filter settings.
12***	It is invalid sender address.	<ul style="list-style-type: none"> • Check that the e-mail address supporting the account entered in the user name/ the password is set in SENDER ADDRESS.
13***	The e-mail address cannot be found. Or, it is invalid sender address.	<ul style="list-style-type: none"> • Check the e-mail address. • Even if there is a mistake in the e-mail address, this error cannot be detected in some cases. • Check that the e-mail address supporting the account entered in the user name/ the password is set in SENDER ADDRESS.
22000 22008	SMTP authentication error	<ul style="list-style-type: none"> • Confirm the authentication method.
23*** 24*** 25***	The SMTP authentication has failed.	<ul style="list-style-type: none"> • Check the user name and the password.

"***" is the error code returned from the e-mail server.

Initializing the Settings


You can return the setting of "SETUP", "MAINTENANCE" and "MACHINE SETUP" to the status before shipment.

1

Press the **FUNC1** (MENU)   (twice)  **ENTER** key in LOCAL.

- MACHINE SETUP MENU will be displayed.

2

Press the **FUNC1** (<<)  **ENTER** key .

- "RESET" will be selected.

3

Press the **ENTER** key.


- The already configured settings are initialized.

4

Press the **END/POWER** key several times to end the setting.


About NOZZLE CHECK MENU

Set operations concerning the nozzle missing detection function.

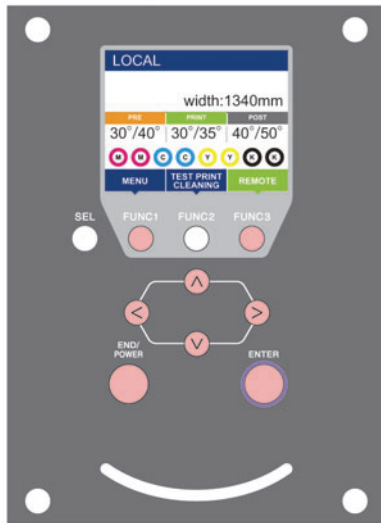

- FUNC1** : Press this to select INFORMATION MENU, or to switch to the previous screen.
- FUNC3** : Press this to switch to the next screen.
- ▲ ▼** : Use these to select a setting item.
- ENTER** : Press this to confirm a setting, etc..

◆ NCU MENUs at-a-glance

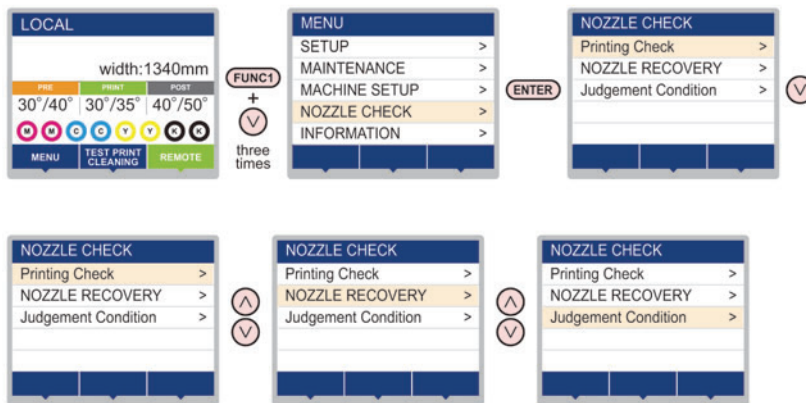

INFORMATION MENU table

Function name			Set value	Default	Meaning
Printing Check (🖨️ P.3-19)			ON/OFF	OFF	Set this when you want to conduct nozzle check at the beginning of online printing.
(ON)	Check Interval	LENGTH	0.1 to 50.0m	30.0 m	Conducts nozzle check at each set length.
		FILE	1 to 100	30 file	Conducts nozzle check at each set number of files. *1
	Action	CLEANING	OFF/ SOFT/ NORMAL/ HARD	SOFT	Sets the type of cleaning performed during recovery work.
		RETRY COUNT	0 to 3	1	Repeats the retry operation for the set number of times.
NOZZLE RECOVERY (🖨️ P.3-19)			ON/OFF	OFF	Set this when you want to conduct automatic nozzle recovery.
Judgement Condition (🖨️ P.3-19)			1 to 180	1	Sets how many missing nozzles are detected for “Nozzle Missing” judgment to be made according to each color. (Maximum 16 per 1 nozzle line)*2

*1. When the set length is reached during printing, nozzle check is conducted at the start of the next printing.

*2. Depending on the print conditions, nozzle recovery is not applied in some cases.

Printing Check Flow

Nozzle check is conducted according to the following flow at the start of printing.



- Turn the “Printing Check” setting ON to be enabled.
- Only perform RETRY COUNT and Printing Check settings when the settings are enabled.

1

nozzle check → Judgment

Detects missing nozzles.

2

Recovery operation →
nozzle check → Judgment

If more missing nozzles than “Judgement Condition ” are detected after the nozzle check, cleaning is performed and nozzle check is conducted again.

3

Retry → Judgment

If more missing nozzles than “Judgement Condition ” are detected after the recovery operation, the recovery operation is conducted again.

4

Printing Check → Judgment

Nozzle recovery is automatically conducted following nozzle check and recovery operation.

- Turn the “Printing Check” setting ON to be enabled.

5

Nozzle Missing judgment











If more missing nozzles than A are eventually detected, continued printing will be deemed impossible and printing will stop.



Printing Operations at “Nozzle Missing” Judgment and Error Occurrence

- When judged to be “Nozzle Missing” → Printing is stopped.
- When error occurs during nozzle check → Printing is stopped and “Printing Check” is automatically turned OFF. After recovering from the error, set “Printing Check” once again.

Setting the Printing Check

Select ON when you want to conduct nozzle check at the start of online printing.






- 1 Press the **FUNC1 (MENU)**  (3 times)  key in LOCAL.
 - NOZZLE CHECK MENU will be displayed.
- 2 Press the **ENTER** key.
 - "Printing Check" will be selected.
- 3 Press   to select ON, and then press the **ENTER** key.
 - The "Check Interval" setting screen will be displayed.
 - "Select OFF to not set nozzle check. Proceed to Step 11.
- 4 Press the **ENTER** key.
- 5 Press   to select setting item, and then press the **ENTER** key.
 - select the nozzle check interval from "LENGTH" or "FILE".
 - LENGTH** : nozzle check is conducted when the printed length reaches the set length.
 - FILE** : nozzle check is conducted when the number of printed files reaches the set number.
- 6 Press   to select setting value, and then press the **ENTER** key.
 - The set value will differ according to the setting selected in Step 5.
 - LENGTH** : 0.1 to 100 m
 - FILE** : 0 to 300 files
- 7 Press the **ENTER** key twice.
 - The "Action" setting screen will be displayed.
- 8 Press the **ENTER** key.
 - "CLEANING TYPE" will be selected.
- 9 Press   to select cleaning type, and then press the **ENTER** key.

Setting value : OFF/SOFT/ NORMAL/ HARD
- 10 Press   to select retry count, and then press the **ENTER** key.

Setting value : 0 to 3
- 11 Press the **END/POWER** key several times to end the setting.









Setting the NOZZLE RECOVERY

set this if you want to conduct automatic nozzle recovery when nozzle missing is detected.

- 1 Press the **FUNC1 (MENU)**  (3 times)  key in LOCAL.
 - NOZZLE CHECK MENU will be displayed.
- 2 Press , and then press the **ENTER** key.
 - "NOZZLE RECOVERY" will be selected.
- 3 Press   to select ON/OFF, and then press the **ENTER** key.
- 4 Press the **END/POWER** key several times to end the setting.

Setting the Judgement Condition


Set the conditions for judging nozzle missing.

- 1 Press the **FUNC1 (MENU)**  (3 times)  key in LOCAL.
 - NOZZLE CHECK MENU will be displayed.
- 2 Press  twice, and then press the **ENTER** key.
 - "Judgement Condition" will be selected.
- 3 Press   to select color, and then press the **ENTER** key.
 - The type of color changes depending on the ink set.
 
- 4 Press   to set the number of nozzles for judgment, and then press the **ENTER** key.
- 5 Press the **END/POWER** key several times to end the setting.

About INFORMATION MENU

The information of this machine can be confirmed.

The following items can be confirmed as machine information.

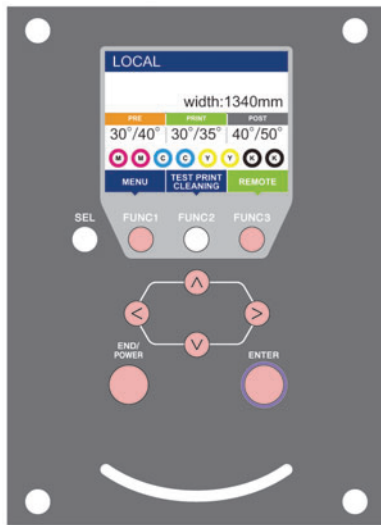

- FUNC1** : Press this to select INFORMATION MENU, or to switch to the previous screen.
- FUNC3** : Press this to switch to the next screen.
- ^** **v** : Use these to select a setting item.
- ENTER** : Press this to confirm a setting, etc..



INFORMATION MENU table

Item		Description
USAGE	WIPING	This displays how many wipings have been done.
	WASTE TANK	This displays how much waste ink has built up in the waste ink tank, as a rough percentage of the tank capacity.
	PRINT LENGTH	This displays the total length of the printing done to date.
	PRINT AREA	This displays the total area of the printing done to date.
	USE TIME	This displays the total time for which the printer has been used to date.
	Spout Rubber	This displays the total time for which Spout Rubber has been used. (Only displayed when MBIS is used)
VERSION		This displays the version information of this machine.
LIST		This allows you to print the settings of this machine.
Ink REPL. Report		This prints ink history of this machine.
ERROR HISTORY		This displays the history of errors and warnings to date. When you press [▲][▼], the date of occurrence (year/month/day/hour/minute) and the error/warning information are displayed alternately in the order of occurrence.

Displaying the Information

1 Press the **[FUNC1] (MENU)** **⇨** **[▼]** (4 times) **⇨** **[ENTER]** key in LOCAL.

- INFORMATION MENU will be displayed.

2 Press **[▲]** **[▼]** to select a information.

- Refer to the "INFORMATION MENU", and select the information to be displayed.

3 Press the **[ENTER]** key.

- If you selected [LIST] in step 2, the machine's settings will be printed.

4 Press the **[END/POWER]** key several times to end the setting.



- When you reset the used count of the wiper, press the [FUNC2] key while [RESET?] is displayed. When you press the [ENTER] key, the number of wipings is reset.
- By pressing the function key during display of "WIPING information," "WASTE TANK information" and "Spout Rubber" in USAGE, the used counts can be reset.

When resetting WIPING information : Press the [FUNC2]

When resetting WASTE TANK information : Press the [FUNC1]

When resetting Spout Rubber : Press the [FUNC3]

Chapter 4

Cutting Function



This chapter

describes about cutting function.


Cut Out Data with Registration Mark	4-2	SETUP SUB MENU	4-11
The Flow of Cutting out the Registered		Setting the DIVISION CUT	4-11
Data	4-2	Make the media without uncut area	
Enter the registration mark detection mode	4-2	(OVER CUT function)	4-13
Precautions in inputting data with		Other SETUP SUB MENU	4-13
registration marks	4-2	SETUP RESET	4-14
Setting of Detecting the Registration Marks	4-5	Maintenance Function	4-14
Method of detecting registration marks	4-6	Maintenance of Mark Sensor	4-14
About CUTTING MENU	4-7	Perform SAMPLE CUT to Find out the	
Cutting MENU table	4-8	Cause of Cutting Error.	4-17
Setting the CUT MODE	4-9	Cutting a Medium into Multiple Pieces	
Set the distance compensation	4-9	with a Certain Length	4-17
Find compensation value	4-9	Cutting out Data without Register Marks	
Setting procedures	4-9	(ORIGIN OFFSET)	4-18
perform multiple Cuttings (Copy function) ...	4-11		

Cut Out Data with Registration Mark


Create registration marks on an output image that you want to make a seal, and then the plotter detects them to cut it out.

There are following two types of registration marks.

Registration mark: Type 1

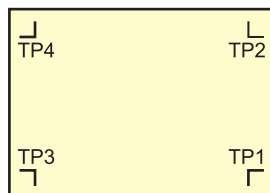

Registration mark: Type 2

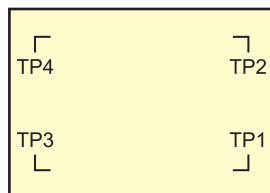

- Use the TP4 when performing trapezium compensation to correct the uneven sheet feeding rate caused by the difference in the diameter between the right and left grit rollers. If the trapezium compensation is to be omitted, there is no need to set the TP4. In that case, however, cutting distortion will increase.

The Flow of Cutting out the Registered Data

Add registration marks on the image that you want to make a seal and others, and print it on a sheet.

There are some conditions for creating the registration marks. See pages P.4-2 through P.4-5.

Set the printed sheet in CJV300150 series.

Set it referring to P.2-4.

Send the cut-target image from the computer for cutting.

In case it is not successfully cut,

- Confirm the reaction of registration mark sensor.
- Confirm the position of the Light Pointer.

Enter the registration mark detection mode

1

Press the **END/POWER** key in the local.

- It turns out to be a registration mark detection mode.



- When the registration detection is set to OFF, it doesn't enter into the registration mode. (P.4-5)
- While various functions are under setting, data entry may be cancelled and the plotter may go back to the previous setting item.

Precautions in inputting data with registration marks

There are some limitations on preparing data with registration marks.

In order to make full use of this function, read the following instructions carefully and prepare data with registration marks properly.




- The registration mark described here is intended to detect the sheet inclination and the lengths along the A and B axes. It is not a mark for trimming.

Size of the registration marks

The registration mark length shall be about more than ten times the line width.


In addition, for the length of a side of the registration mark against the data, refer to "The size of, and the distance between, registration marks" (P.4-4).

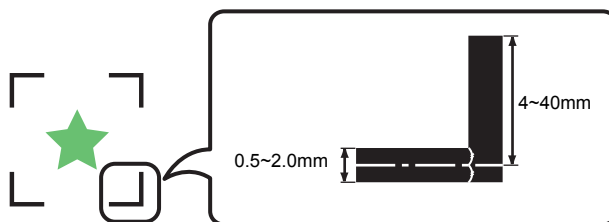


The area where registration marks and designs can be arranged

- The TP1 starting position must be 20 mm or more away from the leading edge of the sheet.
- The TP2 end position must be 45 mm or more away from the tail end of the sheet.

Mark Form : Type 1

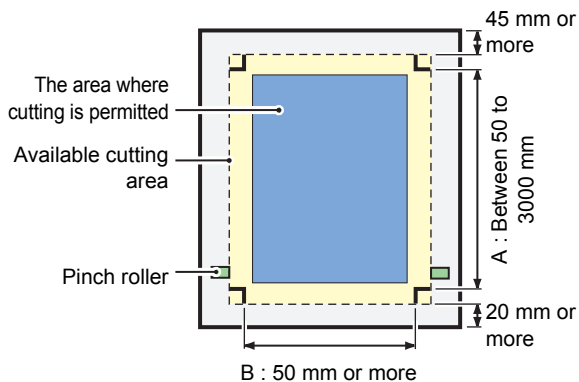

Mark Form : Type 2

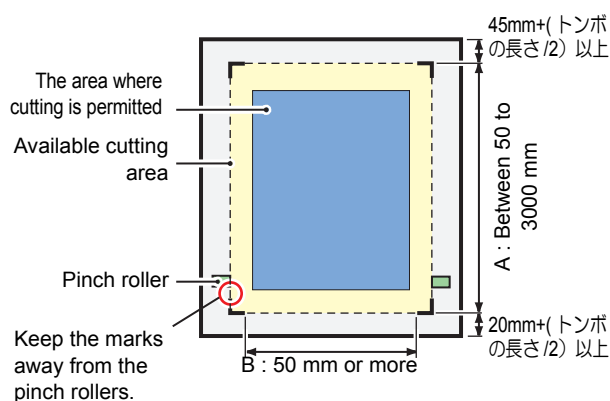


No-plotting area around the registration marks

An area around a registration mark (from the mark origin to the mark size area) is a non-plotting area. There must be no data plotted or stain in this area; otherwise, a wrong origin may be detected or a mark read error can occur.


Important!

- If a wrong mark origin is detected, the cutting will be performed in a wrong area.

Mark Form : Type 1

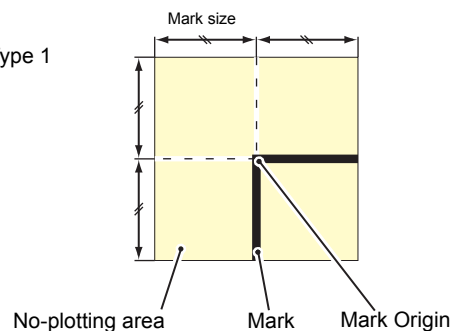


Mark Form : Type 2

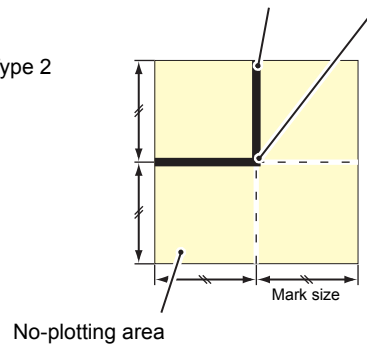


Example of cause of wrong detection 1

There is a line outside the registration marks

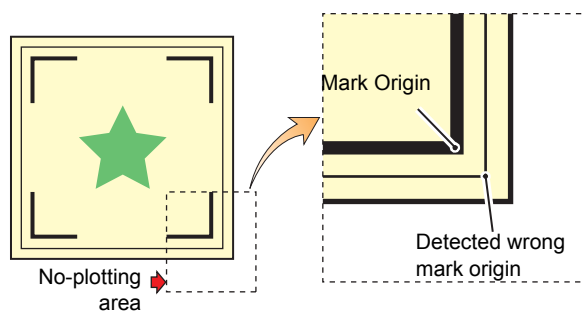


Example of cause of wrong detection 2

The distance between registration marks (TP2 and TP1 or TP4 and TP2) is smaller than the mark length (for Type 2)

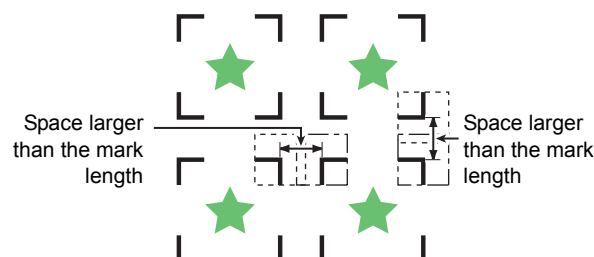

The size of, and the distance between, registration marks

The size (B) of a registration mark suited for the distance (A) between the marks is as shown below. If the mark size (B) is too small relative to the distance (A), the marks may not be detected correctly. Be sure to prepare the registration marks with an appropriate size.

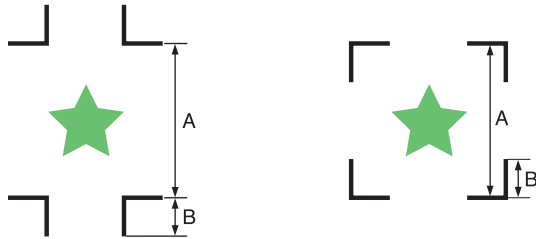


A	200 max.	500 max.	1000 max.	2000 max.	2001 min
B	4 to 40	8 to 40	15 to 40	25 to 40	35 to 40

(mm)


Distance between registration marks for copied designs

For Type 1 registration marks, the distance between the marks must be not shorter than two times the mark length and not longer than 1000 mm. For Type 2 registration marks, the distance between the marks must be not shorter than the mark length and not longer than 1000 mm.

Mark Form : Type 1

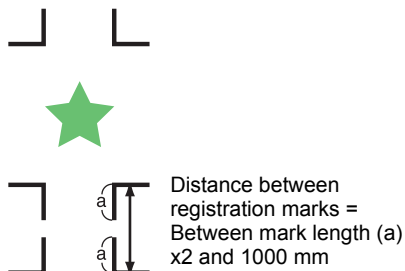


Mark Form : Type 2

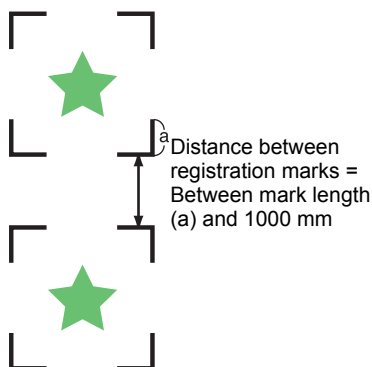


Recommended size of the area defined with a set of four registration marks

It is recommended that the size of the area defined with a set of four registration marks is in the range of A4 size (210 mm x 297 mm) to A3 size (297 mm x 420 mm). If you follow this recommendation, you can minimize wasteful spaces and arrange the designs efficiently.

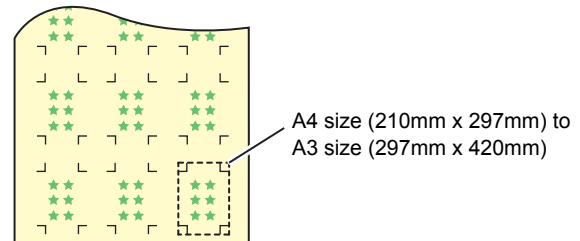

In case of perform printing a registration mark continuously


When perform printing a registration mark continuously, set the one side of the registration marksize to 8mm. In case 8mm or shorter registration mark recognized continuously, may cause the glitches on the main unit.

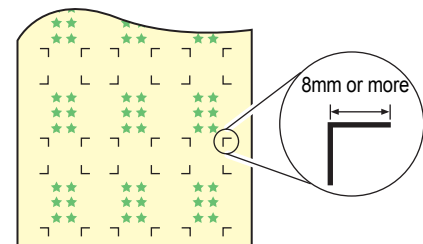

Color of mark

The mark must be printed in black against the white background.

The registration mark will not be detected correctly if the background is not white or the mark is not black.

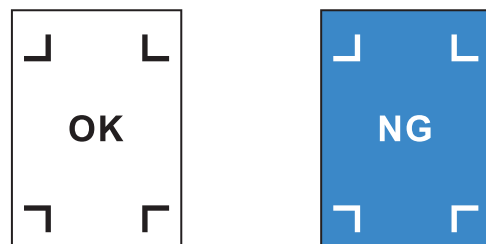

Mark blurred

If the mark is blurred, a wrong mark origin can be detected, thus resulting in deviated cutting.



Precautions on registration mark detection

- When you retry sheet detection, sheet inclination compensation, scale compensation between registration marks, and the position of the origin are cleared.
- Once the plotter detects marks, it will set the origin at the location of TP1.
You can change the position of the origin to a different location using jog keys; the origin at the new location supersedes the origin at TP1.
- Locate registration marks so that the line connecting the corners of four marks forms a rectangle.
Registration marks arranged unevenly can result in deviated cutting.
- Automatically disabled if the rotation function is specified.

Notes for the combined operation of print & cut

When performing combined operation of print & cut with Raster Link Pro 4 SG or later, be careful to the following items:

- When performing combined operation of print & cut with the attached application software to this device (Raster Link Pro 4 SG or later / FineCut 7.0 or later /), the following set contents will follow the instruction of software side. Note that the contents set in this device will be invalid.

- Register mark size
- Register mark shape

- The combined operation of print & cut without a register mark is not performed under the following conditions:

- Print & cut using the take-up device



- Other than the above conditions, there is a possibility of the cutting line being misaligned depending on the printing data size. Therefore, it is also recommended to perform the operation with the data which has register marks for combined operation of print & cut.

Setting of Detecting the Registration Marks

When you want to cut the data with registration marks, you must set the following without fail.

The setting items of detecting the registration marks

There are the following four setting items for registration mark detection.

(1) MARK SIZE

Set the length of one side of the registration mark.

Length of one side




Setting	Description
4 to 40mm	When the printed mark's horizontal and vertical lengths differ from each other, set the same value as the shorter length.

(2) OFFSET Y / OFFSET X

Generally the origin will be set at the position shown below.

However, depending on your application and the work to be cut, the cutting position may be misaligned to the same direction. In this case, the location of the origin can be corrected.

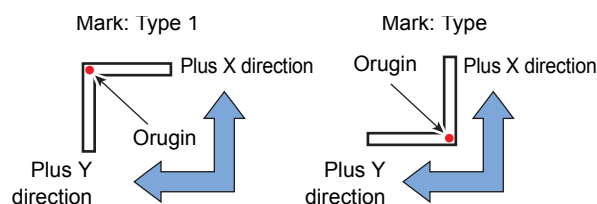

Setting	Description
$\pm 40.00\text{mm}$	Use this to shift the origin position in the X direction or Y direction.



- If the origin is located out of the available cutting area, "ERR37 MARK ORG" will be displayed. In this case, write the registration marks in the area closer to the center of the media.

(3) MARK TYPE

Select either one of the following types of registration marks.


Setting	Description
Type 1	
Type 2	

(4) DETECT MODE

Setting	Description
FAST	The position is determined by scanning the registration mark segment back and forth once. Time required for detection is short, however, the accuracy becomes lower a little.
PREC	After scanning the registration mark segment back and forth once, measures the position without fail by scanning the segment included its outside again. Time required for detection becomes slightly longer.

(5) SENSOR LEVEL



Setting	Description
1 to 7	The bigger the numerical value is, the higher the sensitivity of the registration mark sensor becomes. If it detects the registration mark by mistake, lower the sensitivity. Generally, use it with the setting value of "4".

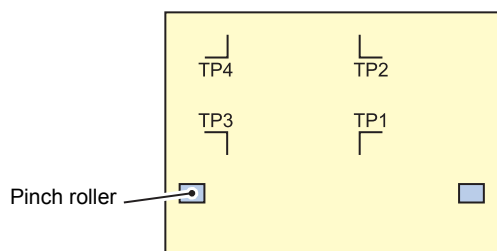Method of detecting registration marks**Important!**

- If the sheet is curled, straighten it. When using a cutting software having no mark function, use a media which has neither stains nor images in the area (A) located between TP1 and TP2 and in the area (B) located between TP1 and TP3.

1 Set a media. (P.2-4)**2 Press  , to perform the media detection.**

- Once the media is detected, the display indicates that the machine is waiting for registration mark detection operation.

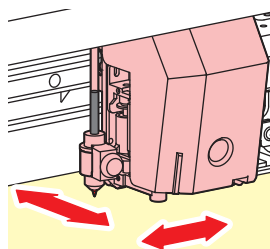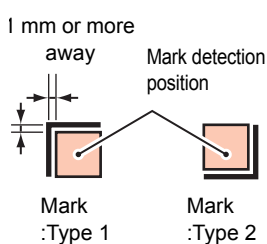3 Press    , to move the Light Pointer into the area shown below.**4 Press the  key.**

- The scale compensation display appears.

5 Make setting with  .

- Press the [ENTER] key to change the display to the next scale compensation setting.
- If [DIST.REVL.] is set to [OFF], the display for scale compensation setting will not appear.
- If [TP DETECT] is set to [2ptA], the display for inputting the B length will not appear.
- If [TP DETECT] is set to [1pt], the scale compensation setting display will not appear but the origin point will be displayed.


6 Press the  key after completing the settings.

- The machine will start detecting the registration marks according to the settings of [TP DETECT].
- In case the plotter cannot detect any registration marks, it displays "Error C36 in the registration mark detection" on the display. Set the sheet again.

7 Set the origin.


- The display will show the available cutting area and then return to local.

About CUTTING MENU

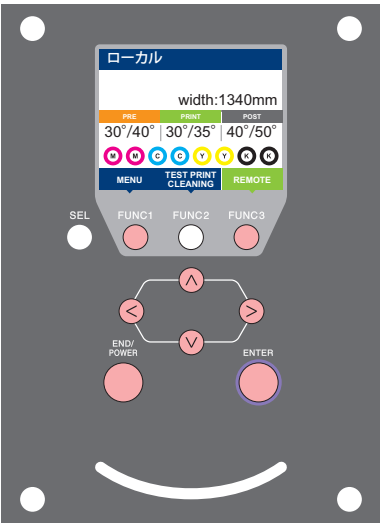

- FUNC1** : Press this to select SETUP MENU, or to switch to the previous screen.
- FUNC3** : Press this to switch to the next screen.
- ↑ ↓** : Use these to select a setting item.
- ENTER** : Press this to confirm a setting, etc..

◆ Cutting MENUs at-a-glance

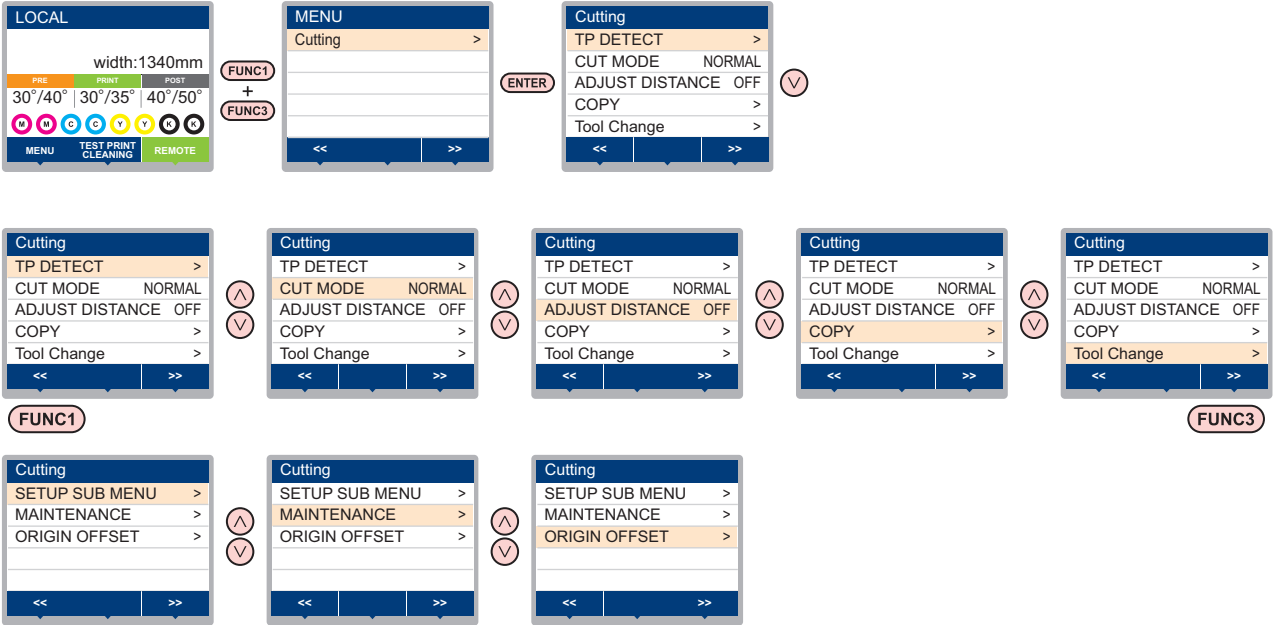

Cutting MENU table



- For each setting item below, you can set it so that the machine may operate according to the value specified when you printed from your RIP software in the connected host PC.
- **Set Item** : DRYING TIME/ MARGIN (LEFT and RIGHT)/ VACUUM FAN/ FEED SPEED
- When you operate the machine according to the contents specified with the RIP software, set each item to "Host" when registering this machine type. When you set it other than "Host", the machine operates according to the machine setting.
- For the specifying method with the RIP software, refer to the operation manual of the RIP software.

Function name		Outline
TP DETECT (P.4-18)	FORM	When you cut the data with registration marks, you must set without fail.
	OFFSET X/Y	
CUT MODE (P.4-18)		This is to set the cutting quality.
ADJUST DISTANCE (P.4-18)		This is for making corrections when error occurs in the media feed amount due to the media thickness, or when the media's movement amount differs in the left and right directions during cutting, and in similar cases.
COPY (P.4-18)		This function performs cutting for the received data on two or more sheets.
Tool Change (P.4-18)		You select this function when you replace the cutter blad.
SETUP SUB MENU	DIVISION CUT (P.4-18)	You can cut the data bigger than the sheet width by dividing it. With division cut, you can make settings for the width direction (Y) and feed direction (X).
	UP SPEED (P.4-18)	This is to set the speed of sheet and carriage movement when the tool is up. Setting the speed lower makes the sheet misalignment reduced at the time of long sheet feeding.
	DUMMY CUT (P.4-13)	The blade edge is made to turn to a specific direction before starting cutting, which allows dummy cutting.
	SHEET TYPE (P.4-18)	This is to set the types of sheet according to the sheet you use.
	ADJ PRS OFFSET (P.4-18)	This is used to expand the value in such a case as when the beginning and end part of the cut are left cut.
	OVER CUT (P.4-18)	By over lapping the start point and the end point arbitrarily, you can make the media without uncut area.
	SETUP RESET (P.4-18)	The already configured settings are initialized.
MAINTENANCE	MARK SENSOR (P.4-18)	This is for adjusting the registration mark sensor.
	SAMPLE CUT (P.4-18)	In case that normal data cutting cannot be performed etc., perform cutting with the sample stored in this plotter to find out the cause of cutting error.
	AUTO CUT (P.4-18)	Cutting a medium into multiple pieces with a certain length.
ORIGIN OFFSET (P.4-18)		To print & cut the data without register marks, adjust the misalignment between a printed image and the cutting line.

Setting the CUT MODE

This is to set the cutting quality.

There are the following three type for cut mode.

Setting	Description
Standard	This is a regular cutting mode.
High speed	This is used to perform cutting in a short time (it is not appropriate for the heavy media).
High quality	This is a cutting mode used to give priority to cutting quality.



Select "QUALITY" in any of the following cases:

- Characters whose sizes are 10 mm or less are to be cut
 - Picture patterns or characters that have many sharp corners are to be cut
 - Minute cutting is to be performed
- However, the edges of finished patterns may be rugged if the data sent from the host computer is too complicated. In such a case, select "HIGHspd" for smooth finish.

Important!

- With "QUALITY", the cutting speed is limited to 20 cm/s.

1

Press the **FUNC1 (MENU)** ➔ **FUNC3 (>>)** ➔ **ENTER** key in **LOCAL**.

- Cuttibg MENU will be displayed.

2

Press **▼** twice, and then press the **ENTER** key.

- "CUT MODE" will be selected.

3

Press **▲** **▼** to select the setting value, and then press the **ENTER** key.

- Set value : Standard, high speed, High quality

4

Press the **END/POWER** key several times to end the setting.

Set the distance compensation


When you cut the long data, the cut length may have difference depending on the sheet thickness. In addition, depending on the difference of the grid roller diameter, the moving amount of right and left of the sheet may have difference. Correct these differences.

You can select the distance correction from eight types (No. 1 to No. 8).

Find compensation value

Compensation value = Measured value of the OFF line - Input reference length

- Ex.)
- Actual measured value of OFF line: 999.0 mm
 - Entered standard length: 1000 mm
 - $999.0 - 1000 = -1.0$ mm / (correction value)

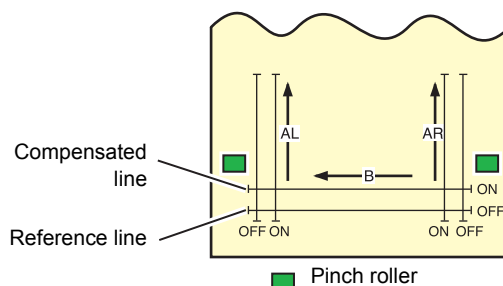

Setting value :

- Standard value
 - A direction : 500, 1000, 1500, 2000, 2500 (mm)
 - B direction : 200, 400, 600, 800, 1000 (mm)
- Correction value
 - A direction : Standard length \pm 5% (0.1mm step)
 - B direction : Standard length \pm 5% (0.1mm step)
- Plotting offset : 0 to 300mm

Setting procedures

1

Set a media (P.2-4)

- Set the sheet to plot the distance correction adjusting pattern.

2

Press the **FUNC1 (MENU)** ➔ **FUNC3 (>>)** ➔ **ENTER** key in **LOCAL**.

- Cuttibg MENU will be displayed.

3

Press **▼** twice, and then press the **ENTER** key.


- "ADJUST DISTANCE" will be selected.

4 Press **▲** **▼** to select ON, and then press the **ENTER** key.

- The correction value registered in AR (right side of front-back direction), AL (left side of front-back direction) and B (right-left direction) of No.1 are displayed.

5 Press **▲** **▼** to select the distance correction number to register, and then press the **ENTER** key.

- The standard length (mm) that was corrected previous time is displayed.
- If you do not perform distance correction at all, the minimum standard length is displayed.
- When you change the length unit (mm/ inch) from you corrected previous time, the under screen appears.

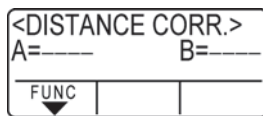

6 Press **▲** **▼** to change the standard length of A direction (front-back direction), and then press the **ENTER** key.

- The standard length of A direction becomes standard length of AR (right side of front-back direction) and AL (left side of front-back direction).
- When you change the standard length, the distance correction value (AR, AL) corrected previous time is cleared.
- Moves to the standard length setting of B direction.

7 Press **▲** **▼** to change the standard length of B direction (right-left direction), and then press the **ENTER** key.

- When you change the standard length, the distance correction value (B) corrected previous time is cleared.


8 Press **▲** **▼** to specify the plotting position of the distance correction adjusting pattern, and then press the **ENTER** key.

- Offset all line segments (AR, AL, B) in the sheet.
- Plot the adjusting pattern.
- If a paper is not set, or, the paper size is too small and the standard length cannot be plotted, plotting is not performed. In such a case, when you press the [ENTER] key, you can enter the correction value without plotting.

9 After printing is completed, the current correction value is displayed.

10 Actually measure OFF lines of AR, AL and B.

- Move the clamp lever to the rear side, remove the sheet and measure.

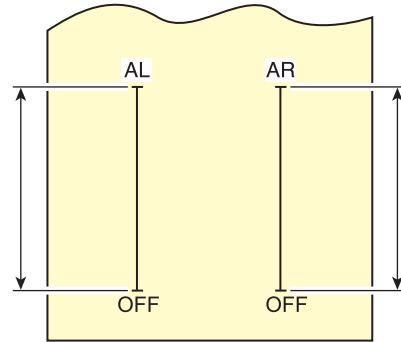

11 Perform the operations in Steps 2 to 9.

- As the sheet is not set, the correction entry screen is displayed without performing printing.

12 If the measured value is different from the standard value, change the correction value with **▲** **▼**.

13 Press the **ENTER** key to register the correction value of AR direction.

- You can register it by [>} key.
- Moves to the standard length setting of AL direction.

14 In the same way as the Step 10, enter the correction value of AL with **▲** **▼**.

15 Press the **ENTER** key to register the correction value of AL direction.


- You can register it by [>} key.
- Moves to the standard length setting of B direction.

16 Change the correction value of B direction with **▲** **▼**, and then press the **ENTER** key.

- Register the correction value of B direction.

perform multiple Cut-tings (Copy function)

This function performs cutting for the received data on two or more sheets.(Maximum 999 cuttings)

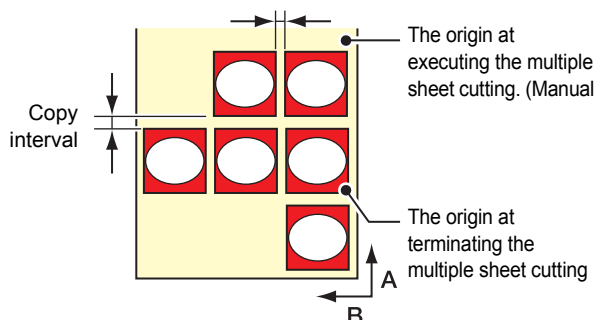

- You can perform multiple cuttings by specifying data saved in the receiving buffer of this device.
- The receiving buffer can save only one data.
- When a new data is received, the data that has been saved is overwritten by it.
(You cannot perform multiple cuttings by specifying the data that was received before.)

- 1** Press the **FUNC1** (MENU) ➔ **FUNC3** (>>) ➔ **ENTER** key in LOCAL.
• Cuttbg MENU will be displayed.
- 2** Press **▼** 3 times, and then press the **ENTER** key.
• "COPY" will be selected.
- 3** Press **▲** **▼** to select the number of cutting (1 to 999), and then press the **ENTER** key.
- 4** Press **▲** **▼** to select the interval of figures to be cut (0 to 30mm), and then press the **ENTER** key.

- Important!**
- If the multiple sheet cutting is executed immediately after cutting in the remote mode, cutting (plotting) will be overlapped. To avoid this trouble, be sure to set the new origin.
 - While the plotter is executing the multiple sheet cutting, it ignores data sent from the computer.
 - To send two or more pieces of data from the computer to the plotter, the data has to be sent while providing an interval of 5 seconds or more between any two pieces of data. If two pieces of data are sent from the computer to the plotter within 5 seconds, the two pieces of data will be subjected to the multiple sheet cutting. The plotter performs cutting for divided cutting data by the specified number of sheets without dividing the data. If any error is displayed, refer to "Error messages" (P.6-8).
 - If there is the origin renewal command in cutting data, you cannot perform copy function.
 - When you use FineCut, the default value of Origin Renewal is "ON". If you perform [No. COPIES], uncheck the checkbox. (Refer to FineCut OPERATION MANUAL Chapter5 "Setting Head Position after Plotting")

SETUP SUB MENU

The SETUP SUB MENU offer convenient functions that you can use in cutting.

The following items are available in the sub menus.

Function name	Outline
DIVISION CUT (P.4-11)	You can cut the data bigger than the sheet width by dividing it. With division cut, you can make settings for the width direction (Y) and feed direction (X).
UP SPEED (P.4-13)	This is to set the speed of sheet and carriage movement when the tool is up. Setting the speed lower makes the sheet misalignment reduced at the time of long sheet feeding.
DUMMY CUT (P.4-13)	You can the blade edge is made to turn to a specific direction before starting cutting, which allows dummy cutting.
SHEET TYPE (P.4-13)	This is to set the types of sheet according to the sheet you use.
ADJ PRS OFFSET (P.4-13)	This is used to expand the value in such a case as when the beginning and end part of the cut are left cut.
OVER CUT (P.4-13)	By over lapping the start point and the end point arbitrarily, you can make the media without uncut area.
SETUP RESET (P.4-14)	Reset the setting values to the initial state.

Setting the DIVISION CUT

When you set DIVISION CUT for the width direction (y), you can cut the data bigger than the media width by dividing it.



In addition, when you set DIVISION CUT for the feeding direction (X), you can cut the long data by dividing it and you can prevent cutting misalignment due to media meandering.

Important! With the DIVISION CUT function, you can use the following convenient functions too.

- Perform a frame cut:
Together with the cut data, the plotter automatically cuts out the frame fitted to the size of the cut data.
- Put a mark for leaving a margin for gluing:
You can put a "mark" for showing the point for gluing together the DIVISION CUT medias.

Set the Y direction (width direction) DIVISION CUT

- 1** Press the **FUNC1** (MENU) ➔ **FUNC3** (>>) ➔ **ENTER** key in LOCAL.
• Cuttbg MENU will be displayed.
- 2** Press **FUNC3** (>>) and then press the **ENTER** key.
• "SETUP SUB MENU" will be selected.

3 Press , and then press the  key.

- "DIVISION CUT" will be selected.

4 Press   to select "Y", and then press the  key.



- If you select "OFF", setting for division cutting will not be carried out. Proceed to step 9.

5 Press the  key.

- "FRAME CUT" will be selected.

6 Press   to select a set value, and then press the  key.

- Set value : ON, OFF
- Select "ON" for the frame cut.

7 Press , and then press the  key.

- "MARK CUT" will be selected.

8 Press   to select a set value, and then press the  key.

- Set value : ON, OFF
- Select "ON" for the mark cut.

9 Press the  key several times to end the setting.

 

Set the X direction (feeding direction) DIVISION CUT

If the data size of the feeding direction exceeds the division length and cross cut length, the machine cuts it at that position by dividing it.



If the cross cut length is set, the machine cuts by overlapping it by the set value.

1 Press the     key in LOCAL.

- Cuttibg MENU will be displayed.

2 Press   key.

- "SETUP SUB MENU" will be selected.

3 Press , and then press the  key.

- "DIVISION CUT" will be selected.

4 Press   to select "X", and then press the  key.


- If you select "OFF", setting for division cutting will not be carried out. Proceed to step 10.

5 Press the  key.

- "DIV. LENG" will be selected.

6 Press   to select a set value, and then press the  key.

- Set value : 50cm to 500 cm (in increments of 50cm)
- When it exceeds the set value, the machine cuts it at that position by dividing it.

7 Press , and then press the  key.

- "CROSS CUT" will be selected.

8 Press   to select a set value, and then press the  key.

- Set value : 0mm to 50mm (in increments of 1mm)
- The machine cuts by overlapping it by the set value.

9 Press the  key several times to end the setting.



Important!

- The setting values are kept in memory even when the power is turned off.
- During execution of division cutting, the plotter ignores any other data sent from the host computer.
- In any of the following cases, the plotter cannot perform division cutting.
The data size is larger than the receiver buffer capacity.
An origin change command is contained in the cutting data.
A two-point compensation value has been set.
The registration mark detection is being performed.
The plotter cuts the test data stored in it.

Reset the setting for DIVISION CUT

1 Press the     key in LOCAL.

- Cuttibg MENU will be displayed.

2 Press   key.

- "SETUP SUB MENU" will be selected.

3 Press , and then press the  key.

- "DIVISION CUT" will be selected.

4 Press the  key.

- "Setting" will be selected.

5 Press   to select "OFF", and then press the  key.


6 Press the  key several times to end the setting.

Make the media without uncut area (OVER CUT function)


By over lapping the start point and the end point arbitrarily, you can make the media without uncut area. Specify the OVER CUT function (valid/invalid) and the length of the OVER CUT. If the length of the OVER CUT is set, when cut starts, cut will be performed from the position to the front by the specified length and the tool will move up going too far at the end. Additionally, you can enable the corner cut function to perform overcutting of corners other than the start and end points.

Important!


- Setting proper OVER CUT can reduce uncut area of start and end point of a media easy to bend. If too large value is set, the result may have a rupture.

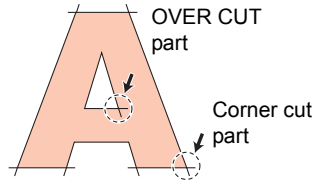

OVER CUT : OFF

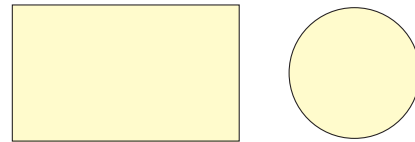

OVER CUT : 1.0mm

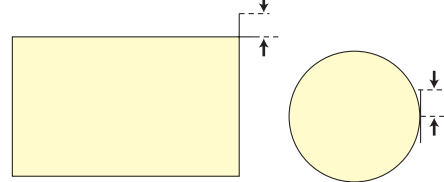

- Press the **FUNC1** (MENU) ➔ **FUNC3** (>>) ➔ **ENTER** key in LOCAL.
 - Cuttibg MENU will be displayed.
- Press **FUNC3** (>>) and then press the **ENTER** key.
 - "SETUP SUB MENU" will be selected.
- Press **▼** 6 times, and then press the **ENTER** key.
 - "OVER CUT" will be selected.

- Press **▲** **▼** to select the set value, and then press the **ENTER** key.
 - Set value : OFF/ 0.1 to 1.0m (in 0.1mm increment)
 - When you press the [ENTER] key, the setting for "CORNER CUT" setting will be displayed.
- Press **▲** **▼** to select ON/OFF, and then press the **ENTER** key.
- Press the **END/POWER** key several times to end the setting.

Other SETUP SUB MENU

How to set other convenient functions is explained below. Change the settings according to the types of use.

- Press the **FUNC1** (MENU) ➔ **FUNC3** (>>) ➔ **ENTER** key in LOCAL.
 - Cuttibg MENU will be displayed.
- Press **FUNC3** (>>) and then press the **ENTER** key.
 - "SETUP SUB MENU" will be selected.
- Press **▼** several times, and select an item to set.
 - See "List of Settings" to select one.

- Press the **ENTER** key.
- Press **▲** **▼** to select a set value.
 - See "List of Settings" to select one.
- Press the **ENTER** key.
- Press the **END/POWER** key several times to end the setting.

Important!

- The set value is retained even when the power is turned "OFF".

List of Settings

The setting is as follows when purchasing:

Function Name	Overview	Set Value
Setting the UP SPEED	This is to set the speed of sheet and carriage movement when the tool is up. Setting the speed lower makes the sheet misalignment reduced at the time of long sheet feeding.	5,10,20,30,40,50,60,70,80,90,100 ^{*1} , AUTO (cm/s)
Setting the DUMMY CUT (P.4-14)	the operation of dummy cutting is set.	OFF / ON
Setting the SHEET TYPE ^{*2}	This is to set the types of sheet according to the sheet you use.	Standard / Heavy
Setting the ADJ-PRS OFFSET (P.4-14)	When there is part of a media left uncut at the starting and ending points, the value is increased.	0 to 3 to 7


^{*1}. Up to 70 for the X axis.

^{*2}. If you set "Heavy" for the media setting, the cutting speed will be limited to 20 cm/s.

About Dummy Cutting

This is performed after detecting the media or when changing the tool type in front of the pinch roller which is near the both ends from the position of the cutter unit is placed presently.

Set the dummy cutting function to OFF when you do not want to damage the media in cutting cut-out characters.

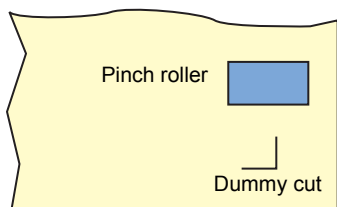


Important!

- When "PEN" is selected for the tool condition, the dummy cutting cannot be set.
- The default of the dummy cutting function is ON. When you have set the dummy cutting function to OFF, perform test cutting (P.2-25) to adjust the cutter blade orientation before cutting.

About Cutter Blade Corrected Pressure Offset

Some part of a media is left uncut because the pressure applied when the cutter blade touches the media is weak. When an optional eccentric blade is used, some part of a media to be cut with the blade's angle being 120 degrees or less may be left uncut.

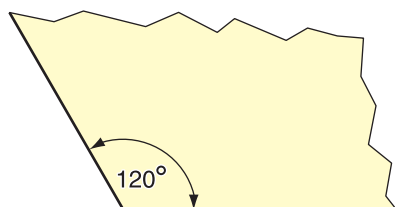

This is because the corners are cut with a low pressure (about 5 g) automatically applied so that the media does not turn up. Some part of a media may be left uncut because the blade edge does not rotate smoothly in its moving direction with the cutting pressure being low. In such a case, configure the setting for the pressure to be increased when the corners are cut.

SETUP RESET

Reset the setting values to the initial state.

- 1 Press the **FUNC1 (MENU)** ➡ **FUNC3 (>>)** ➡ **ENTER** key in LOCAL.
 - Cuttbg MENU will be displayed.
- 2 Press **FUNC3 (>>)** and then press the **ENTER** key.
 - "SETUP SUB MENU" will be selected.
- 3 Press **▼** several times, and select an item to set.
 - See "List of Settings" to select one.
- 4 Press **FUNC3 (>>)** and then press the **▼** twice.
 - "SETUP RESET" will be selected.
- 5 Press the **ENTER** key.
 - The already configured settings are initialized.
- 6 Press the **END/POWER** key several times to end the setting.

Maintenance Function

This section gathers together the functions for checking/adjusting the cutting accuracy when cutting does not go normally.

Function name	Outline
MARK sensor (P.4-14)	Adjusting the registration mark sensor.
SAMPLE CUT (P.4-17)	In case that normal data cutting cannot be performed etc., perform cutting with the sample stored in this plotter to find out the cause of cutting error.
AUTO CUT (P.4-17)	You can cut a medium into multiple pieces with a certain length.
ORIGIN OFFSET (P.4-18)	Adjust the misalignment between the print origin and the cutting origin.

Maintenance of Mark Sensor

If cutting does not go normally, check the items below. In registration mark sensor maintenance, you can carry out maintenance of the following items.

Item	Outline
SENSOR CHECK (P.4-15)	checking the sensor for the register mark detection.
SENSOR OFFSET (P.4-16)	the offset value of the cutter and the mark sensor can be adjusted.
POINTER OFFSET (P.4-16)	If the cutter unit fails to recognize any register mark properly, the possible cause is an error in the positional relationship between the mark sensor and the light pointer. In this case, correct the position of the light pointer.

Check the sensor for the registration mark detection

Prepare the media on which the registration mark is printed.

Important!


- If you move the head and sheet manually, you cannot perform the right response check. Be sure to perform it via the following operations.
- For conditions of already printed registration mark, refer to "Precautions in inputting data with registration marks" (P.4-2).
- The setting values are kept in memory even when the power is turned off.
- The settings performed here for shape of the registration mark and length of the registration mark are reflected in the settings of "MARK DETECT". (P.4-5)
- The detection speed selected here will be used in the registration mark detection operations that are executed from here on.
- The pointer offset value selected by this operation is not initialized by SETUP RESET operation.

1 Press **▲ ▼ ◀ ▶** in Local.

- Enter the jog mode

2 Press **▲ ▼ ◀ ▶** to move the tip of the pen to the registration mark detection position

- Perform registration mark detection at a position 1mm or more away from the registration mark.

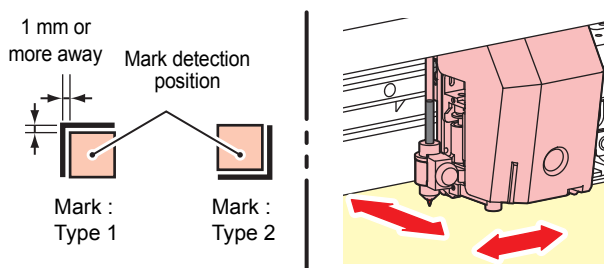

3 Press the **END/POWER** key to terminate the jog mode.

- The plotter returns to the Local.

4 Press the **FUNC1 (MENU) ➡ FUNC3 (>>)** ➡ **ENTER** key.

- Cuttibg MENU will be displayed.

5 Press **FUNC3 (>>) ➡ ▼ ➡ ENTER** key.

- "MAINTENANCE" will be selected.

6 Press the **ENTER** key.

- "MARK SENSOR" will be selected.

7 Press the **ENTER** key.


- "SENSOR CHECK" will be selected.

8 Select the length of the registration mark and shape of the registration mark detection.


- For details on setting the [SIZE] and [FORM], refer to the "Setting of Detecting the Registration Marks". (P.4-5)

9 Press the **ENTER** to perform registration mark detection. ("Detect operation")

■ Detect operation

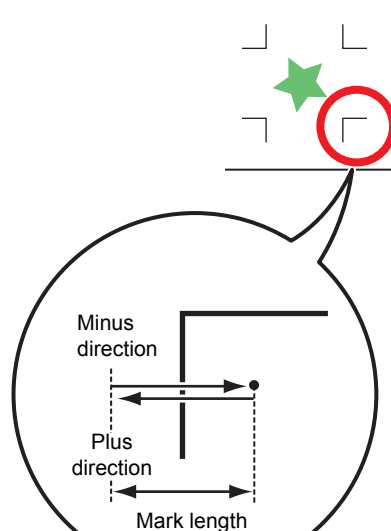

Scan in the A direction

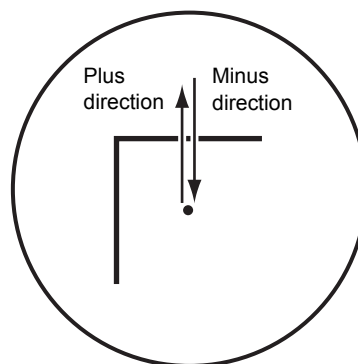

Scan in the B direction

1 Scan in the B direction (plus direction) to detect the line.

- The buzzer sounds when the line is detected. If the line is not detected, the buzzer does not sound.

2 Scan in the B direction (minus direction) to detect the line.

3 Scan in the A direction (plus direction) to detect the line.

4 Scan in the A direction (minus direction) to detect the line.

5 Follow the Steps 1 to 4, and confirm if the buzzer sounds 4 times.

- When the detection behavior completes successfully, the buzzer sounds 4 times.
- If the buzzer does not sound, contact our sales office after checking the registration mark condition.

Alignment of MARK SENSOR

The offset value of the cutter and the mark sensor can be adjusted.

Set the sheet on which the register mark is printed.

1 Install a cutter in the tool holder.

2 Press the **FUNC1** (MENU) ➡ **FUNC3** (>>) ➡ **ENTER** key in LOCAL.

- Cuttbg MENU will be displayed.

3 Press **FUNC3** (>>) ➡ **▼** ➡ **ENTER** key.

- "MAINTENANCE" will be selected.

4 Press the **ENTER** key.


- "MARK SENSOR" will be selected.

5 Press **▼**.

- "SENSOR OFS" will be selected.

6 Press the **ENTER** key.

- After detecting registration mark (1pt), cut the center line of the register mark and both sides of five auxiliary lines every 0.2 mm.

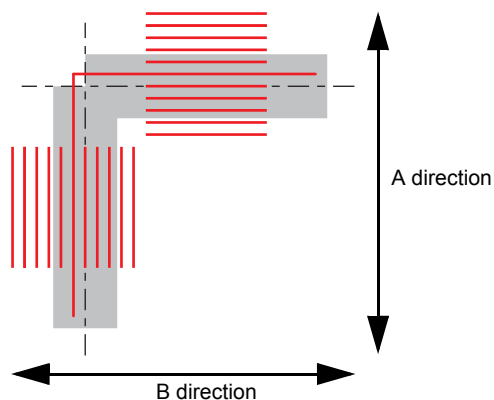

Misaligned by +0.2 mm from the center line of the register mark (---) in the A and the B direction.

7 Enter the corrected value (mm) by pressing the **▲** **▼** for the A direction, or the **◀** **▶** for the B direction.

- If misaligned by +0.2 mm, enter [-0.2].

8 Press the **ENTER** key.

- The plotter will return to the local after registering the compensation value.

Important!

- The setting values are kept in memory even when the power is turned off.
- The sensor offset value selected by this operation is not initialized by SETUP RESET operation.


Correct the light pointer position

If the plotter fails to recognize any registration mark properly, the possible cause is an error in the positional relationship between the MARK sensor and the light pointer.

In this case, adjust the position of the light pointer.

1 Install a cutter in the tool holder.

2 Load the copy paper.

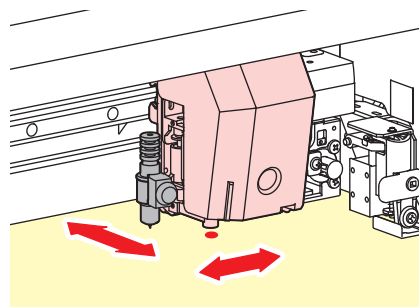

3 Press the **FUNC1** (MENU) ➡ **FUNC3** (>>) ➡ **ENTER** key in LOCAL.

- Cuttbg MENU will be displayed.

4 Press **FUNC3** (>>) ➡ **▼** ➡ **ENTER** key.

- "MAINTENANCE" will be selected.

5 Press the **ENTER** key.

- "MARK SENSOR" will be selected.

6 Press **▼** twice.

- "POINTER OFS" will be selected.

7 Press the **ENTER** key.

- A 10 mm by 10 mm cross pattern will be cutted.
- The light pointer turns on and moves to the center of the cross pattern.

8 Press **▲** **▼** **◀** **▶** to adjust the light pointer position so that the center of the light pointer is in alignment with the center of the cross pattern.

9 Press the **ENTER** key.

- The plotter will return to the local after registering the compensation value.

Important!

- The value registered in the [POINTER OFS] is not initialized even by executing the "SETUP RESET". (P.4-14)

Perform SAMPLE CUT to Find out the Cause of Cutting Error.

In case that normal data cutting cannot be performed etc., perform cutting with the sample stored in this plotter to find out the cause of cutting error.

Sample "Cut"

Cut

Sample "Logo"

Mimaki

Important!

• Execution of SAMPLE CUT will clear the data in the receiver buffer.

- 1** Press the **FUNC1 (MENU)** ➡ **FUNC3 (>>)** ➡ **ENTER** key in LOCAL.
 - Cutting MENU will be displayed.
- 2** Press **FUNC3 (>>)** ➡ **▼** ➡ **ENTER** key.
 - "MAINTENANCE" will be selected.
- 3** Press **▼**, and then press the **ENTER** key.
 - "SAMPLE CUT" will be selected.
- 4** Press **▲** **▼** to select the **SAMPLE DATA** to be cut.
 - There are two types of samples, "Cut" and "Logo." If you select "Cut," proceed to Step 7.
- 5** Press the **ENTER** key.
- 6** Select scale factor using **▲** **▼** to cut Logo.
 - Scale factor : 1 to 999%
- 7** Press the **ENTER** key for starting cutting.

Result of SAMPLE CUT

Sample data can be cut successfully, but other data cannot.

The host computer is faulty.

Sample data as well as other data cannot be successfully cut either. (When leaving the start/end lines without cutting off)

Increase the set value of [ADJ-PRS OFS] to raise the pressure for pressing the cutter blade down.

Cutting a Medium into Multiple Pieces with a Certain Length

You can cut a medium into multiple pieces with a specified length. (Automatic media-cutting function)

Function name	Outline
Cutting interval	Setting the interval for cutting the media.
Leading end adjustment cutting	Setting the length for cutting the medias' leading edges before auto media cut starts. With edge match cutting, the specified number of media sheets can be cut at equally spaced intervals, even if their leading edges were previously cut to be slanted or uneven.
Number of times a medium is cut	Setting the number of times (sheets) for media cutting.

- 1** Press the **FUNC1 (MENU)** ➡ **FUNC3 (>>)** ➡ **ENTER** key in LOCAL.
 - Cutting MENU will be displayed.
- 2** Press **FUNC3 (>>)** ➡ **▼** ➡ **ENTER** key.
 - "MAINTENANCE" will be selected.
- 3** Press **▼** twice, and then press the **ENTER** key.
 - "MEDIA CUT" will be selected.
- 4** Press **▲** **▼** to select a cutting interval, and then press the **ENTER** key.
 - Set value : 10 to 10,000 mm
- 5** Press **▲** **▼** to select a length for the leading end adjustment cutting, and then press the **ENTER** key.
 - Set value : 0 to 500 mm
- 6** Press **▲** **▼** to select the number of times a medium is cut (number of pieces produced by cutting a medium), and then press the **ENTER** key.
 - Set value : 1 to 9,999
 - The number of cuts that you set here will be executed.
 - You can halt the cutting by pressing the [END/POWER] key.
- 7** Press the **END/POWER** key several times to end the setting.

Cutting out Data without Register Marks (ORIGIN OFFSET)

To print & cut the data without register marks, adjust the misalignment between a printed image and the cutting line (Origin Offset).

Adjust the misalignment between the print origin and the cutting origin.

According to the scanning speed in the Y direction, 540dpi and 720dpi has the different ink drop positions while printing. Adjust with the resolution you want to print.

Important!

- This machine stores an adjustment value of either 540dpi or 720dpi. Select the resolution of the printing to be performed after adjustment.
- Before adjusting, set a PVC medium and attach the provided eccentric cutter for cutting.
- Before setting in this section, perform "Setting Media Correction" (P.2-16).
- Even if adjusting in this section, some data may be slightly misaligned depending on the print mode, medium features, the pinch roller setting or the other causes. If so, adjust again.

1 Set a PVC medium (P.2-4), and attach the eccentric cutter for cutting (P.2-20).

2 Press the **FUNC1** (MENU) ➔ **FUNC3** (>>) ➔ **ENTER** key in LOCAL.

- Cuttibg MENU will be displayed.

3 Press **FUNC3** (>>) and then press the **ENTER** key.

- "SETUP SUB MENU" will be selected.

4 Press **FUNC3** (>>) ➔ **ENTER** key.

- "MAINTENANCE" will be selected.

5 Press **ENTER** 3 times, and then press the **ENTER** key.


- "ORIGIN OFFSET" will be selected.

6 Press **▲** **▼** to select 540dpi or 720dpi, and press the **ENTER** key.

- Select one depending on the resolution you want to print with after adjustment.
- Press **◀****▲****▼** to change the print start position (print origin).
- Press **▶** to go to Step 8.


7 Press the **ENTER** key to print & cut the adjustment pattern.

- The adjustment pattern shown on the below is printed & cut.

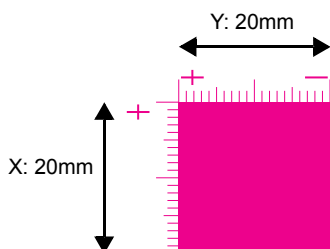

8 Remove the cut pattern, and adjust the misalignment.

- The pink portion that remains after the pattern is peeled off is the misalignment amount.
- You can read off the misalignment amount from the scales on the adjustment pattern.
- If the portion remaining after cutting is in the upper part in the X direction (positive portion of the scale) and in the right part in the Y direction (negative portion of the scale), enter "+" for the X offset and "-" for the Y offset.

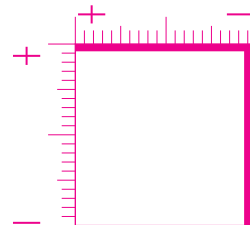

- Press **▲****▼****◀****▶** to enter an offset value of the cutting line.

- **Select X/Y direction** : Press **◀****▶**.
- **Enter an offset value** : Press **▲****▼**.

9 Press the **ENTER** key.

- The adjustment pattern will be printed once more. Carry out the procedure from step 8 onward, and repeat this until the misalignment disappears.
- Press the **END/POWER** key several times to return to LOCAL.

Chapter 5

Maintenance



This chapter

describes the items required to use this machine more comfortably, which are the methods for the daily care, the maintenance of the ink cartridges etc.






Maintenance	5-2	Fill up Ink	5-14
Precautions for Maintenance	5-2	White Ink Maintenance	5-14
About Cleaning Solution.....	5-2	Replacing consumables	5-15
Cleaning the Exterior Surfaces	5-2	Replacing the wiper	5-15
Cleaning the Platen	5-2	If a Waste Ink Tank Confirmation	
Cleaning the Media Sensor	5-3	Message Appears	5-15
Cleaning the Media Press	5-3	Replacing the waste ink tank before the waste	
About MAINTENANCE MENU	5-4	ink tank confirmation message is displayed	5-17
MAINTENANCE MENUs at-a-glance	5-5	Replacing the Cutter Blade	5-17
Maintaining the Capping Station	5-6	Replacing and Adjusting the Cutter Blade ..	5-18
Cleaning the Wiper and Cap	5-6	Replacing the cutter	5-18
Washing the Head Nozzle	5-7	Adjusting the Cutter Blade	5-18
Washing the Ink Discharge Passage	5-8	Replacing the cutter other than supplied	
When the Machine Is Not Used for a		one	5-18
Long Time	5-8	Adjusting blade edge of cutter other than	
Cleaning the Ink Head and the Area		supplied one	5-19
around It	5-10		
Nozzle Recovery Function	5-11		
Reset the set value	5-12		
Automatic Maintenance Function	5-13		
Setting the Refreshing Intervals	5-13		
Setting the Tube Wash Intervals	5-13		
Setting the Cleaning Intervals and Type ...	5-13		

Maintenance

Maintain the machine regularly or as necessary so that its accuracy will be maintained and it can continue to be used for a long time.

Precautions for Maintenance

Pay attention to the following items when maintaining this machine.

	<ul style="list-style-type: none"> When using cleaning solution for maintenance, be sure to wear the supplied protective glasses.
	<ul style="list-style-type: none"> Never disassemble the machine. Disassembling it can result in electric shock hazards or damage to the machine. Before maintenance, be sure to turn off the power switch and unplug the power cable; otherwise, an unexpected accident may occur.
	<ul style="list-style-type: none"> Prevent moisture from entering the machine. Moisture inside the machine can cause electric shock hazards or damage to the machine.
	<ul style="list-style-type: none"> To ensure stable ink jetting, it is necessary for the machine to eject a small amount of ink (flushing) regularly when a printing (outputting) operation has not been performed for a long time. When the machine is not to be used for a long time, turn off only the power switch on the front side, leave the main power switch at the right side turned ON (in the position of), and leave the power cable connected.
	<ul style="list-style-type: none"> Do not wipe the nozzle face of the heads, wiper, caps, etc. with water or alcohol. Doing so can cause nozzle clogging or machine failure. Do not use benzene, thinner, or any chemical agent containing an abrasive. Such materials can deteriorate or deform the surface of the cover. Do not apply a lubricant, etc. to any parts inside the machine. Doing so can cause printing failure. Be careful that the cleaning solution, ink, etc. not to stick to the cover because this may cause the surface of the cover to deteriorate or deform.


About Cleaning Solution

Use the cleaning liquid dedicated for the ink being used.

Type of Ink	Applicable maintenance washings
Solventt ink	Maintenance washing liquid kit (SPC-0369) [Sold separately]
Sublimation dye ink	Cleaning Liquid Bottle Kit A29 (SPC-0137) [Sold separately]

Cleaning the Exterior Surfaces


When the exterior surfaces of the machine are stained, dampen a soft cloth with water or a neutral detergent diluted with water, squeeze it, and wipe the surfaces with the cloth.

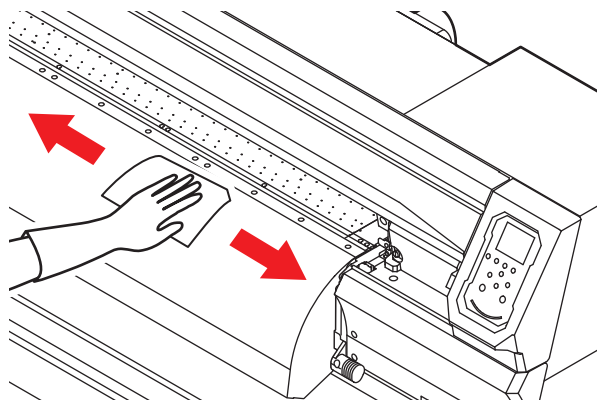

Cleaning the Platen

The platen easily gets dirty with lint, paper dust, etc. generated when a media is cut.

Wipe off conspicuous stains with a soft-hair brush, a dry cloth, a paper towel, etc.

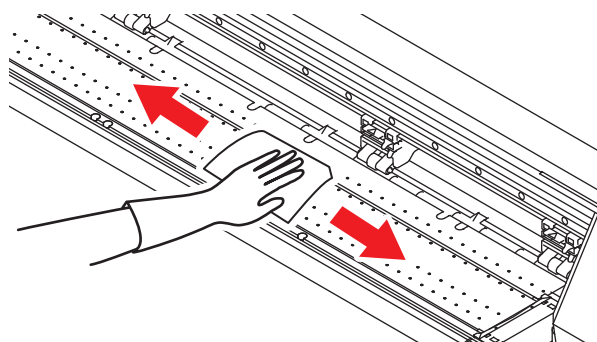

- When the platen is stained with ink, wipe it off with a paper towel containing a small amount of cleaning solution for maintenance.



- Before cleaning the platen, make sure that the platen has cooled adequately.
- Because dust and dirt are easily accumulated in the slots for holding a media and cutting paper (cutter line), be sure to clean these parts carefully.


Cleaning the Media Sensor

The media sensors are located on the platen in the backside and the bottom surface of the head. When the sensor is covered with dust, etc., it may cause false detection of media.

Using a cotton swab, remove the dust, etc. accumulated on the surface of the sensor.


When cleaning the sensor on the lower surface of the head is cleaned, move the carriage to the left end by the operations of step 1 of P.5-10 "Cleaning the Ink Head and the Area around It", and then clean it.

The backside of the machine

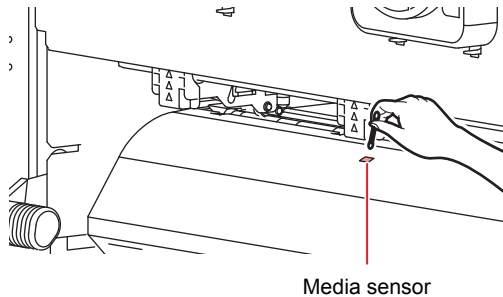

Media sensor

The lower surface of the head

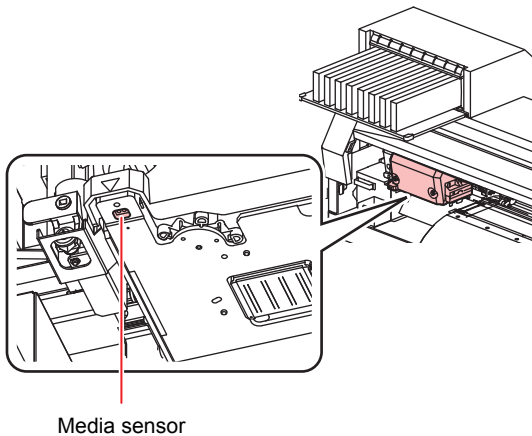

Media sensor




- Don't touch the cutter around the media sensor. Sharp cutter tip may injure you.

Cleaning the Media Press

When the media press is covered with lint, dust, etc., a media cannot be fed normally during printing or dust sticks to the nozzles, which may result in abnormal printing.


Clean the media press regularly.

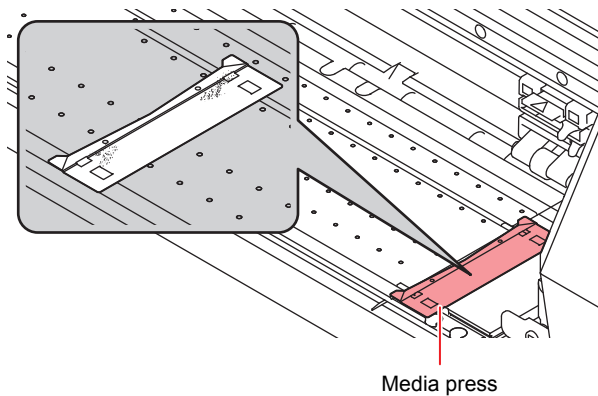

Media press


About MAINTENANCE MENU

This provides various settings for doing maintenance on the machine.
The following items can be set in Maintenance settings.

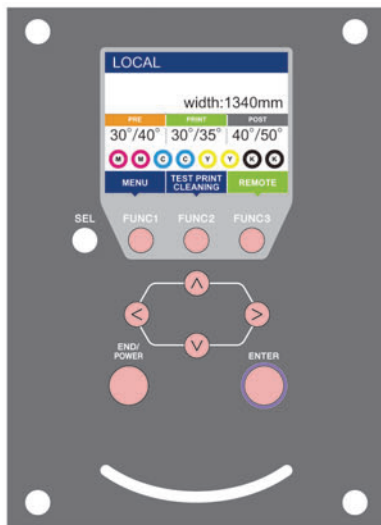


- FUNC1** : Press this to select MAINTENANCE MENU, or to switch to the previous screen.
- FUNC2** : Press this to use the maintenance function.
- FUNC3** : Press this to switch to the next screen.
- ↑ ↓** : Use these to select a setting item.
- ENTER** : Press this to confirm a setting, etc..



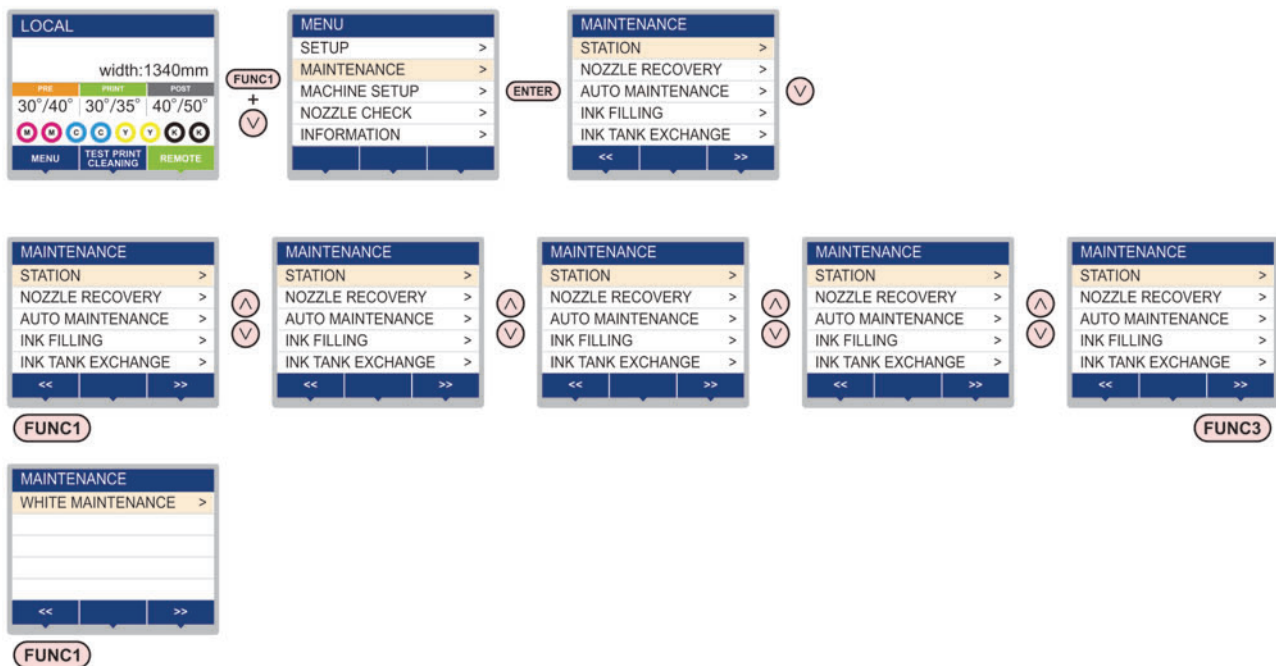




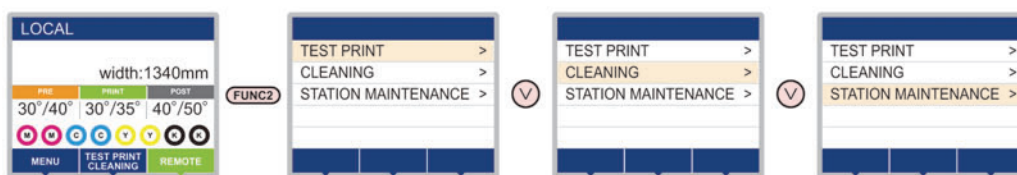


◆ MAINTENANCE MENUs at-a-glance



  ◆ Screen transition when **FUNC2** key is pressed



MAINTENANCE MENUs at-a-glance

Item		Set value	Meaning
STATION MAINTENANCE	For carrying out maintenance on the carriage and station periphery.		
	CARRIAGE OUT ( P.5-6)	_____	Moves the carriage out, for carrying out cleaning of the cap periphery, head, wipers, etc.
	NOZZLE WASH ( P.5-7)	1 to 99min	Soaks the nozzle surfaces in maintenance cleaning fluid, for carrying out recovery from nozzle clogging or bent.
	DISWAY WASH ( P.5-8)	_____	Executes washing of the suction pump tubes.
	CUSTODY WASH ( P.5-8)	1 to 99min	Carried out when the machine is going to be out of use for an extended period. Washes the nozzles and tubes beforehand, to keep the machine in fine condition.
	WIPER EXCHANGE ( P.5-15)		Used when replacing the wiper. If the wiper is replaced, the number of times the wiper was used that is managed in this device is reset.
NOZZLE RECOVERY ( P.5-11)	For printing using another nozzle, if nozzle wash and so forth fail to effect recovery from nozzle clogging, etc.		
	PRINT		Prints a pattern, to identify the nozzle that is clogged.
	ENTRY		Registers the faulty nozzle identified by “PRINT”.
	RESET		Resets a registered faulty nozzle.
AUTO MAINTENANCE ( P.5-13)	For having the various maintenance functions executed automatically. Set the execution interval for each maintenance function.		
	REFRESH	The set value will differ according to the ink type being used.	For setting the activation interval for refresh.
	TUBE WASH		For setting the activation interval for tube wash.
	CLEANING		For setting the activation interval for head cleaning.
	CLEANING TYPE	NORMAL/ SOFT/ HARD	For setting the type of head cleaning.
INK FILLING ( P.5-14)	Supplies ink to correct nozzle clogging.		
INK TANK EXCHANGE ( P.5-17)	Resets or corrects the used count for the waste ink tank.		
WHITE MAINTENANCE ( P.5-14)	Executes the white ink maintenance.		

Maintaining the Capping Station

Maintain the ink cap, wiper, etc. located in the capping station. (SATION MAINT.)



- To keep the nozzle status normal, perform wiper cleaning frequently.

The ink cap and wiper function as follows.

- **Wiper** : It wipes off ink sticking to the head nozzles.
- **Ink cap** : It prevents the head nozzles from clogging due to dryness.

As the machine is used repeatedly, the wiper and ink cap gradually become dirty with ink, dust, etc. If nozzle missing cannot be corrected even after head cleaning (P.2-16) has been performed, use a maintenance liquid 01 kit and clean stick.

Tools required for Maintenance

- | | | |
|--|----------|-----------|
| • Maintenance washing liquid kit (SPC-0369) or Cleaning Liquid Bottle Kit A29 (SPC-0137) | | |
| • Clean stick (SPC-0527) | • Gloves | • Goggles |



- Be sure to wear the supplied goggles and gloves when maintaining the capping station. Otherwise, you may get ink in your eyes.
- Do not move the carriage out of the capping station by hand. When it is desirable to move the carriage, press the [FUNK1] key to execute the carriage-out. (P.5-6 Steps 1 to 2)

Cleaning the Wiper and Cap

It is recommended that the wiper and cap be cleaned frequently in order to maintain the high image quality of the machine and keep the machine itself in good working order.



- Replace the wiper with a new one when it is extremely dirty or bent. (P.5-15)
- When cleaning the wiper, be careful that lint from the clean stick does not get left on the wiper. Remaining lint may cause image quality to deteriorate.

1


Press the **FUNC1 (MENU)** key in **LOCAL**.

- MAINTENANCE MENU will be displayed.

2

Press the **ENTER** key twice.


- The carriage moves onto the platen.

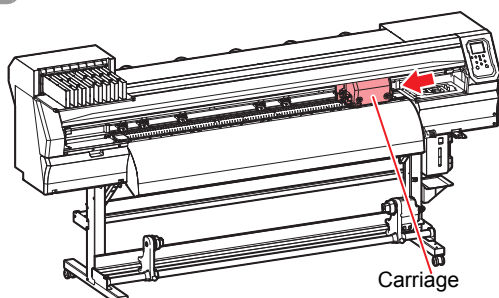

3

Remove the wiper.


- Pull out the wiper by holding the protrusions at its both ends.

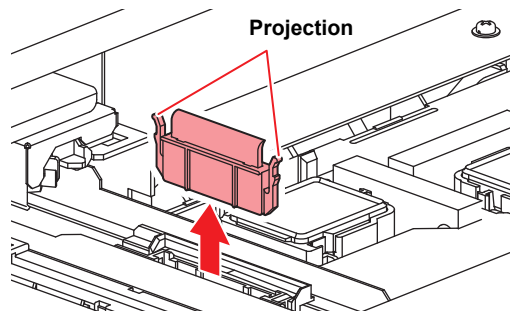

4

Clean the wiper and bracket.


- Wipe off the ink sticking to the wiper and bracket with a clean stick dipped in cleaning solution for maintenance. Wipe off so that cleaning solution for maintenance will not remain.

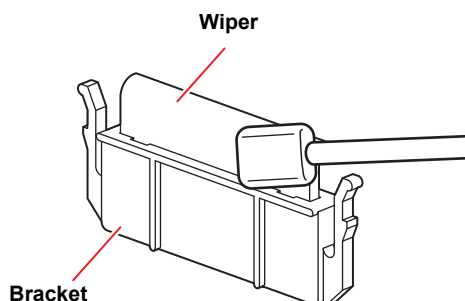

5


Clean the wiper slider.

- Wipe off the ink sticking to the wiper slider with a clean stick dipped in cleaning solution for maintenance. Wipe off so that cleaning solution for maintenance will not remain.

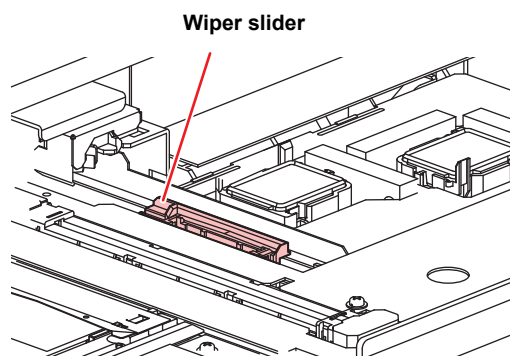


6 Set the wiper at the original position.

- Insert the wiper by holding the protrusions at its both ends.

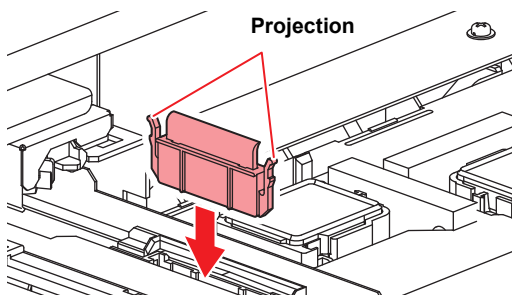

7 Clean the cap rubber.

- Wipe off the ink sticking to the cap rubber with a clean stick dipped in maintenance solution for maintenance.
- Wipe off so that maintenance solution for maintenance will not remain.

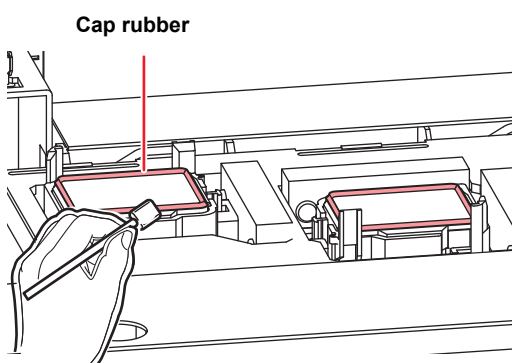

8 Press the **ENTER** key after the cleaning.

9 Close the front cover then press the **ENTER** key.

- After its initial operation, the machine returns to step1.

Washing the Head Nozzle

1 Press the **FUNC1** (MENU) **ENTER** key in LOCAL.


- MAINTENANCE MENU will be displayed.

2 Press the **ENTER** key.

- "STATION" will be selected.



3 Press , and then press the **ENTER** key.

- "NOZZLE WASH" will be selected and the carriage will move onto the platen.

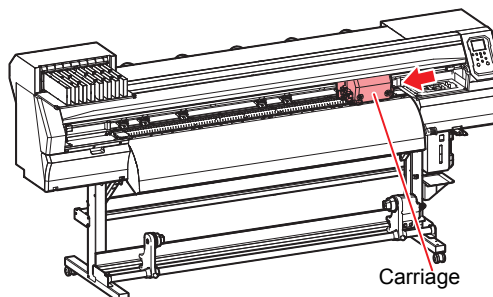

4 Clean the wiper and the bracket, and then press the **ENTER** key.


- (1) Open the right maintenance cover then pull out it by holding projections at both ends of the wiper.
- (2) Clean the wiper and bracket with a clean stick dipped in maintenance washing liquid for maintenance. ()
 - Wipe off so that maintenance washing liquid for maintenance will not remain.
- (3) Insert it in the original position by holding the projections at both ends of the wiper.

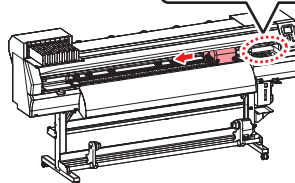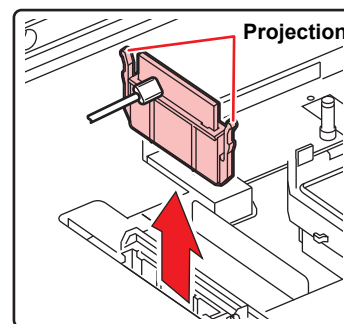

5 Clean the cap rubber , and then press the **ENTER** key.

- Wipe off the ink sticking to the cap rubber with a clean stick dipped in maintenance washing liquid for maintenance.
- Wipe off so that maintenance washing liquid for maintenance will not remain.
- At this time, the discharge passage is cleaned automatically.

- 6** Fill up the cap with cleaning solution for maintenance .

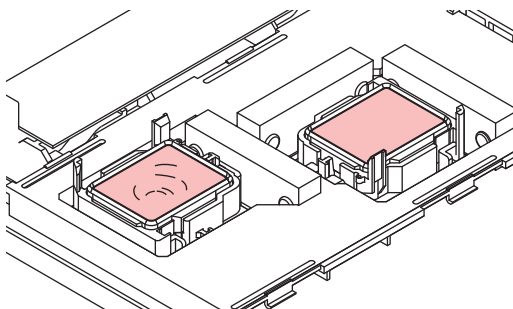

- 7** Close the front cover, and then press the **ENTER** key.

- 8** Press **▲** **▼** to set the time for the maintenance washing liquid to be left as it is, and then press the **ENTER** key.

- **Set value** : 1 to 99 minutes (Unit: minute)
- The maintenance washing liquid filled in the cap is absorbed.
- "Please Wait" will be displayed in the display until the time you set has elapsed.

Important!

- When nozzle missing is not cleared even after this washing is carried out several times, contact the distributor in your region or our service office.

Washing the Ink Discharge Passage

Wash the ink discharge passage regularly (about once a week) to prevent the head nozzles from clogging due to ink coagulation inside the passage.

Important!

- Before washing the ink discharge passage, make sure that the maintenance washing liquid is set. If the maintenance washing liquid is not set, washing operation will not be conducted and the passage could be clogged.

- 1** Press the **FUNC1** (MENU) **→** **▼** **→** **ENTER** key in LOCAL.

- MAINTENANCE MENU will be displayed.

- 2** Press the **ENTER** key.

- "STATION" will be selected.


- 3** Press **▼** twice, and then press the **ENTER** key.

- "DISWAY WASH" will be selected and the carriage will move onto the platen.
- Dry suction operation is performed repeatedly until the washing work is completed.


- 4** Press the **ENTER** key.

- Dry suction operation is performed repeatedly until the washing work is completed.

- 5** Fill up the cap with cleaning solution for maintenance .

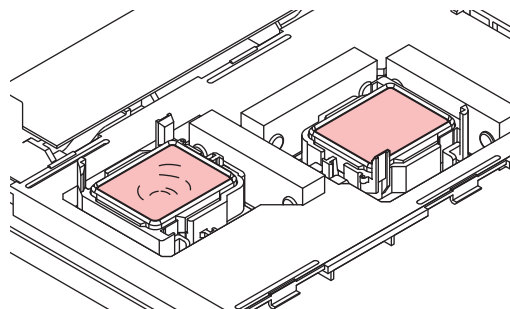

- If the cleaning solution cartridge is not usable, suck maintenance solution into a dropper and fill up the cap with it. Fill up the cap with maintenance solution on the verge of overflow from the cap.

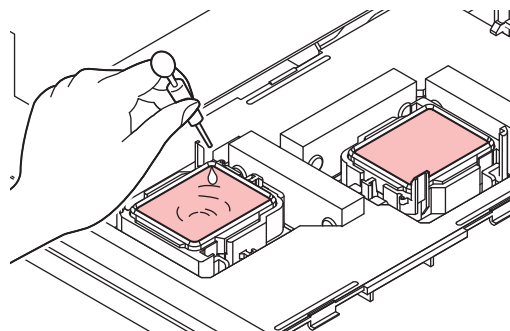

- 6** Press the **ENTER** key.

When the Machine Is Not Used for a Long Time

When the machine is not going to be used for a week or more, use the cleaning function for custody to clean the head nozzles and ink discharge passage. After this, keep the machine in custody.

Important!

- Use the machine with always turning "ON" the main power. The function preventing nozzle clogging operates automatically to protect the head of the nozzle.
- The head nozzle may result in nozzle clogging if the main power switch is left OFF for a long time.

Check the items on the right beforehand.

Is [NEAR END] or [INK END] displayed?

- The cleaning solution or ink is absorbed when the nozzles are washed. At this time, if the state of "no ink" or "almost no ink" is detected, the nozzle washing operation cannot start.
- Replace the cartridge with another from which the state of "almost no ink" or "no ink" is not detected.



- When the warning messages "Check waste ink" are indicated, check the waste ink tank, and then operate it, referring to P.5-15 "If a Waste Ink Tank Confirmation Message Appears" according to the situation.

1 Press the **FUNC1** (MENU) **ENTER** key in LOCAL.

- MAINTENANCE MENU will be displayed.

2 Press the **ENTER** key.


- "STATION" will be selected.

3 Press 3 times, and then press the **ENTER** key.

- "CUSTODY WASH" will be selected and the carriage will move onto the platen.



Important!

- Until wiper/ bracket cleaning is completed, "COMPLETED" is displayed on the screen. After the work up to the step 3 is completed, press the [ENTER] key. If you press the [ENTER] key before cleaning is completed, the machine moves to the next washing procedure.

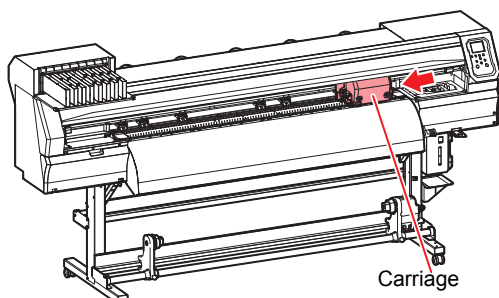

4 Clean the wiper and the bracket.

- (1) Open the front cover then pull out it by holding projections at both ends of the wiper.
- (2) Clean the wiper and bracket with a clean stick dipped in cleaning solution for maintenance. () Wipe off so that cleaning solution for maintenance will not remain.
- (3) Insert it in the original position by holding the projections at both ends of the wiper.

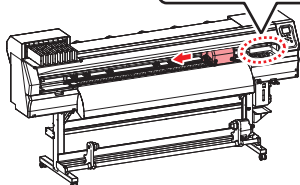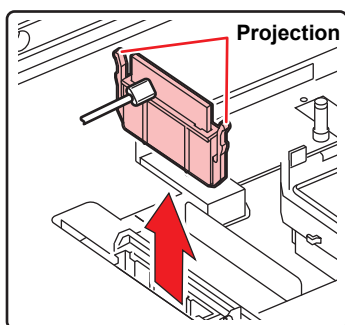

5 Press the **ENTER** key.


Important!

- Until wiper cleaning is completed, [COMPLETED (NEXT): ENT] is displayed on the screen. After the work up to the step 5 is completed, press the [ENTER] key. If you press the [ENTER] key before cleaning is completed, the machine moves to the next washing procedure.

6 Clean the cap rubber.

- Wipe off the ink sticking to the cap rubber with a clean stick dipped in maintenance solution for maintenance.
- Wipe off so that maintenance solution for maintenance will not remain.
- At this time, the discharge passage is cleaned automatically.

Cap rubber

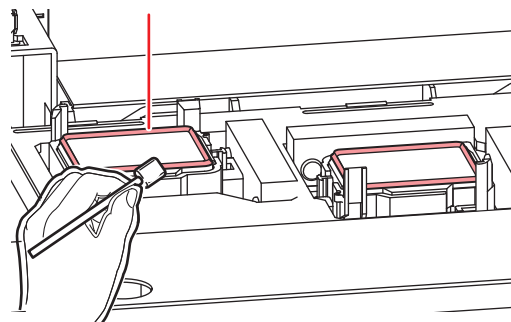


7 Press the **ENTER** key.


Important!

- Until washing liquid is filled, [COMPLETED (NEXT): ENT] is displayed on the screen. After the work up to the Step 8 is completed and you close the front cover, press the [ENTER] key. If you press the [ENTER] key before washing liquid is filled, the carriage returns to the original position.

8 Fill up the cap with cleaning solution for maintenance .

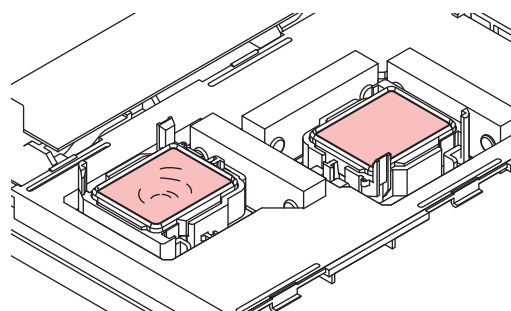

- If the cleaning solution cartridge is not usable, suck maintenance solution into a dropper and fill up the cap with it. Fill up the cap with maintenance solution on the verge of overflow from the cap.

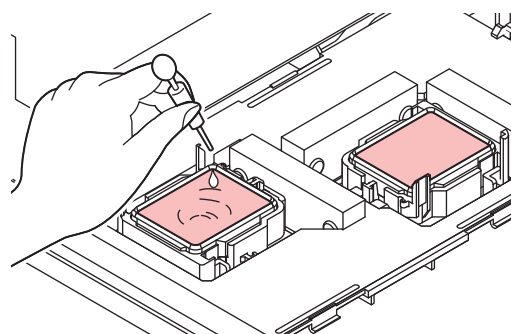

9 Press the **ENTER** key.

10 Press **▲** **▼** to set the time for the cleaning solution to be left as it is.


- Set Value: 1 to 99 min (by the unit of 1 min)

11 Press the **ENTER** key.


- The nozzles are washed.
- When the nozzles have been completely washed, the head moves to the maintenance position.

12 Open the front cover.

13 Fill up the cap with cleaning solution for maintenance .

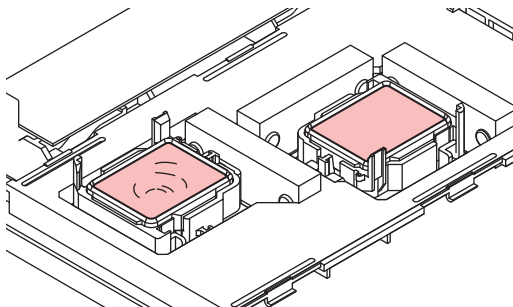

- If the cleaning solution cartridge is not usable, suck maintenance solution into a dropper and fill up the cap with it. Fill up the cap with maintenance solution on the verge of overflow from the cap.

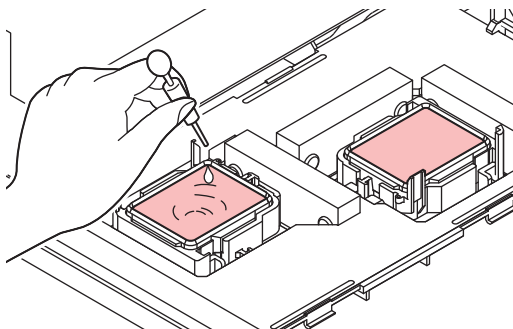

14 Close the front cover and press the **ENTER** key.

- After its initial operation, the machine returns to step2.

Cleaning the Ink Head and the Area around It

Because the ink head employs a very precise mechanism, due care needs to be taken when it is cleaned.

Using a clean stick, etc., rub off gelatinous ink or dust that may stick to the lower part of the slider and the area around the ink head. In doing so, never rub the nozzles of the head.

Tools required for cleaning

• Clean stick (SPC-0527)	• Gloves
• Goggles	



- Be sure to wear the attached goggles and gloves when cleaning the area around the ink head. Otherwise, you may get ink in your eyes.
- The ink contains organic solvent. If you get the ink on your skin or in your eyes, wash it away with plenty of water immediately.

1 Press the **FUNC1 (MENU)** **▼** **→** **ENTER** key in LOCAL.

- MAINTENANCE MENU will be displayed.


2 Press the **ENTER** key twice.

- "CARRIAGE OUT" will be selected.

3 Press **▼**, and then press the **ENTER** key.

- "HEAD MAINTENANCE" will be selected and the carriage will move to the left end of this machine.


4 Open the maintenance cover.

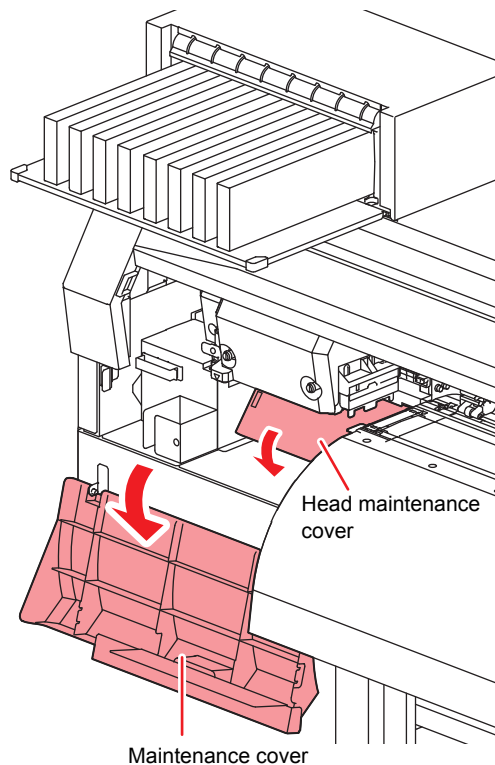

5


Wipe ink sticking to the side of the head off with a clean stick.

- Never rub the nozzles.

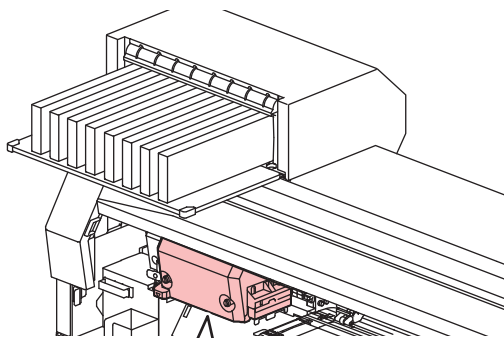

Clean the side surface of the head (shown in deep gray) with a clean stick.

The nozzle part (Never touch it.)

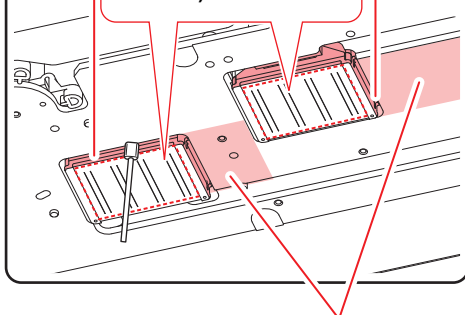

Clean with a clean stick or a waste cloth.

6

Press the **ENTER** key after the cleaning.

7

Close the maintenance cover, and then press the **ENTER** key.

- After its initial operation, the machine returns to LOCAL.

Nozzle Recovery Function

NOZZLE RECOVERY: When nozzles missing can not be improved at specific points, other good nozzles can be used as alternatives for printing.

1

Press the **FUNC1** (MENU) **ENTER** key in LOCAL.

- MAINTENANCE MENU will be displayed.

2

Press , and then press the **ENTER** key.


- "NOZZLE RECOVERY" will be selected.

3


Press the **ENTER** key twice.

- Printing of the nozzle pattern will start.
- Select "ENTRY" then "Move to select of the Nozzle line (Step 4) without drawing a pattern"

Overhead view

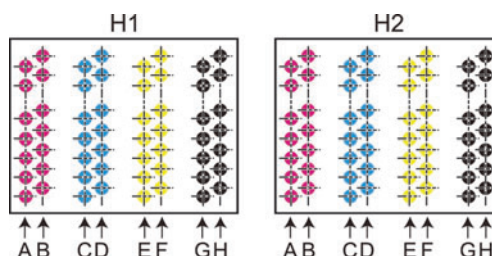

Nozzle pattern of Head 1

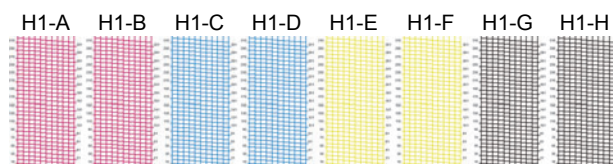


Important!

- For 6-color ink sets, the nozzle patterns "H1-B" and "H1-D" are not printed.
- When using leaf media, set a media of more than A3 size put horizontally. If a media with narrow width is set, printing will only be conducted to midway.

4

Select the Nozzle line that needs **NOZZLE RECOVERY** by pressing , and then press **ENTER** key.

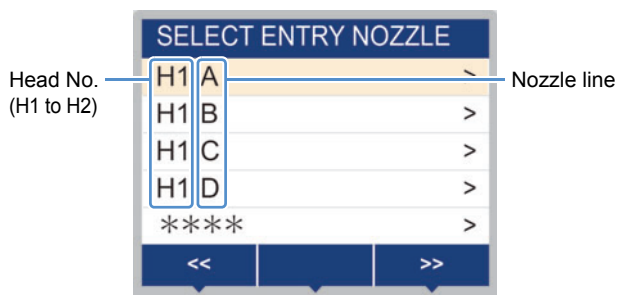


5

5

Register the Nozzle number that needs NOZZLE RECOVERY and then press

ENTER key.


- (1) Select the registration number from 1 to 10 by pressing [**▲**][**▼**] key and press the [**ENTER**] key.
- (2) Register the nozzle number that needs recovery by pressing [**▲**][**▼**] key and press the [**ENTER**] key.

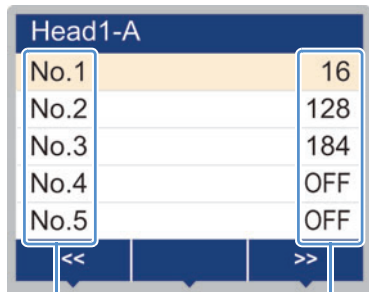

Recovery nozzle No. or OFF

Registration number : 1 to 10

Example of nozzle to be recovered

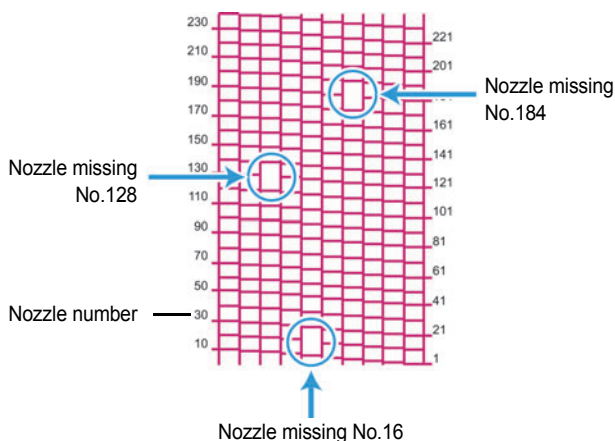

Registration number	Recovery Nozzle No.	State
1	16	Target for nozzle recovery
2	128	Target for nozzle recovery
3	184	Target for nozzle recovery
4	OFF	No registration
5	OFF	No registration

6

Press the **END/POWER** key several times to end the setting.

Important!

- Up to 10 nozzles can be registered per 1 nozzle line.
 - Even if you use this function, time required for drawing does not change.
 - When printing has been done with the lowest path, nozzle recovery is not reflected.
- Moreover, depending on the conditions, there are cases where only 20 to 120 nozzles are enabled at both head ends (front and rear). Perform test printing to confirm.



- When you use white ink, print on the clear film to check.

Reset the set value

1

Press the **FUNC1** (MENU) **→** **▼** **→** **ENTER** key in LOCAL.

- MAINTENANCE MENU will be displayed.

2

Press **▼**, and then press the **ENTER** key.

- "NOZZLE RECOVERY" will be selected.

3

Press **▼** twice, and then press the **ENTER** key.

- "RESET" will be selected.

4

Press **▲** **▼** and **FUNC1** (PAGE>) **FUNC3** (<<) to select the Nozzle line that need reset, and then press the **ENTER** key.

- A reset confirmation message will be displayed.

5

Press the **ENTER** key.

6

Press the **END/POWER** key several times to end the setting.

Automatic Maintenance Function

To use this machine comfortably, you can set various maintenances to be performed automatically.

Here, set performing intervals of various automatic maintenances.

You can prevent troubles such as ink clogging by performing automatic maintenance periodically (automatic maintenance function).

For the auto maintenance functions, the following items can be set:

- Important!**
- When you perform maintenance manually, after manual maintenance is completed and when time set with the automatic maintenance function has passed, maintenance starts automatically.

Function name	Descriptions
REFRESH	The interval between each refreshing operation is set.
CLEANING (Interval)	The interval between each cleaning operation is set.
CLEANING (Type)	The cleaning type is set.

- Important!**
- If the "Check waste ink" warning message is displayed, the operation set in the auto maintenance function is not carried out. Perform the operations of P.5-16 "Replace the waste ink tank with another" if required.
 - When the power switch on the front of the machine is turned off, check the waste ink tank.

Setting the Refreshing Intervals

The interval between each operation of ejecting a small amount of ink from the nozzles to prevent nozzle clogging is set.

- Press the **FUNC1 (MENU)** **ENTER** key in LOCAL.
 - MAINTENANCE MENU will be displayed.
- Press , and then press the **ENTER** key.
 - "AUTO MAINTENANCE" will be selected.
- Press the **ENTER** key.
 - "REFRESH" will be selected.
- Press to set the refreshing interval, and then press the **ENTER** key.
 - Set value** : The set value will differ according to the ink type being used.
- Press the **END/POWER** key several times to end the setting.

Setting the Tube Wash Intervals

For setting the interval at which washing of the ink tubes will be carried out, in order to prevent ink clogging due to coagulation of ink inside the ink tubes.

- Important!**
- In order to perform tube washing with the Automatic Maintenance Function, the maintenance washing liquid needs to be set. If the maintenance washing liquid is not set, tube washing operation will not be regularly conducted and the passage could be clogged.
- Press the **FUNC1 (MENU)** **ENTER** key in LOCAL.
 - MAINTENANCE MENU will be displayed.
 - Press twice, and then press the **ENTER** key.
 - "AUTO MAINTENANCE" will be selected.
 - Press , and then press the **ENTER** key.
 - "TUBE WASH" will be selected.
 - Press to set the tube washing interval, and then press the **ENTER** key.
 - Set value** : The set value will differ according to the ink type being used.
 - Press the **END/POWER** key several times to end the setting.

Setting the Cleaning Intervals and Type

The cleaning type and the interval between each cleaning operation are set.

- Press the **FUNC1 (MENU)** **ENTER** key in LOCAL.
 - MAINTENANCE MENU will be displayed.
- Press , and then press the **ENTER** key.
 - "AUTO MAINTENANCE" will be selected.
- Press the several times to select "Interval" or "Type", and then press the **ENTER** key.
- Press to select a set value, and then press the **ENTER** key.
 - Set value** : The set value will differ according to the ink type being used.
 - Set value of type** : SOFT/ NORMAL/ HARD
- Press the **END/POWER** key several times to end the setting.

Fill up Ink

Supplies ink to correct nozzle clogging.

- 1** Press the **FUNC1 (MENU)** **ENTER** key in **LOCAL**.
 - MAINTENANCE MENU will be displayed.
- 2** Press times, and then press the **ENTER** key.
 - "FILL UP INK" will be selected.
- 3** Press to select the filling type.
 - **Soft** : Use this in cases where head cleaning will not achieve recovery, such as when multiple clogged nozzles occur or nozzle cluster dropout occurs.
 - **Normal** : Use this if nozzle cluster dropout occurs in initial ink filling.
 - **Hard** : Use this in cases where the dumper has become empty, such as in dumper replacement.
- 4** Press the **ENTER** key.
 - If you selected "Soft" in step 3, a Select Fill Up Color screen will be displayed.
 - If you selected "Normal" or "Hard", go to step 6.
- 5** Press to select the filling color, and then press the **ENTER** key.
- 6** Press the **ENTER** key.
 - Ink is supplied automatically.
- 7** Press the **END/POWER** key several times to end the setting.

White Ink Maintenance

White ink precipitates easier than other inks.

- If not printing more than two weeks, white ink may precipitate in the ink cartridge or inside of this machine.
- When an ink precipitates, the nozzle may be clogged and it can not draw normally.
- Make sure to perform periodical maintenance to avoid precipitation and to keep white ink in good condition.



- Perform the maintenance below before working once a week.
- Use the specified ink cartridge.

Important!

As the component of white ink is easy to settle out, it is necessary to shake it periodically.

- When 24 hours have passed with the power supply is ON.
- When the power supply is ON, the warning message "SHAKE WHITE INK CARTRIDGES" is displayed.

- 1** Press the **FUNC1 (MENU)** **ENTER** key in **LOCAL**.
 - MAINTENANCE MENU will be displayed.
- 2** Press **FUNC1 (PAGE>)**, and then press the **ENTER** key.
 - "WHITE MAINT." will be selected..
- 3** Press the **ENTER** key.
- 4** Press the **ENTER** key.
 - The automatic discharging operation and the filling operation are performed, then, cleaning is performed.
- 5** Press the **END/POWER** key several times to end the setting.

Replacing consumables

Replacing the wiper

The wiper is consumable. When the display indicates the warning message “Replace a WIPER” it is necessary to check and replace the wiper, immediately replace the wiper with a new one.

Also, wipe ink sticking to the lower surface of the slider off.

Important!

- When the warning message for replacing wiper is shown, confirm whether there is no damage and fuzz at the top edge of the wiper film. If there is no damage on the top edge of the wiper film, it is possible to use the wiper continuously without replacing it.
- A cleaning wiper is an option. Buy one through the dealer in your region or at our service office.

1 Press the **FUNC1 (MENU)** **ENTER** key in LOCAL.

- MAINTENANCE MENU will be displayed.

2 Press the **ENTER** key.


- “STATION” will be selected.

3 Press times, and then press the **ENTER** key.

- “WIPER EXCHANGE” will be selected and the number of times the wiper was used will be reset.


4 Press the **ENTER** key.

- The carriage will move onto the platen.

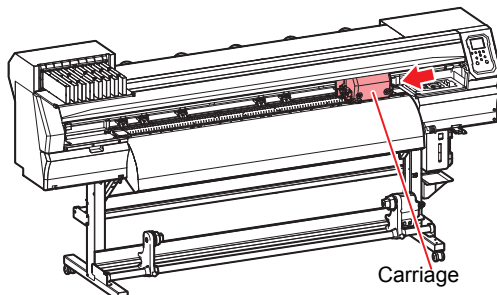


5 Remove the wiper.

- Pull out the wiper by holding the protrusions at its both ends.

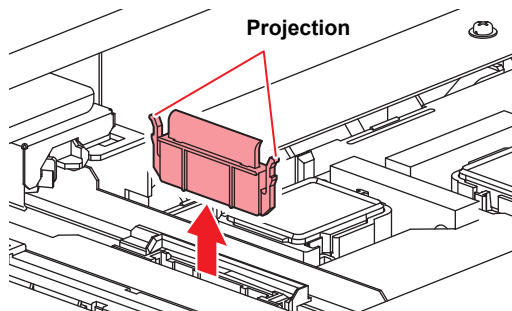

6 Insert a new wiper.

- Insert the wiper by holding the protrusions at its both ends.

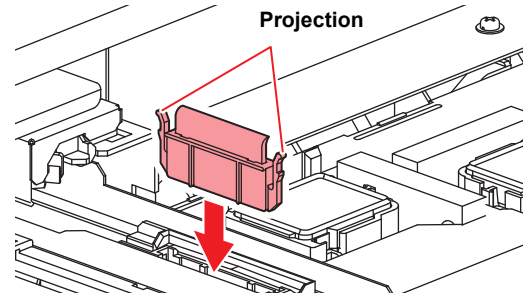

7 Press the **ENTER** key.

- After its initial operation, the machine returns to LOCAL.

If a Waste Ink Tank Confirmation Message Appears

Ink used in head cleaning, etc. is stored in the waste ink tank on the lower right side of the machine. This machine counts the accumulated amount of discharged ink. When that reaches a specified amount, the machine displays a confirmation message. (When this message is displayed, consider the replacement of the waste ink tank.)



- The message is displayed when it reaches 80% (1.6L) of the 2L tank.

Confirmation Message in LOCAL

1 The warning message “Check waste ink” is displayed.

2 Check the state of the waste ink tank

- When it is different from the actual amount, press **[▲][▼]** and correct.
- When you correct (80%), press the **[ENTER]** key to return to LOCAL.
- When you replace (disposal) and clear the count, perform the procedures in “Replace the waste ink tank with another”. (P.5-16)

Replace the waste ink tank with another

1 The warning message "Check waste ink" is displayed.

2 Press the **FUNC2** (MAINT.) key.


3 Check the state of the waste ink tank.

4 If the amount of waste ink needs to be adjusted, press the **ENTER** key.


- Compare the amount of waste ink shown on the display and the amount you visually confirmed. If there is no major problem with the value shown on the display, instead of the [ENTER] key, press the [END] key and proceed to Step 6.

5 Press **▲** **▼** to adjust the level, and then press the **ENTER** key.


6 Pull the waste ink tank stopper to open to the front.

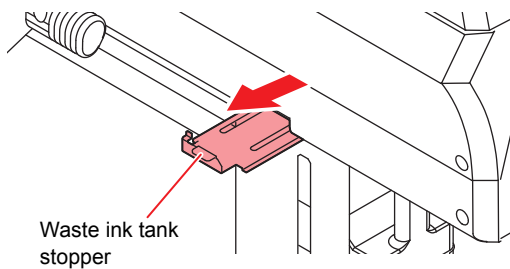

7 Pull it frontward to remove by holding the waste ink tank handle.

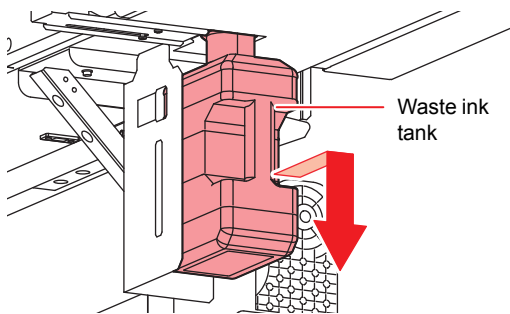


- Put a cap on the waste ink tank removed.

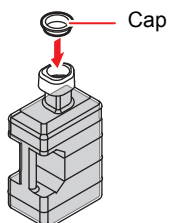

8

Replace the waste ink tank.


- (1) Prepare a new waste ink tank (SPC-0117).
- (2) Insert the waste ink tank by holding a handle of the tank.

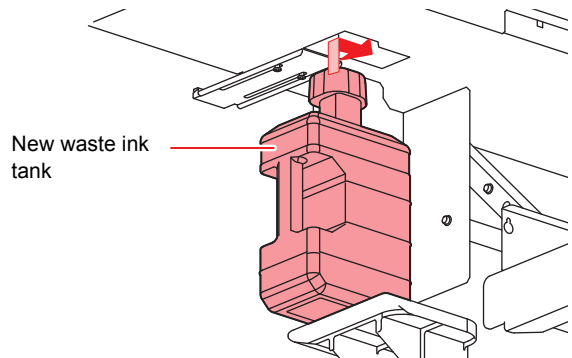

- Waste ink is equivalent to waste oil of industrial waste. Request an industrial waste disposal company for disposal of waste ink.

9

Close the waste ink tank stopper.

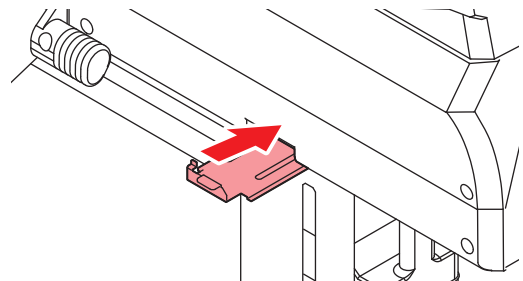

10

Press the **ENTER key.**

- The ink discharging amount that is controlled by the machine is reset and the message is cancelled.

Replacing the waste ink tank before the waste ink tank confirmation message is displayed

if you replace the waste ink tank before the waste ink tank confirmation message is displayed (before the 2L tank is 80% (1.6L) full), set the waste ink information to 0% in the Information menu.

1 Perform steps 6 through 9 in "Replace the waste ink tank with another" (P.5-16) to empty the waste ink tank.

2 Press the **FUNC1** (MENU) \Rightarrow ∇ **ENTER** key in LOCAL.
• MAINTENANCE MENU will be displayed.

3 Press ∇ 4 times, and then press the **ENTER** key.
• "INK TANK EXCHANGE" will be selected.

4 Waste ink tank information is displayed.

5 Press the **FUNC2** (v) .
• The reset screen for the waste ink tank amount will be displayed.

6 Press the **ENTER** key.
• The waste ink tank amount that is managed in this machine will be reset.

Replacing the Cutter Blade

The media cutter blade is consumable. When the cutter blade gets dull, replace it with a new one (SPA-0107).



- The blade is sharp. Be careful not to hurt yourself or anyone else.
- Store the cutter blade in a place that is out of the reach of children. In addition, dispose of used cutter blades according to regional laws and regulations.



- When replacing the cutter blade, it is recommended to place a sheet of paper under the cutter blade. This will help pick up the cutter blade if it drops.

1 Press the **FUNC1** (MENU) \Rightarrow **FUNC3** (>>) \Rightarrow **ENTER** key in LOCAL.
• CUTTING MENU will be displayed.

2 Press ∇ 4 times, and then press the **ENTER** key.
• "TOOL REPLACE" will be selected.



3 Press the **ENTER** key.
• The cutter unit moves to the left end of the machine.

4

Replace the cutter unit by the carriage.

- Now the cutter unit can be moved manually. Move the cutter unit to the position where you can assure easy access, and then replace the blade edge.

- (1) Loosen the screw of the cutter unit.
- (2) Remove the cutter unit.
- (3) Mount a new cutter unit.
- (4) Fasten the screw of the cutter unit to secure the cutter unit.

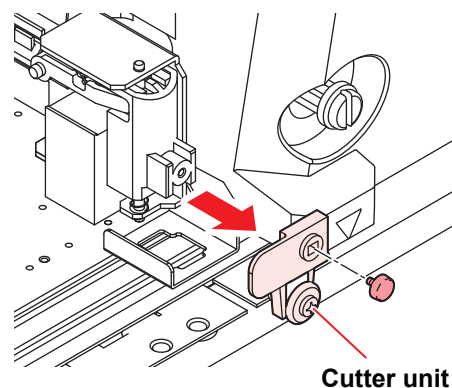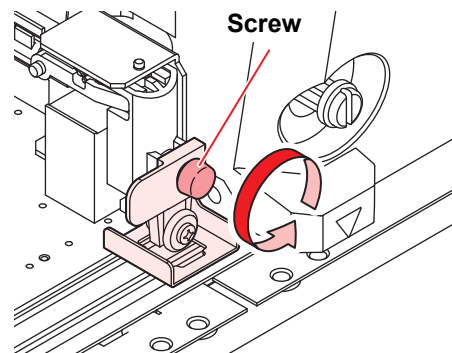

Cutter unit

5

When replacement is finished, press the **ENTER** key.

- The screen returns to LOCAL.

Replacing and Adjusting the Cutter Blade



- The cutter blade is sharp. Keep your fingers away from the cutter.
- Do not shake or swing the cutter holder; otherwise, the cutter blade may come off, which is dangerous.
- Keep the cutter out of reach of children. Dispose of the used cutter blade in compliance with the applicable regulations.


Replacing the cutter

If the cutter is chipped or blunt, replace it with a new one. (Accessory parts number: SPA-0030)

New cutter (low-pressure blade set for PVC sheets: Model SPB-0030) are available from your distributor or MIMAKI's sales office.

Name of product	Product No.	Specific ations	Remarks
Decentering blade for vinyl sheet	SPB-0001	Three blades	
Decentering blade for small letters	SPB-0003	Three blades	
Decentering blade for rubber sheet	SPB-0005	Three blades	
Decentering blade for reflecting sheet	SPB-0006	Two blades	
Decentering blade for fluorescent sheet	SPB-0007	Three blades	
Replacing the cutter other than supplied one	SPB-0030	Three blades	supplied one
Decentering blade for thick rubber sheet	SPB-0084	Three blades	

- 1 Remove the cap located at the edge by rotating it.

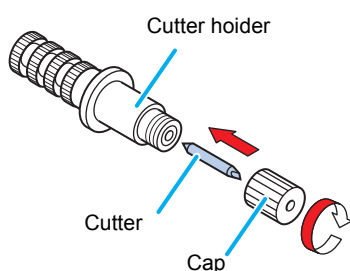


- 2 Replace the cutter with a new one using tweezers or the like.

Adjusting the Cutter Blade

After adjusting the blade edge, set the cut condition and perform test cut to check whether cutting is performed well.


- 1 Turn the adjusting knob to adjust the protruding amount of the cutter.

- arrow to protrude the cutter blade.
(0.5 mm per revolution)

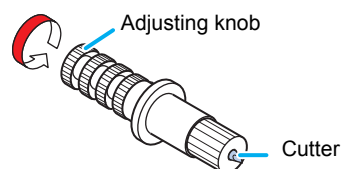


Replacing the cutter other than supplied one


- 1 Loosen the lock nut, and pull the adjusting knob out of the holder.

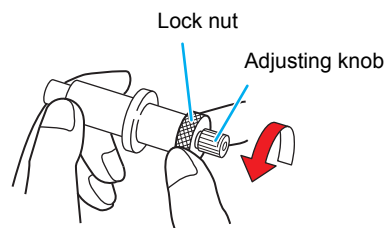

- 2 Insert the cutter into the adjusting knob using tweezers.

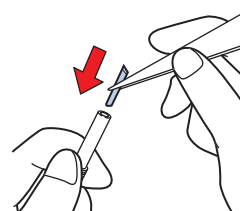


- 3 Tighten the lock nut.

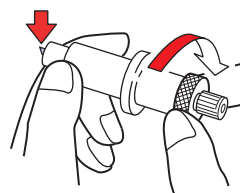


Adjusting blade edge of cutter other than supplied one


1 Loosen the lock nut.

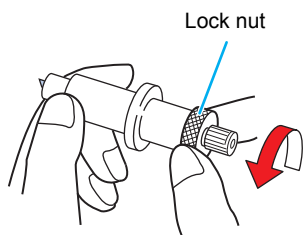

2 Turn the adjusting knob to adjust the protruding amount of the cutter blade.

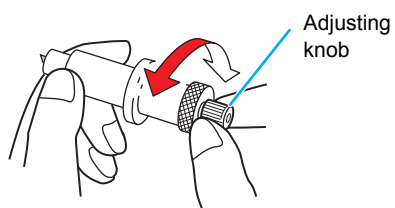

3 Tighten the lock nut so that the adjusting knob will not turn.

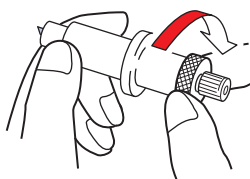

- The blade adjuster (Product No.: OPT-S1005) will facilitate the adjustment of the protruding amount of the blade.

Chapter 6

Troubleshooting



This chapter

describes the corrective measures to be taken for a phenomenon suspected to be trouble and the procedures to clear the error number displayed on the LCD.

Troubleshooting	6-2
Power does not turn on	6-2
The machine does not start printing	6-2
Media get jammed / media is soiled	6-2
The heater's temperature will not rise to the set level	6-3
Image quality is poor	6-3
Nozzle is clogged	6-3
Ink cartridge warning appears	6-3
Warning / Error Messages	6-5
Warning messages	6-5
Error messages	6-8


Troubleshooting

Take appropriate actions as described below before taking the trouble as a failure.

If still the problem is not solved after troubleshooting, contact your dealer or an office of MIMAKI.

Power does not turn on


In most cases, this is due to improper connection of the power cable for the machine or computer. Check that the power cable is connected properly.

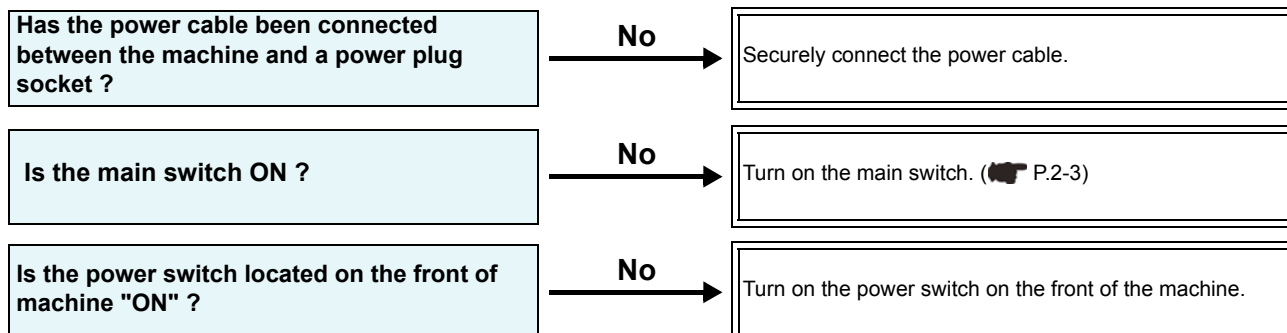

The machine does not start printing


This occurs when the data is not being transmitted to the machine properly.

It can also occur when the printing function does not work properly or the media is not set correctly.

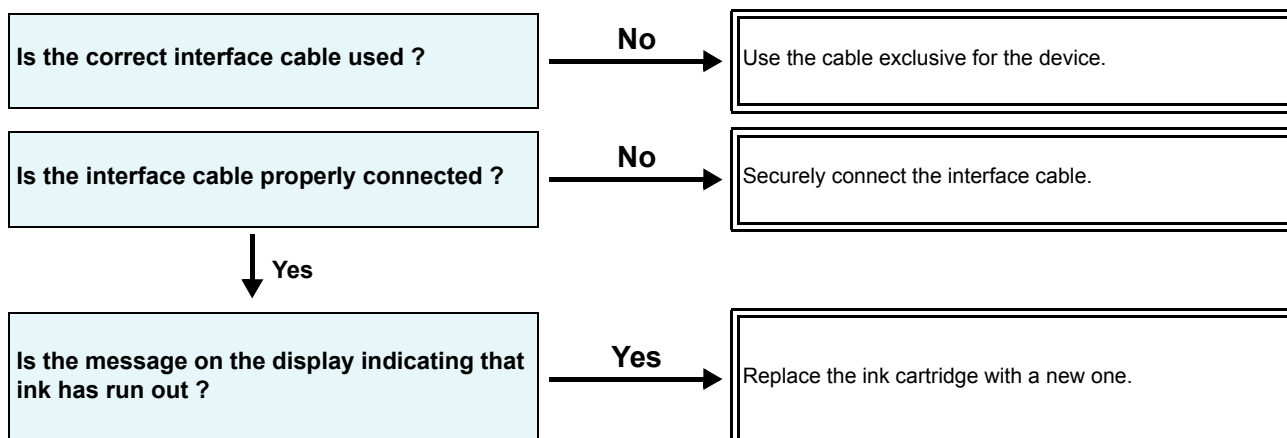

Media get jammed / media is soiled

Media jamming or stained media is considered to be due to the use of an unsuitable media or improper setting of media.

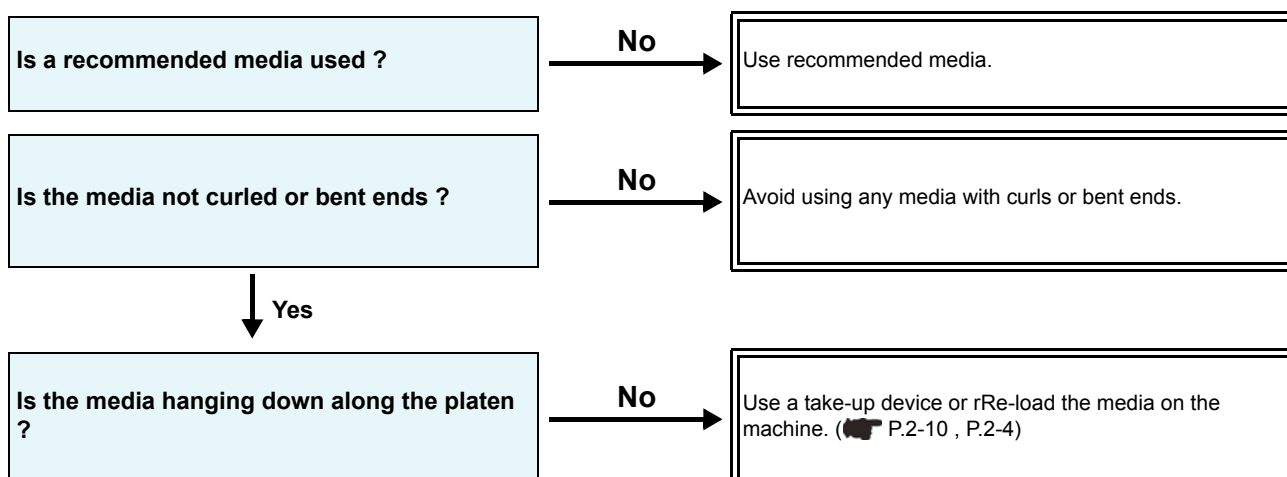

The heater's temperature will not rise to the set level

Check the basic operation.

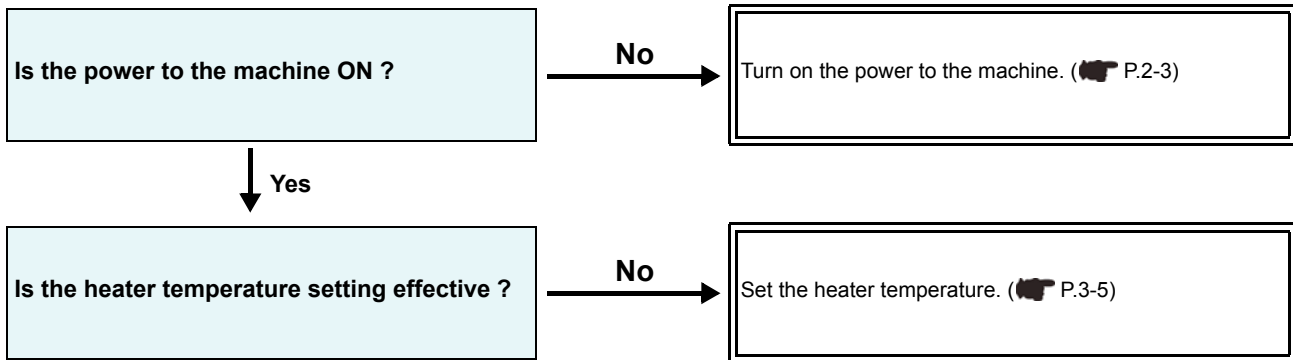


Image quality is poor

This section describes the corrective actions to be taken in case the image quality is not satisfactory.

Take remedy for particular problems with image quality. If the remedy does not work, contact your dealer or an office of MIMAKI.

Phenomenon	Measures
White lines / blur / dark stripes (in the direction of travel of the heads)	(1) Execute the head cleaning. (P.2-16) (2) Perform maintenance of the inside of the station. (P.5-6) (3) Execute the [FEED COMP.] function. (P.3-4) (4) If any pieces of paper or dust is attached on the path of the heads such as media press, remove it.
Characters are double- or triple-printed in the media feed direction	(1) Execute the [FEED COMP.] function. (P.3-4)
Disagreement in print positions between outward trip and homeward trip	(1) Execute the [DROP POSITION] function. (P.3-4)
Ink drops falling on media during printing	(1) Execute the wiper cleaning. (P.5-6) (2) Execute the ink cap cleaning. (P.5-6) (3) Clean around the head. (P.5-10) (4) Execute the head cleaning [NORMAL]. (P.2-16) (5) Set the INTERVAL WIPING operation. (P.3-7)

Nozzle is clogged

When nozzle clogging is not dissolved even after the head cleaning referring to P.2-16, make sure the following operations.

- Wash the head nozzle by the operations of P.5-7.
- Wash the head nozzle surface by the operations of P.5-10.
- Recovery the nozzle by the operations of P.5-11.

Ink cartridge warning appears

If an ink cartridge trouble is detected, the cartridge LED "red" is lit, and a warning message appears.

None of printing, cleaning and all the other operations that use ink is available.

In this case, replace the ink cartridge in question immediately.

Displaying the description of ink cartridge trouble

The contents of cartridge error are confirmable by the following operations.



- Once cartridge trouble is displayed, do not leave the ink cartridge without replacing it for a long time; otherwise, the machine will lose the nozzle clogging prevention function.
If nozzles are clogged, the machine must be repaired by MIMAKI's service engineer.

1

Press the **ENTER** key in LOCAL.

2

Press the **ENTER** key.

Warning / Error Messages

If some trouble occurs, the buzzer sounds and the display shows a corresponding error message.
Take an appropriate remedy for the displayed error.

Warning messages

Errors when performing operations

Message	Cause	Solution
INVALID OPERATION :MEDIA UNDETECT	Operation cannot be performed because no media is detected.	• Execute after media is detected.
INVALID OPERATION :MOTOR POWER OFF	The motor is OFF after the cover was opened etc.	• Return to LOCAL and execute the operation after completion of initialization.
INVALID OPERATION INK ERROR	An ink error occurred.	• Execute the operation after replacing with a new ink cartridge.
INVALID OPERATION COVER OPEN	The front cover or the maintenance cover is opened.	• Execute the operation after closing the cover.
INVALID OPERATION DATA REMAIN	Data was received.	• Execute the operation after executing data clear. (P.2-18)

Message displayed in LOCAL

Message	Cause	Solution
Can't print/cartridge	Multiple ink errors (unusable ink) have occurred, making it impossible to feed ink (printing and cleaning, etc.).	Replace with a new ink cartridge.
Check waste ink	The waste ink tank count has exceeded the prescribed amount.	Check the amount of waste ink in the waste ink tank. Conduct maintenance and waste ink tank replacement, and reset the amount of waste ink.
Replace WIPER	The used count of wiper has exceeded the prescribed number.	Execute maintenance, station maintenance and wiper exchange and replace the wiper.
HEATER Temp. error Powered off	Displayed when power is forcibly turned OFF and restarted after occurrence of "ERROR 710 heater temp error".	If the same error message appears again, contact our service desk or your local distributor to call for service.
NO MEDIA	No media is set. Or, the sensor is faulty.	Set the media. If the same error message still appears after setting the media, contact our service desk or your local distributor to call for service.
DATA REMAIN	Print data is received in LOCAL.	Shift to REMOTE and execute printing. Or, execute data clear and cancel printing.
MACHINE TEMP./H **°C	Stable printing cannot be done because temperature in the installed environment (printer) is too high.	Adjust the ambient temperature to within the specified scope (20°C to 35°C).
MACHINE TEMP./L **°C	Stable printing cannot be done because temperature in the installed environment (printer) is too low.	

Message	Cause	Solution
Shake WHITE INK - cartridges	A warning to prevent settling of the white ink cartridge is regularly displayed.	Shake the white ink cartridge to prevent the ink components from settling.
Replace the spout rubber - of ECO-CARTRIDGES	It is time to replace spout rubber of the eco-case (MBIS).	• Ink may leak from the eco-case. Replace spout rubber.
Wash liquid cartridge none	The maintenance washing liquid cartridge is not set. Wiper washing and pump tube washing cannot be executed. (Auto maintenance operation)	Set the maintenance washing liquid cartridge.
Wash liquid end	There is no remaining maintenance washing liquid. Wiper washing and pump tube washing cannot be executed. (Auto maintenance operation)	Replace with a new washing liquid cartridge.
NCU SENSOR LEVEL LOW	The NCU sensor sensitivity is falling.	Replacement of the NCU is recommended. Contact our service desk or your local distributor to call for service.
Nozzle Missing Print Stopped	Because the nozzle check found nozzles missing, printing was stopped.	Perform head cleaning (P.2-16) and deal with the nozzles clogging (P.6-3).
NCU FLUSH POS Nozzle check OFF	Because an NCU-related error occurred during nozzle check, printing was stopped and the nozzle check function was turned OFF.	• Take steps according to the explanation for "ERROR 655 / NCU FLUSH POS".
NCU CENTER POS Nozzle check OFF		• Take steps according to the explanation for "ERROR 654 / NCU CENTER POS".
NCU SN ADJUST Nozzle check OFF		• Take steps according to the explanation for "ERROR 656 / NCU SN ADJUST".
NCU NZK CHK (HW) Nozzle check OFF		• Take steps according to the explanation for "ERROR 652 / NCU NZK CHK (HW)".
NCU NZK CHK (MARK) Nozzle check OFF		• Take steps according to the explanation for "ERROR 653 / NCU NZK CHK (MARK)".
NCU CONNECT	The NCU unit is not connected. The nozzle check function cannot be used.	• Turn the main power OFF, wait a while, and then turn it ON again. If the same error message appears, contact our service desk or your local distributor to call for service.
REPLACE NCU	The NCU sensor sensitivity is too low to correctly judge nozzle missing. The nozzle check function cannot be used.	• NCU replacement is necessary. • Contact our service desk or your local distributor to call for service.
REPLACE NCU INK PAD	The NCU ink pad is full.	• It is necessary to replace the NCU ink pad. • Contact our service desk or your local distributor to call for service.
NCU ERROR Nozzle check OFF	Because an NCU-related error occurred during nozzle check, printing was stopped and the nozzle check function was turned OFF.	• Contact our service desk or your local distributor to call for service.

Ink Error

Ink error is displayed also in the local guidance. (P.3-21)

Message	Cause	Solution
WRONG INK IC	The IC chip of the ink cartridge cannot be read normally.	<ul style="list-style-type: none"> Remove the cartridge generating the warning once and install it again. If the same warning message still appears, contact your local distributor to call for service.
INK TYPE	The ink of the ink cartridge is different in type from the ink currently supplied.	<ul style="list-style-type: none"> Check the ink type of the cartridge generating the warning.
INK COLOR	The ink of the ink cartridge is different in color from the ink currently supplied.	<ul style="list-style-type: none"> Check the ink color of the cartridge generating the warning.
WRONG CARTRIDGE	An error occurred in the IC chip information of the ink cartridge.	<ul style="list-style-type: none"> Check the cartridge generating the warning. Make sure there is no nozzle clogging.
NO CARTRIDGE	An ink cartridge has not been installed in the slot.	<ul style="list-style-type: none"> Install an appropriate cartridge in the slot generating the warning.
INK END	The ink of the ink cartridge has been completely used up.	<ul style="list-style-type: none"> Replace the cartridge generating the warning with a new one.
INK NEAR END	There is only a little bit of ink left in the ink cartridge.	<ul style="list-style-type: none"> The ink will soon be used up. Be careful.
Expiration	The ink of the ink cartridge has been nearly used up.	<ul style="list-style-type: none"> Replace the cartridge generating the warning with a new one. However, it can be used until the month after next.
Expiration:1MONTH	The specified expiration date of an ink cartridge has passed.	<ul style="list-style-type: none"> The expiration date has passed. However, you can use it until the end of the following month.
Expiration:2MONTH	The expiration date of an ink cartridge has passed (one month has passed after the specified expiration date).	<ul style="list-style-type: none"> One month has passed after the expiration date.
ERROR 63c INK REMAIN ZERO	The expiration date of an ink cartridge has passed (two months have passed after the specified expiration date).	<ul style="list-style-type: none"> Replace the cartridge with a new one.

Error messages

When an error message is displayed, eliminate the error according to the chart below.

If the same error message appears again, contact your dealer or an office of MIMAKI to call for service.

Message	Cause	Solution
ERROR 122 CHECK:SDRAM	SDRAM is defective.	<ul style="list-style-type: none">• Turn off the power to the machine and turn it on after a while.• If the same error message appears again, contact your local distributor to call for service.
ERROR 128 HDC FIFO OVER	Head control circuit board is defective.	
ERROR 128 HDC FIFO UNDER		
ERROR 129 BATTERY EXCHANGE	The battery life end of the internal clock is detected.	<ul style="list-style-type: none">• Contact your local distributor to call for service.
ERROR 130 HD DATA SEQ	Head data transferring sequence error occurred.	<ul style="list-style-type: none">• Turn off the power to the machine and turn it on after a while.• If the same error message appears again, contact your local distributor to call for service.
ERROR 146 E-LOG SEQ	Sequential number abnormality of the event log occurred.	
ERROR 151 Main PCB V1R2	An error occurred in the main PCB .	
ERROR 152 Main PCB V2R5		
ERROR 153 Main PCB V3R3		
ERROR 154 Main PCB V05		
ERROR 157 Main PCB VTT		
ERROR 16e Main PCB V3R3B		
ERROR 15f HEAD DRIVE HOT	COM driver becomes the high temperature.	
ERROR 171 NEW HEAD CONNECT	New Print Head was recognized.	
ERROR 186 HDC OVERFLOW	An error is detected on the waveform printed on.	
ERROR 186 HDC UNDERFLOW		
ERROR 187 HDC SLEW RATE		
ERROR 188 HDC MEMORY		
ERROR 18a Main PCB V_CORE	An error occurred in the main PCB .	

Message	Cause	Solution
ERROR 18c Main PCB V12	An error occurred in the main PCB .	<ul style="list-style-type: none">• Turn off the power to the machine and turn it on after a while.• If the same error message appears again, contact your local distributor to call for service.
ERROR 190 Main PCB V42-1		
ERROR 192 COMIO PCB V1R2	An error occurred in the COM16/32IO PCB .	
ERROR 193 COMIO PCB V2R5		
ERROR 194 COMIO PCB V3R3		
ERROR 195 COMIO PCB V24		
ERROR 1a0 SLDR2H PCB V1R2	An error occurred in the SLIDER2H PCB .	
ERROR 1a6 SLDR2H PCB V2R5		
ERROR 1a7 SLDR2H PCB V3R3		
ERROR 1a8 SLDR2H PCB V5		
ERROR 1a9 SLDR2H PCB V42		
ERROR 201 COMMAND ERROR	The machine received some data other than print data. Or, an error occurred in the transmitted print data.	<ul style="list-style-type: none">• Securely connect the interface cable in position.• Use an interface cable conforming to the specifications.
ERROR 202 PARAMETER ERROR	An error occurred in the transmitted print data.	
ERROR 304 USB INIT ERR	An error occurred in the communication of USB.	<ul style="list-style-type: none">• Turn off the main power to the machine and turn it on after a while.• If the same error message appears again, contact your local distributor to call for service.
ERROR 305 USB TIME OUT		
ERROR 401 MOTOR X	An excessive load was applied to the X motor.	
ERROR 402 MOTOR Y	An excessive load was applied to the Y motor.	
ERROR 403 X CURRENT	An error due to an excessive current of the X motor was detected.	<ul style="list-style-type: none">• Turn off the main power to the machine and turn it on after a while.• If the same error message appears again, contact your local distributor to call for service.
ERROR 404 Y CURRENT	An error due to an excessive current of the Y motor was detected.	

Message	Cause	Solution
ERROR 423 TAKE-UP TENSION-BAR	Error in the option tension bar. <ul style="list-style-type: none">• The tension bar origin could not be found.• No change could be seen in the tension bar angle.	<ul style="list-style-type: none">• Check the set state of the media.• Make sure that the media can be wound using the manual SW. Also, make sure that the tension bar rises. If it does not rise, adjust the counterweight while referring to the user manual attached to the AMF kit.
ERROR 425 Take-UP WRONG	A problem has occurred in the option tension bar. <ul style="list-style-type: none">• The tension bar control position has deviated from the lowest point for a certain period.	
ERROR 429 Take-UP LimitDETECT	LIMIT position of the tension bar has been detected. <ul style="list-style-type: none">• The tension bar control position has deviated from the highest point for a certain period.	
ERROR 44f Take-UP Roll Sns Err	Roller sensor abnormality <ul style="list-style-type: none">• The roller sensor cannot be correctly read.	<ul style="list-style-type: none">• Confirm that the winding unit of machine setting and tension bar setting are ON.• Check the set state of the media.• Confirm that the winding unit operates using the manual SW.
ERROR 505 MEDIA JAM	The media jam occurs.	<ul style="list-style-type: none">• Remove the media and reset it.
ERROR 509 HDC POSCNT	An error occurred in the control position.	<ul style="list-style-type: none">• Turn off the main power to the machine and turn it on after a while.• If the same error message appears again, contact your local distributor to call for service.
ERROR 50a Y ORIGIN	Y-origin could not be detected.	
ERROR 50f L-SCALE BLACK	Abnormal linear scale.	
ERROR 529 LEnc.Count HPC[]		
ERROR 52a LEnc.Count HDC[]		
ERROR 52c MEDIA WIDTH SENSOR	The media width could not be correctly read.	<ul style="list-style-type: none">• Check the media set position. (P.2-4)• Clean the media sensor. (P.5-3)• Turn the main power OFF, wait a while, and then turn it ON again.
ERROR 516 MEDIA SET POSITION R	The media is set outside the proper area.	<ul style="list-style-type: none">• Check the media set position. (P.2-9)
ERROR 528 PUMP MOTOR SENSOR	Pump sensor detection error	<ul style="list-style-type: none">• Turn the main power OFF, wait a while, and then turn it ON again.If the same error message appears, contact our service desk or your local distributor to call for service.
ERROR 602 CARTRIDGE END	Ink end (cannot be used, can only be used when cleaning with the 4-color ink set)	<ul style="list-style-type: none">• Replace with new ink.
ERROR 608 WRONG INK IC	The ink cartridge IC chip cannot be correctly read.	<ul style="list-style-type: none">• Make sure that the cartridge is correctly inserted.• Reinsert the cartridge.• Turn the main power OFF, wait a while, and then turn it ON again.If the same error message appears, contact our service desk or your local distributor to call for service.

Message	Cause	Solution
ERROR 627 RE-INSERT CARTRIDGE	There is a slot in which the cartridge has not been inserted more than a certain time.	<ul style="list-style-type: none">• Set a cartridge.
ERROR 628 WRONG INK CARTRIDGE	A problem has occurred in the ink cartridge IC chip information. The used count has exceeded the prescribed value.	<ul style="list-style-type: none">• Make sure there is no nozzle clogging (especially for the white ink).
ERROR 63c INK REMAIN ZERO	Remaining ink is 0 in the cartridge (ink end/ only when the 4-color ink set is used).	<ul style="list-style-type: none">• Replace with new ink.
ERROR 64C NCU ERROR	The nozzle check has been suspended due to some problem.	<ul style="list-style-type: none">• Turn the main power OFF, wait a while, and then turn it ON again. If the same error message appears, contact our service desk or your local distributor to call for service.
ERROR 650 NCU CONECT	The NCU unit is not connected.	
ERROR 651 REPLACE NCU	The NCU sensor sensitivity is too low to correctly judge nozzle missing. The nozzle check function cannot be used.	
ERROR 652 NCU NZK CHK (HW)	The NCU cannot correctly recognize the ink discharge, because there are frequent nozzle missing and ink droplet misalignment.	<ul style="list-style-type: none">• Check the state of the nozzles, and if there are frequent nozzle missing and ink droplet misalignment, conduct cleaning to restore.
ERROR 653 NCU NZK CHK (MARK)		
ERROR 654 NCU CENTER POS	Adjustment of the discharge position to the NCU has failed.	
ERROR 655 NCU FLUSH POS		
ERROR 656 NCU SN ADJUST	Sensor sensitivity adjustment has failed.	<ul style="list-style-type: none">• Check the state of the nozzles, and if there are frequent nozzle missing and ink droplet misalignment, conduct cleaning to restore.• If the same error message still appears after restoring the state of the nozzles, contact our service desk or your local distributor to call for service.
ERROR 657 REPLACE NCU INK PAD	The NCU ink pat is full.	<ul style="list-style-type: none">• Contact our service desk or your local distributor to call for service.
ERROR 6558 NCU SENSOR LV LOW	The NCU sensor sensitivity is falling.	<ul style="list-style-type: none">• Replacement of the NCU is recommended. Contact our service desk or your local distributor to call for service.
ERROR 702 THERMISTOR CONNECT	The thermistor connection of a heater is defective.	<ul style="list-style-type: none">• Check the thermistor connection of the drying heater.• Turn off the main power to the machine and turn it on after a while.• If the same error message appears again, contact your local distributor to call for service.
ERROR 710 HEATER TEMP ERROR	The temperature abnormality of the heater has been detected. When this error occurred and if the temperature abnormality cannot be resolved, the power supply of the machine is forcibly turned off.	<ul style="list-style-type: none">• Turn off the main power to the machine and turn it on after a while.• If the same error message appears again, contact your local distributor to call for service.
ERROR 901 INVALID OPERATION	Due to a certain error, the function cannot be performed.	<ul style="list-style-type: none">• Return to the local screen, check the error status and take a countermeasure.

Message	Cause	Solution
ERROR 902 DATA REMAIN	There remains received data that has not yet been printed.	<ul style="list-style-type: none"> Execute the data clear function. (P.2-26)
ERROR 90d NO HEAD SELECT	An error occurred in the mounted heads.	<ul style="list-style-type: none"> Turn off the main power to the machine and turn it on after a while. If the same error message appears again, contact your local distributor to call for service.
ERROR 90f PRINT AREA SHORT	The media width or the media length required for printing is not enough.	<ul style="list-style-type: none"> Change the media to the one with enough width or length. When the media width narrows because the origin moved, slide the origin to the right to widen the effective media width.
ERROR 04 PARAM ROM	An error occurred in the main PCB FROM.	<ul style="list-style-type: none"> Turn off the main power to the machine and turn it on after a while. If the same error message appears again, contact your local distributor to call for service.

SYSTEM HALT

Message	Solution
SYSTEM HALT (*) 000 : MESSAGE	<ul style="list-style-type: none"> Turn off the main power to the machine and turn it on after a while. If the same error message appears again, check the number and contact your local distributor to call for service. ("000" is the error No.)
SYSTEM HALT (*) 406 : WIPER ORG	<ul style="list-style-type: none"> Perform cleaning around the wiper. Turn off the main power to the machine and turn it on after a while. If the same error message appears again, check the number and contact your local distributor to call for service.

Chapter 7

Appendix



This chapter

contains the lists of the specifications and functions of this machine.

Specifications	7-2
Printer Section Specifications	7-2
Cutter Section Specifications	7-2
Common Specifications	7-3
Ink specifications	7-4
Setting orders depending on ink type	7-5
Sheet for inquiry	7-6

Specifications

Printer Section Specifications

Item		CJV300-130	CJV300-160
Print head	Method	Drop-on-demand piezoelectric print heads	
	Specification	2 head staggered	
Printing mode (scan x feed)		360×360dpi/ 540×360dpi/ 540×720dpi/ 720×1080dpi/ 720×1440dpi/ 1440×1440dpi	
Usable inks		Sublimation dye ink (Sb):6 colors (Y,M,BI,K or Dk,LBI,Lm) Solvent ink (SS):10 colors (Y,M,C,K, Lc,Lm, Or, Lk, Si, W)	
Ink supply		Supplying from ink cartridges through tubes.Ink cartridge replacement type : Supplying by Toggle switch over with 2 cartridges/color (4-colors ink set)	
Capacity of ink cartridge		M, C, Y, K, Lm, Lc, Or, Lk : 440cc cartridge W, Si : 220cc cartridge	
Usable media		label stock (paper-based) / PVC sheet (including laminated; thickness no more than 0.25 mm) / Reflective sheet (excluding high-luminance reflective sheet) / Heat transfer rubber sheet	
Margin	Leaf media	Left end and right end : 15 mm (Default) Front :120 mm Rear : 150 mm	
	Roll media	Left end and right end : 15 mm (Default) Front :120 mm Rear : 150 mm	
Head height adjustment		Select for manual 3-stage (2.0/2.5/3.0) + 1 mm or + 2 mm at installation. Base height can be raised.	
Waste ink tank		Bottle type (2,000 cc)	
Interface		USB 2.0 (Ethernet 10 BASE/ 100 BASE E-mail function)	
Command		MRL- IV	

Cutter Section Specifications

Item		Specifications
Maximum speed ^{*1}		30cm/s
Maximum acceleration		1G
Cutting pressure		10 to 450g
Usable tools		Eccentric cutter/ water-based ballpoint pen/ oil-based ballpoint pen/ Ballpoint pen for handwriting (sold on the market) ^{*2}
Number of times the cutter responds to a medium		10 times/sec
Usable media		Polyvinyl chloride sheet (Thickness of 0.25mm or less with laminate ^{*3})/ fluorescent sheet ^{*4} / reflecting sheet ^{*4} (excluding high-intensity reflecting sheets)/ Label card (paper-based)/ Heat transfer rubber sheet
Margin	Leaf media	Left and right: Inside the pinch roller detection position (default value) Front :120 mm Rear : 150 mm
	Roll media	Left and right: Inside the pinch roller detection position (default value) Front :120 mm Rear : 150 mm
Repetition accuracy ^{*5}		±0.2 mm or the ±0.1% of the specified distance, whichever is larger.
Reception buffer memory		256 MB
Command		MGL-II c2
Program step		25μm

^{*1}. The maximum speed may be limited, depending on the size of a used medium. In addition, the cutting section does not operate with both speed and acceleration being at the maximum.

^{*2}. Use one with a diameter of 8 to 9 Φ whose clamped part has no protrusion or taper. In addition, because the position of the pen point changes, depending on the types of pens, no good image quality can be ensured.

^{*3}. This conforms with our specified sheet.

^{*4}. When a blade dedicated for fluorescent sheets (SPB-0007) or a blade dedicated for reflecting sheets (SPB-0006) is used.

^{*5}. For repetition accuracy, see the lower part of this page.

Common Specifications

Item		CJV300-130	CJV300-160
Max. printing/ cutting width		1361mm	1610mm
Roll Media size	Maximum	1371mm	1620mm
	Minimum	210mm	
	Thickness	1.0mm or less	1.0mm or less
	Roll outside diameter ^{*1}	Paper media : Φ 250mm or less Other media : Φ 210mm or less	
	Roll weight ^{*1, *2}	40kg or less	
	Roll inside diameter	2 or 3 inches	
	Printing surface	Side facing outward	
	Roll end treatment	The roll end is gently fixed to the core with weak-adhesive tape or weak glue for easy removal.	
Leaf media size	Maximum	1371mm	1620mm
	Minimum	210mm	
Distance accuracy	Absolute accuracy	Whichever the larger one of ± 0.3 mm or ± 0.3 % of the designated	
	Reproducibility	Whichever the larger one of ± 0.2 mm or ± 0.1 % of the designated	
Perpendicularity		± 0.5 mm / 1000 mm	
Media skew		5 mm or less / 10 m	
Cutting of media		Cutting of Y direction by the head cutter. Cutting accuracy (steps) : 0.5 mm or less.	
Media delivery		Take-up device supplied as a standard accessory (switching possible between face in and face out).	
Interface		USB 2.0 (Ethernet 10 BASE/ 100 BASE E-mail function)	
Noise	during standby	Less than 58 dB (A) (FAST-A, Front & Rear & Left & Right 1 m)	
	during continuous printing	Less than 65 dB (A)	
	during discontinuous printing	Less than 70 dB (A)	
Safety Standard		VCCI-Class A, FCC-Class A, UL 60950, CE Marking (EMC, Low Voltage Directive, Machinery Directive, RoHS Directive), CB Report, RoHS	
Power		Single-phase (AC100 - 120V 1440W or less / 220 - 240V 1920W or less) $\times 2 \pm 10\%$ 50/60Hz ± 1 Hz	
Power consumption		1440W $\times 2$ (AC 100 - 120V) or less	
Recommended Environment	Available temp.	20 °C to 30 °C	
	Humidity	35 to 65% Rh (No condensation)	
	Guaranteed temp.	20 °C to 25 °C	
	Temperature change	± 10 °C / h or less	
	Dust	Equivalent to normal office level	
	Highest operation height	2000 m	
Weight		170 kg	178 kg
Outside dimensions	Width	2525mm	2775mm
	Depth	700mm	
	Height	1392 mm	

*1. It is outside diameter and weight after take-up media.

*2. Without deflection of the roll when it is retained at both ends.

Ink specifications

Item		Sublimation dye ink	Solvent ink
Supply		Dedicated sublimation dye ink cartridge	
Color		Black ink cartridge Blue ink cartridge Magenta ink cartridge Yellow ink cartridge Light blue ink cartridge Light magenta ink cartridge Deep black ink cartridge	Black ink cartridge Cyan ink cartridge Magenta ink cartridge Yellow ink cartridge Light cyan ink cartridge Light magenta ink cartridge Light black ink cartridge Orange ink cartridge Silver ink cartridge White ink cartridge
Ink capacity		440cc per cartridge	220cc / 440cc per cartridge
Shelf life		The period is printed on the ink cartridge. Within three months after opening the package even in the available period.	
Storage temperature	Storage	10 to 35°C (Average daily temperature) Be sure to keep a vessel in the airtight condition. Be sure to keep a vessel in a dry, well-ventilated, cool and dark location.	
	Transportation	0 to 40°C Avoid the condition lower than -0 °C and higher than 40 °C.	




- Do not disassemble ink cartridges and do not refill them with ink.
- Ink could freeze if kept in a cold place for an extended period.
- When aqueous ink is used, if the ink freezes, the quality is changed and the ink becomes unusable. Store the ink in an environment that will not freeze the ink.

Setting orders depending on ink type



- Set the ink cartridge according to the cartridge label under the ink station.

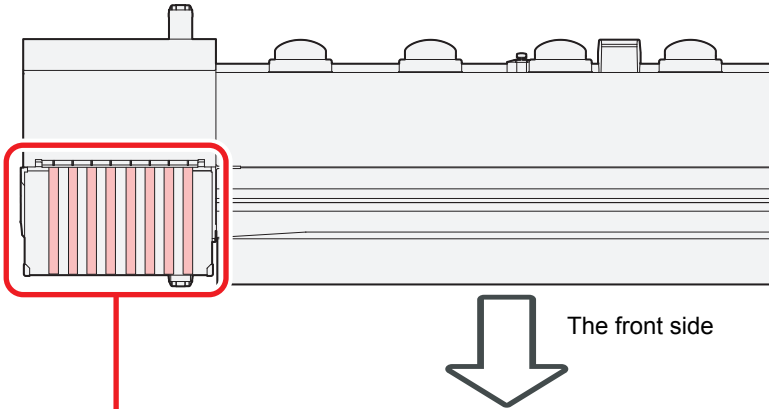

4 colors model	Sublimation dye ink	M	M	Bl	Bl	Y	Y	K or Dk	K or Dk
	Solvent ink	M	M	C	C	Y	Y	K	K
6 colors model	Sublimation dye ink	M	M	Bl	Bl	Y	Lm	K or Dk	LBl
6 + special colors model	Solvent ink	M	Si or W	C	W	Y	Lm	K	Lc
8 colors model	Solvent ink	M	Or	C	Lk	Y	Lm	K	Lc

Sheet for inquiry

Use this sheet for troubles and abnormal functions of the machine.

Fill in the following necessary items, and then fax the sheet to our sales office.

Company name	
Person in charge	
Telephone number	
machine model	
Operating OS	
Machine information *1	
Error message	
Contents of inquiry	

*1. Refer to "Confirming Machine information" of "Convenient using" then fill in necessary information. (P.3-20)

CJV300-130/160 Operation Manual

Sep, 2014

MIMAKI ENGINEERING CO.,LTD.

2182-3 Shigeno-otsu, Tomi-shi, Nagano 389-0512 JAPAN

D202746-10-03092014

